

Contact Seagate WORLD WIDE

If you have any comments or questions regarding a Seagate products.

Country	Customer Care Center ☎	Web Site
U.S.A	1-800-SEAGATE (7324283)	www.seagate.com
GERMANY	00-800-4SEAGATE (47324283)	www.seagate.com/www/de-de
U.K	00-800-4SEAGATE (47324283)	www.seagate.com/www/en-gb
UKRAINE	1-405-324-4714	www.seagate.com/www/ru-ru
AUSTRALIA	1-800-14-7201	www.seagate.com/www/en-au

The Names and Content of Toxic and Hazardous Substances or Elements

Parts	Toxic and hazardous substances or elements					
	Pb	Hg	Cd	Cr ⁶⁺	PBB	PBDE
Printed Circuit Assemblies	X	O	O	O	O	O
Head Disk Assemblies	X	O	O	O	O	O

O : Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.

X : Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard.

EEE Yönetmeliğine Uygundur
This EEE is compliant with RoHS

Authorized Distributor Information in Turkey

Authorized Distributor in Turkey	ARENIA BİLGİSAYAR AŞ
Address, City :	İstanbul/Ornekt Marmarisi, Merkez Mahallesi, Gökçuk, Cadde No:4 34077 Gökçuk / Etiler /İstanbul
Distributor Tel / Fax :	0212 368 66 64 / 0212 310 46 80
Country :	Turkey

Authorized Distributor in Turkey	Datagale Bilgisayar Marmarisi - MERKEZ
Address, City :	Ayazaga Mah. Cendere Yolu No:9 SİLA İSTANBUL
Distributor Tel / Fax :	0212 331 15 00 / 0212 339 15 30
Country :	Turkey

Authorized Distributor in Turkey	Datagale Bilgisayar ANKARA SURE
Address, City :	Çetin Erinc Bulvarı Övdiğler, 4. Cadde, No:4/9 Dikmen / ANKARA
Distributor Tel / Fax :	0312 472 472 20 / 0312 472 82 36
Country :	Turkey

Authorized Distributor in Turkey	Datagale Bilgisayar İZMİR SURE
Address, City :	1370 sok. No:29 35320 Çankaya / İZMİR
Distributor Tel / Fax :	0232 480 32 10 / 0232 489 35 38
Country :	Turkey

Authorized Distributor in Turkey	Penta Bilgisayar Sistemleri Ticaret A.Ş.
Address, City :	Esenkent Mah. Yeni Organize Sanayi Bölgesi 1, Cadde No:34775 Ümraniye - İstanbul
Distributor Tel / Fax :	0216 528 05 00 / 0216 528 05 99
Country :	Turkey

Authorized Distributor in Turkey	ASSIR TR Bilgisayar Ltd. Şti.
Address, City :	Barbaros Mah. Evren Cadde No 56, Kat:1 34746 Yenimahalle - İstanbul
Distributor Tel / Fax :	0216 470 74 40 / 0216 470 74 58
Country :	Turkey

Seagate Technology
10200 S. De Anza Blvd Cupertino, CA 95014
United States of America

* Hybrid Disk Drive products are licensed for use only on devices that deploy the Windows VISTA operating system as the principle operating system. If you or any other party installs an operating system on the computing device that is not Windows Vista, the use of this Hybrid Disk Drive may require an additional license from Microsoft. For further information, please contact Microsoft. *

Seagate Technology
10200 S. De Anza Blvd Cupertino, CA 95014
United States of America

FCC CAUTION : Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



This marking shown on the product, accessories or literature, indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of wastes and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

© Seagate Technology, LLC Printed in Korea, BF68-00237A Rev, 08 T

2.5" HDD INSTALLATION GUIDE

Seagate does NOT guarantee any data on your drive, please always BACK-UP your precious data.

Precautions


- 1MB = 1,000,000 bytes / 1GB = 1,000,000,000 bytes / 1TB = 1,000,000,000,000 bytes.
- Actual accessible capacity may vary from advertised capacity due to formatting and partitioning of the hard drive, as well as due to your computer's operating system.
- Avoid dropping or jarring your disk drive during assembly and during operation. Drives include high precision mechanics, so during installation, do not stack drives on top of each other and do not drop or jar drives. Also, avoid dropping or jarring during operation.
- Do not remove all items, such as Hard drive label, warranty label. Warranty void if any stickers or labels are removed or damaged. Never disassemble hard drives.
- Do not touch the circuit board with hands or tools.
- Protect the HDD from Electrostatic Discharge(ESD). MR Head is very sensitive in Electrostatic. Keep the HDD in their static shielding bag.
- Avoid very hot, very cold or very high humidity environments.
- Drives include sensitive mechanics and lubricants. Please observe the operating and non-operating temperature ranges listed on product datasheets.

When use an external case

- When installed in an external case, avoid dropping or jarring. Dropping or jarring in operation can cause the drive to become inoperable and the data can become un-readable, so please be careful. Avoid moving the drive while it is in operation.
- Check the External case's Grounding. External case's Grounding prevents HDD malfunction from ESD. To keep dose any magnetic substance can be caused Drive data loss damage.

PATA Installation

Configuring your Hard Disk Drive (Master, Slave)

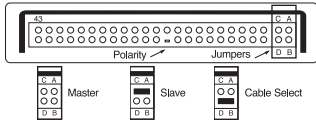

Installation Your Hard Drive

Note :- Turn off the system power !
Cover opening mechanism and the location of the hard disk drive may vary from one computer to another.


- Turn off the computer, unplug the external cables, and open computer cover. Mount the hard disk drive in the designated place in the computer with screws provided with the product.
- Connect 40 pin interface cable and power cable. Make sure that the direction of the cables are correct and matches the shape of the receptacles. (Consult your computer manual)

SATA Installation

Installing the hard disk

Note : SATA 1.5Gb/s Speed Limit Jumper setting Only for SATA3.0Gb/s products. In some rare cases SATA 1.5Gb/s hosts can not establish SATA interface connection with SATA3.0Gb/s devices due to interface protocol issues. In this case the jumper may be installed as shown on the figure below to force the device to negotiate for SATA 1.5Gb/s speed.

Installing the hard disk

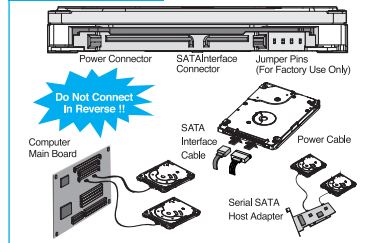

- Turn off the power of your computer.
- Unplug the external power cables to the computer.
- Open the cover of your Computer. Cover opening mechanism and the location of the hard disk drive may vary from one computer to another. (Consult your computer manual)
- Insert the HDD into an available 3.5" bay in your computer and secure it to computer and secure it to the chassis using the provided screws.
- Connect Cables.

- Attach the SATA interface cable to the interface connector on the hard disk drive. The connector is keyed and will fit in only one way.
- Attach the power cable to the power receptor on the hard disk drive. The connector is keyed and will fit in only one way.

3 Check all other cable connections before turning on your computer.

CAUTION : Do not force or rock the connectors into their sockets on the hard disk drive. Push them in straight until they are seated.

1. Making Computer Detect the New Device

Run the CMOS (BIOS) set-up program to detect the new hard disk drive.

1 Go into CMOS screen during the booting of the computer. For descriptive details of the program, refer to the computer's user's manual.

- Make the computer detect the hard disk.
 - If your computer supports IDE HDD Auto Detection, the hard disk drive will automatically be detected.
 - If your computer does not support auto detect, go into the User Define Mode and by referring written information on the product, set the correct settings for Cylinder, Head, and Sector and if some Bios must be, set the HDD Mode to LBA.
 - Save the changed details and exit.

2. Partitioning and Formatting the Drive

Refer to your Operating System manual or system manual for partitioning and formatting.

3. Seagate World Wide Web Site

Additional information can be obtained at www.seagate.com.

FAQs

- When using within a USB external case, sometimes drive is not recognized. It may be caused by insufficiency of USB DC power. By supplying a subsidy DC power, the symptom can be solved.

Q2 When using within a USB external case, drive can not be Format. First, confirm whether a partition has been created correctly. Format does not work if there is no partition.

Q3 HDD does not be recognized in BIOS setup.

- First, confirm whether each cable was connected correctly.
- Confirm whether Jumper-setting is correct.
- Confirm whether BIOS setup became correctly.

Q4 Even though the HDD recognized in BIOS setup, it does not be seen in Windows.

- Confirm whether did correctly partition and format.
- Partition can be created through the Fdisk or Installing OS according to OS's version.

Q5 I am looking for a Software & Firmware (mainly about drivers) but I

can find I want ? We do not release any firmwares. Because the product has been already optimized with its own configurations. IDE (PATA & SATA) drive does not need any drivers. You just have to make a partition and format your drive for using. Please make sure whether you had partitioned and formatted. First of all, you must partition and format for recognizing the new drive in the Windows Explorer. Within Win98 series, please use the Fdisk. Within Win2000 & Win-XP, please use the Disk Management. When installing Win2000 or Win-XP, the installation process includes the partitioning step itself.

- To open the Disk Management
- Click Start, point to Settings, and then click Control Panel.
 - Double-click Administrative Tools, and then double-click Computer Management.
 - In the left panel, expand Storage, and then expand Disk Management.