

# **NOTICE**

## **Read This First**

For high level information about installing the Lyve Drive Rack hardware, please refer to the Lyve Drive Rack Installation Guide.

To properly and safely install your enclosure into a rack, follow the directions as specified in 5005/4005/3005 Series Hardware Installation and Maintenance Guide. You can download the guide from: [www.seagate.com/support/raid-systems/](http://www.seagate.com/support/raid-systems/)

Retain original packaging materials for use with returns. For enclosure returns, the master container must ship on a pallet. HDDs must be shipped in the original packaging and not installed in the enclosure.

**Non-compliance could void your product warranty.**