


## Fireball™ 640/1280

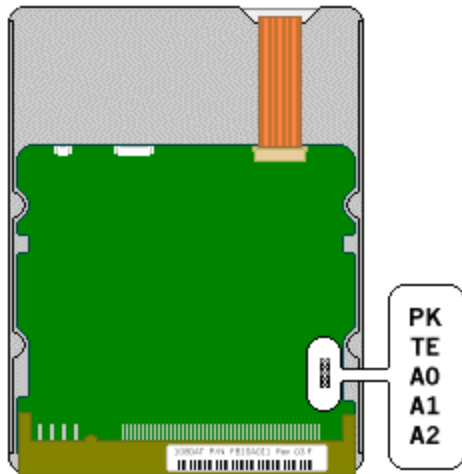

### SCSI Configuration Guide

#### Jumper Settings

#### Drive Termination

Enable Termination	TE jumper on
Disable Termination	TE jumper off

#### Set SCSI ID

SCSI ID	A0	A1	A2
0	Off	Off	Off
1	On	Off	Off
2	Off	On	Off
3	On	On	Off
4	Off	Off	On
5	On	Off	On
6	Off	On	On
7	On	On	On

*Note:* PK (Park) jumper has no defined value and is used to hold extra jumper.

