



Pioneer™ SG

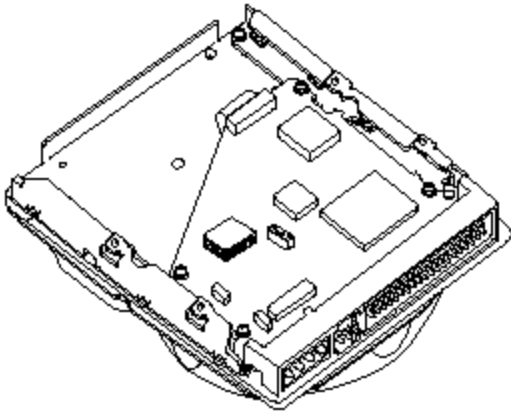

Jumper Settings

	DS	CS	PK	Rsvd
Stand Alone	ON	OFF	OFF	OFF
Master to Slave	ON	OFF	OFF	OFF
Slave to Master	OFF	OFF	OFF	OFF

Jumper Locations

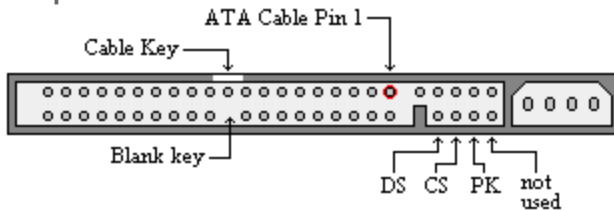

The Pioneer SG disk drive has only one location where user configurable jumpers are found. The jumper block is incorporated into the IDE / ATA cable connector. Using the jumper pins you can establish the drive Master/Slave configuration.

BIOS Settings

The following BIOS parameters are provided for customers needing to manually configure the Quantum disk drive. Both base 2 and base 10 capacity values are displayed.

	Cylinders	Heads	Sectors	Base 2 Capacity	Base 10 Capacity
1.0 GB	2097	16	63	1,032 MB	1,082 MB
2.1 GB	4092	16	63	2,014 MB	2,111 MB