



# Seagate® BarraCuda™ 120 SSD

## Product Manual

250 GB	ZA250CM10003
500 GB	ZA500CM10003
1000 GB	ZA1000CM10003
2000 GB	ZA2000CM10003

100858062, Rev. A  
September 2019

---

## Revision History

Version and Date	Description of Changes
Rev A, September 2019	First document release.

© 2019, Seagate Technology LLC All rights reserved. Publication number: 100858062, Rev. A, September 2019

Seagate Technology reserves the right to make changes to the product(s) or information disclosed herein at any time without notice.

Seagate, Seagate Technology and the Spiral logo are registered trademarks of Seagate Technology LLC in the United States and/or other countries. Nytro and SeaTools are either trademarks or registered trademarks of Seagate Technology LLC or one of its affiliated companies in the United States and/or other countries. All other trademarks or registered trademarks are the property of their respective owners.

No part of this publication may be reproduced in any form without written permission of Seagate Technology LLC. Call 877-PUB-TEK1(877-782-8351) to request permission.

The NVMe word mark and/or NVMeExpress design mark are trademarks of NVMeExpress, Inc. The PCIe word mark and/or PCIeExpress design mark are registered trademarks and/or service marks of PCI-SIG.

When referring to drive capacity, one gigabyte, or GB, equals one billion bytes and one terabyte, or TB, equals one trillion bytes. Your computer's operating system may use a different standard of measurement and report a lower capacity. In addition, some of the listed capacity is used for formatting and other functions, and thus will not be available for data storage. Actual quantities will vary based on various factors, including file size, file format, features and application software. Actual data rates may vary depending on operating environment and other factors. The export or re-export of hardware or software containing encryption may be regulated by the U.S. Department of Commerce, Bureau of Industry and Security (for more information, visit [www.bis.doc.gov](http://www.bis.doc.gov)), and controlled for import and use outside of the U.S. Seagate reserves the right to change, without notice, product offerings or specifications.

---

---

# Contents

<b>Seagate Technology Support Services</b> .....	<b>5</b>
<b>1. Introduction</b> .....	<b>6</b>
<b>2. Specifications</b> .....	<b>8</b>
2.1 Models and Capacity .....	8
2.2 Performance .....	8
2.3 Power Consumption .....	9
2.4 Environmental Conditions .....	9
2.5 Reliability/Endurance .....	10
<b>3. Mechanical Information</b> .....	<b>11</b>
3.1 Dimensions and Weight .....	11
<b>4. Pin and Signal Descriptions</b> .....	<b>13</b>
4.1 Signal Pin Definitions .....	13
4.2 Power Pin Definitions .....	13
<b>5. Supported ATA Command List</b> .....	<b>14</b>
5.1 ATA Feature Set .....	14
5.2 ATA Command Description .....	14
<b>6. SMART Support</b> .....	<b>18</b>
6.1 SMART ID .....	18
<b>7. Feature Details</b> .....	<b>20</b>
7.1 Flash Management .....	20
7.1.1 Error Correction Code (ECC) .....	20
7.1.2 Wear Leveling .....	20
7.1.3 Bad Block Management .....	20
7.1.4 TRIM .....	20
7.1.5 SMART .....	20
7.1.6 Over Provisioning .....	21
7.1.7 Firmware Upgrade .....	21
7.1.8 Thermal Throttling .....	21
7.1.9 Low Power Management .....	21
7.1.9.1 DIPM/HIPM/DEVSLP Mode .....	21
7.2 Advanced Device Security Features .....	21
7.2.1 Secure Erase .....	21
7.2.2 SSD Lifetime Management .....	21
7.2.3 Media Wear Indicator .....	22
7.2.4 Read Only Mode (End of Life) .....	22
7.3 Adaptive Approach to Performance Tuning .....	22
7.3.1 Throughput .....	22
7.3.2 Predict and Fetch .....	22
7.3.3 SLC Caching .....	22

---

<b>8. Safety, Standards, and Compliance</b> .....	<b>23</b>
8.1 Regulatory Model Numbers .....	23
8.2 Reference Documents .....	23

---

## Seagate Technology Support Services

For Internal SSD Support, visit: <https://www.seagate.com/support/products/>

For Firmware Download and Tools Download for Secure Erase, visit: <https://www.seagate.com/support/downloads/>

For information regarding online support and services, visit: <http://www.seagate.com/contacts/>

For information regarding Warranty Support, visit: <http://www.seagate.com/support/warranty-and-replacements/>

For information regarding data recovery services, visit:

<http://www.seagate.com/services-software/seagate-recovery-services/recover/>

For Seagate OEM and Distribution partner and Seagate reseller portal, visit: <http://www.seagate.com/partners>

# 1. Introduction

The Seagate® BarraCuda™ 120 SSD is a fast, dependable storage solution for everyday compute applications. The Seagate BarraCuda 120 SSD offers SATA interface, fully compatible with SATA 3.2 6.0Gbps.

**Table 1 The BarraCuda 120 SSD Features**

Feature	Description	
<b>Capacity (User)</b>	<ul style="list-style-type: none"> <li>250 GB, 500 GB, 1000 GB, 2000 GB</li> </ul>	
<b>Certifications, Eco-Compliance</b>	<ul style="list-style-type: none"> <li>CE, UL, FCC, BSMI, KCC, Microsoft WHQL, VCCI, CB</li> <li>RoHS</li> </ul>	
<b>Dimensions</b>	<ul style="list-style-type: none"> <li>(69.85±0.25) x (100±0.25) x (Max. 7) mm</li> </ul>	SSD outer case can support suitable Z-height for various host situations.
<b>Endurance</b>	<ul style="list-style-type: none"> <li>250 GB 150 Total Bytes Written (TBW)</li> <li>500 GB 300 TBW</li> <li>1000 GB 600 TBW</li> <li>2000 GB 1170 TBW</li> </ul>	Endurance rating valid for SSD Life Remaining > 1% (SMART E7h>1). See <a href="#">Section 2.5, Reliability/Endurance</a> .
<b>Form Factor</b>	<ul style="list-style-type: none"> <li>2.5-inch Standard SSD</li> </ul>	
<b>Interface Compliance</b>	<ul style="list-style-type: none"> <li>Fully compliant with ATA-8/ACS-3 Standard</li> <li>Compliant with SATA Revision 3.2</li> <li>Supported protocol AHCI and ASC2 command set</li> <li>Compatible with SATA 1.5 Gbps, 3 Gbps, and 6Gbps interfaces</li> <li>PIO, DMA, UDMA (up to 6 modes, dependent on host) supported</li> <li>Native Command Queuing (NCQ): up to 32 commands</li> <li>Data Set Management Command Trim support</li> </ul>	
<b>NAND</b>	<ul style="list-style-type: none"> <li>3D TLC</li> </ul>	
<b>Operating Systems</b>	<ul style="list-style-type: none"> <li>Windows® 7 (64 bit), 8.1 (64 bit), and Windows 10 (64 bit)</li> <li>Ubuntu 16.10</li> </ul>	
<b>Performance Random</b>	<ul style="list-style-type: none"> <li>Read: Up to 90,000 IOPS</li> <li>Write: Up to 90,000 IOPS</li> </ul>	Actual performance might vary depending on use conditions and environment. See <a href="#">Section 2.2, Performance</a> .
<b>Performance Sequential</b>	<ul style="list-style-type: none"> <li>Read: Up to 560MB/s</li> <li>Write: Up to 540MB/s</li> </ul>	Actual performance might vary depending on the capacity, use conditions and environment. See <a href="#">Section 2.2, Performance</a> .
<b>Power Consumption</b>	<ul style="list-style-type: none"> <li>Active mode: &lt; 2780 mW</li> <li>Idle mode: &lt; 128 mW</li> <li>DEVSLP: 5 mW</li> </ul>	Based on 250 GB SSD. Results vary with capacity and mode. See <a href="#">Section 2.3, Power Consumption</a> .
<b>Power Loss Data Protection</b>	<ul style="list-style-type: none"> <li>To protect your data, you must send a Standby Immediate command (0xE1h) before you remove power. The BarraCuda 120 SSD does not provide data protection for a sudden power loss.</li> </ul>	
<b>Power Management</b>	<ul style="list-style-type: none"> <li>2.5 inch: 5 V SATA Supply</li> <li>Host-initiated power management</li> <li>Device-initiated power management</li> <li>HIPM/DEVSLP Mode</li> </ul>	
<b>Reliability</b>	<ul style="list-style-type: none"> <li>End-to-end data path protection</li> <li>MTBF: 1.8 million hours</li> <li>UBER: 1 error in 10<sup>16</sup> bits read</li> </ul>	

Table 1 The BarraCuda 120 SSD Features (continued)

Feature	Description	
<b>Shock and Vibration</b>	Shock <ul style="list-style-type: none"> <li>■ Non-Operating: 1,500 G, at 0.5 ms</li> </ul>	<b>See <a href="#">Section 2.4, Environmental Conditions</a>.</b>
	Vibration <ul style="list-style-type: none"> <li>■ Non-Operating: 1.52 G<sub>RMS</sub>, (20 to 80 Hz, Frequency)</li> </ul>	
<b>Temperature Range (Operating)</b>	<ul style="list-style-type: none"> <li>■ 0°C to 70°C</li> <li>■ Temperature Sensor (SMART Attribute ID C2h)</li> </ul>	
<b>Voltage</b>	<ul style="list-style-type: none"> <li>■ 5V±5%</li> </ul>	
<b>Warranty</b>	Five years, or when the device reaches Host TBW, whichever happens first. Endurance rating valid for SSD Life Remaining > 1% (SMART E7h>1).	
<b>Weight</b>	<ul style="list-style-type: none"> <li>■ 50 g, 1.76 Oz ±5%</li> </ul>	

## 2. Specifications

### 2.1 Models and Capacity

**Table 2 Models and Capacity**

Model Names	User Capacity
ZA250CM10003	250 GB
ZA500CM10003	500 GB
ZA1000CM10003	1000 GB
ZA2000CM10003	2000 GB

**NOTE** About capacity:

- Sector Size: 512 Bytes
- User-addressable LBA count = ((97696368) + (1953504 x (Desired Capacity in Gb-50.0))) From International Disk Drive Equipment and Materials Association (IDEMA) (*LBA1-03\_standard.doc*)

### 2.2 Performance

**Table 3 Random and Sequential Read and Write Performance**

Parameter	250GB	500 GB	1000 GB	2000 GB
Sequential Read MB/s	560	560	560	560
Sequential Write MB/s	540	540	540	540
Random Read (IOPS)	90,000	90,000	90,000	90,000
Random Write (IOPS)	90,000	90,000	90,000	90,000

**NOTE** About performance:

- Fresh out of box (FOB) performance obtained on newly formatted drive. Performance may vary based on the SSD's firmware version, system hardware, and configuration.
- Performance is based on CrystalDiskMark v.6.0.0 x64 on Windows 10 host.



## 2.3 Power Consumption

**Table 4 Power Consumption**

	250 GB	500 GB	1000 GB	2000 GB
Read (mW)	2250	2250	2450	2600
Write (mW)	2450	2450	2650	2780
Idle (mW)	115	114	120	128
Slumber (mW)	28.8	28.8	30.6	38.4
DEVSLP (mW)	5	5	5	5

**NOTE**

About power consumption:

- The average value of power consumption is based on 100% conversion efficiency.
- The measured power voltage is 5 V.
- Measured under ambient temperature.
- Sequential Read/Write is measured while testing 4000 MB five times by CrystalDiskMark.
- Power Consumption can differ according to flash configuration and platform.

## 2.4 Environmental Conditions

**Table 5 Temperature, Humidity, Shock**

Specification	Value
Temperature	
Operating (case temperature at specific airflow)	0°C to 70°C
Non-operating	-40°C to 85°C
Humidity	
Operating	90%
Non-operating (storage)	93%
Shock	
Non-operating	1,500 G, duration 0.5 ms
Vibration	
Non-operating	1.52 G <sub>RMS</sub> , (20Hz to 80Hz, Frequency)

**NOTE**

**Temperature** is measured without condensation. Operating mode temperature is measured by temperature sensor, SMART Attribute C2h.

**NOTE**

**Shock and vibration** results assume that the SSD is mounted securely with the input vibration applied to the SSD mounting. These specifications do not cover connection issues that may result from testing at this level. The measured specification is in root mean square (RMS) form.

- **Non-operating Shock.** The limits of non-operating shock applies to all conditions of handling and transportation. This includes both isolated SSD and integrated SSDs. Shock may be applied in the X, Y, or Z-axis.
- **Non-Operating Vibration.** The limits of non-operating vibration shall apply to all conditions of handling and transportation. This includes both isolated SSD and integrated SSDs. Vibration may be applied in the X, Y, or Z-axis.

## 2.5 Reliability/Endurance

**Table 6 Reliability/Endurance**

Specification	Value
Mean time between failures (MTBF)	1.8 million hours
Bit Error Rate	1 error in 10 <sup>16</sup> bits read
Endurance	<ul style="list-style-type: none"> <li>■ 250 GB: 150 TBW</li> <li>■ 500 GB: 300 T BW</li> <li>■ 1000 GB: 600 TBW</li> <li>■ 2000 GB 1170 TBW</li> </ul>

**NOTE**

About endurance:

- The SSD achieves the specified MTBF in an operational environment that complies with the operational temperature range specified in this manual. Operating temperatures are measured by temperature sensor, SMART Attribute ID C2h.
- Endurance rating valid for SSD Life Remaining > 1% (SMART E7h>1).
- Endurance is characterized while running Client JESD219A workload (per JESD218A specification).

### 3. Mechanical Information

#### 3.1 Dimensions and Weight

**Weight:** 50 g, 1.76 Oz +/- 5%

**Height:** Maximum, 7 mm+0.10/-0.30

**Width:** 69.85 mm±0.25 mm

**Length:** 100.10 mm±0.25 mm

**Figure 1 BarraCuda 120 SSD Enclosure**


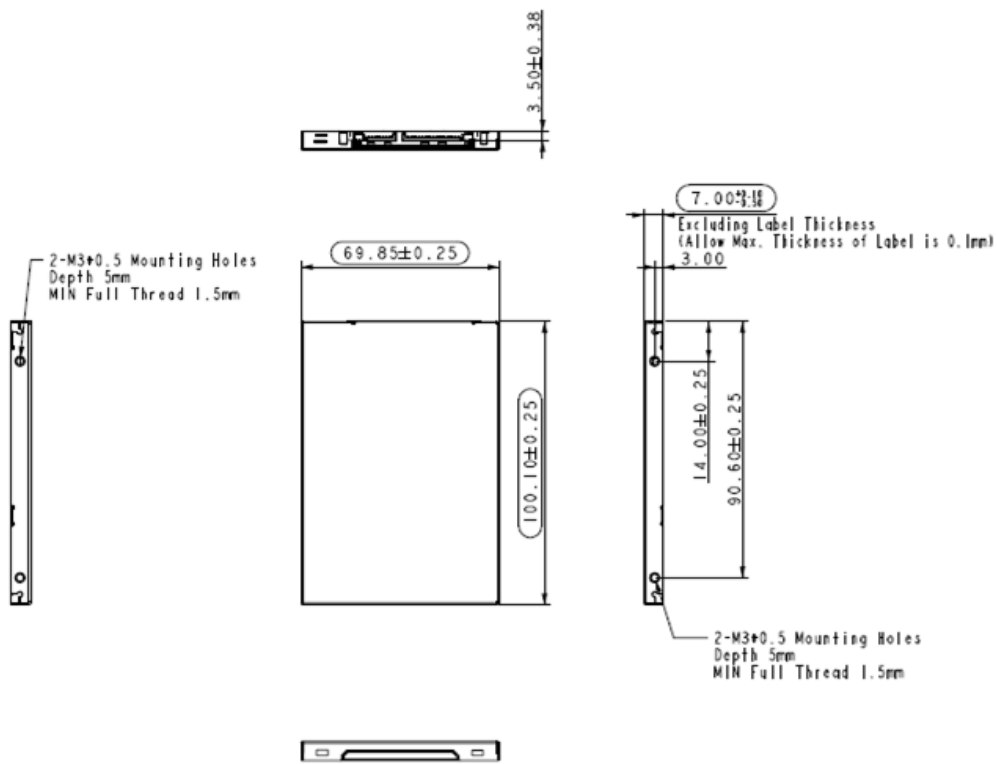


Figure 2 BarraCuda 120 SSD

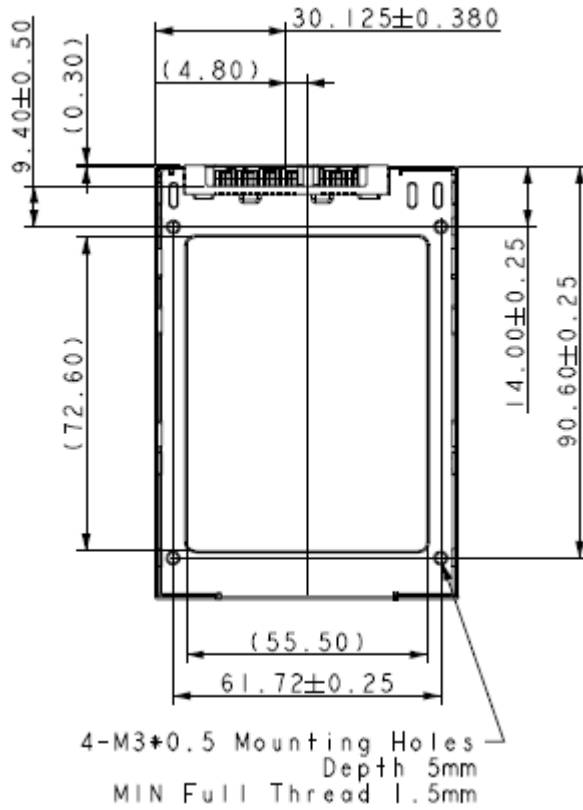

## 4. Pin and Signal Descriptions

### 4.1 Signal Pin Definitions

**Table 7 Serial ATA Connector Pin Signal Definitions**

Pin	Name	Definition
S1	Ground	Ground
S2	A+	Differential signal pair A+ and A-
S3	A-	
S4	Ground	Ground
S5	B-	Differential signal pair B- and B+
S6	B+	
S7	Ground	Ground

**NOTE** Key and spacing separate the signal and power segments.

### 4.2 Power Pin Definitions

**Table 8 Power Pin Definitions**

Pin	Function	Definition
P1	not used	Not Used (3.3 V)
P2	V33	Not Used (3.3 V)
P3	DEVSLP	SATA PHY Power Control
P4	GND	Ground
P5	GND	Ground
P6	GND	Ground
P7	V5	5 V Power, Precharge
P8	V5	5 V Power
P9	V5	5 V Power
P10	GND	Ground
P11	Reserved	Reserved
P12	GND	Ground
P13	not used	Not Used (12 V pre-charge)
P14	V12	Not Used (12 V)
P15	V12	Not Used (12 V)

**NOTE** About Power Pin Signal Definitions:

- Key and spacing separate the signal and power segments.
- Uses 5 V power only; 3.3 V (P1-P2) and 12 V (P13-P15) power are not used.

## 5. Supported ATA Command List

The BarraCuda 120 SSD complies with ATA-8/ACS-3. All mandatory and many optional commands and features are supported.

### 5.1 ATA Feature Set

The following table summarizes the ATA feature set and commands that the BarraCuda 120 SSD supports.

**Table 9 ATA Feature Set**

Feature	Supported
48-Bit Address feature set	Yes
General feature set	Yes
Native Command Queuing (NCQ) feature set	Yes
Power Management feature set	Yes
Security feature set	Yes
SMART feature set	Yes

### 5.2 ATA Command Description

The following table shows the ATA commands supported.

**Table 10 ATA Command Description**

Op-Code	Support	Command Description	Op-Code	Support	Command Description	
00h	Y	NOP	B6h 12h	—	NV Cache: QUERY NV CACHE PINNED SET DMA EXT	
03h	—	CFA Request Extended Error	B6h 13h	—	NV Cache: QUERY NV CACHE MISSES DMA EXT	
06h	Y	Data Set Management	B6h 14h	—	NV Cache: FLUSH NV CACHE	
08h	—	Device Reset	C4h	—	Y	Read Multiple
0Bh	—	Request Sense Data EXT	C5h	—	Y	Write Multiple
10h	Y	Recalibrate	C6h	—	Y	Set Multiple Mode
11h to 1Fh	—	Recalibrate	C7	—	—	Read DMA Queued
20h	Y	Read Sectors	C8h	—	Y	Read DMA
21h	Y	Read Sectors without Retry	9h	—	—	Read DMA Without Retry
22h	—	Read Long	CAh	—	Y	Write DMA
23h	—	Read Long Without Retry	CBh	—	Y	Write DMA Without Retry
24h	Y	Read Sectors EXT	CCh	—	—	Write DMA Code
25h	Y	Read DMA EXT	CDh	—	—	CFA Write Multiple Without Erase
26h	—	Read DMA Queued EXT	CEh	—	Y	Write Multiple FUA EXT

Table 10 ATA Command Description (continued)

Op-Code		Support	Command Description	Op-Code		Support	Command Description
27h	—	Y	Read Native Max Address EXT	D1h	—	—	Check Media Card Type
29h	—	Y	Read Multiple EXT	DAh	—	—	Get Media Status
2Ah	—	—	Read Stream DMA EXT	DEh	—	—	Media Lock
2Bh	—	—	Read Stream EXT	DFh	—	—	Media Unlock
2Fh	—	Y	Read Log EXT	E0h	—	Y	Standby Immediate
30h	—	Y	Write Sectors	E1h	—	Y	Idle Immediate
31h	—	Y	Write Sectors without Retry	E2h	—	Y	Standby
32h	—	—	Write Long	E3h	—	Y	Idle
33h	—	—	Write Long Without Retry	E4h	—	Y	Read Buffer
34h	—	Y	Write Sectors EXT	E5h	—	Y	Check Power Mode
35h	—	Y	Write DMA EXT	E6h	—	Y	Sleep
36h	—	—	Write DMA Queued EXT	E7h	—	Y	Flush Cache
37h	—	Y	Set Max Address EXT	E8h	—	Y	Write Buffer
38h	—	—	CFA Write Sectors Without Erase	E9h	—	Y	Read Buffer DMA
39h	—	Y	Write Multiple EXT	EAh	—	Y	Flush Cache EXT
3Ah	—	—	Write Stream DMA EXT	EBh	—	Y	Write Buffer DMA
3Bh	—	—	Write Stream EXT	ECh	—	Y	Identify Device
3Ch	—	—	Write Verify	EDh	—	—	Media Eject
3Dh	—	Y	Write DMA FUA EXT	EEh	—	—	Identify Device DMA
3Eh	—	—	Write DMA Queued FUA EXT	EFh	01h	—	Set Features: Enable 8-bit PIO Transfer Mode (CFA feature set only)
3Fh	—	Y	Write Log EXT	EFh	02h	Y	Set Features: Enable Write Cache
40h	—	Y	Read Verify Sectors	EFh	03h	Y	Set Features: Set transfer mode based on value in Count field.
41h	—	Y	Read Verify Sectors without Retry	EFh	05h	—	Set Features: Enable advanced power management.
42h	—	Y	Read Verify Sector(s) EXT	EFh	06h	—	Set Features: Enable Power-Up In Standby feature set.
44h	—	—	Reserved	EFh	07h	—	Set Features: Power-Up In Standby feature set device spin-up.
45h	—	O	Write Uncorrectable EXT	EFh	0Ah	—	Set Features: Enable CFA power mode 1.
47h	—	Y	Read Log DMA EXT	EFh	0Bh	—	Set Features: Enable Write-Read-Verify feature set
50h	—	—	Format Track	EFh	10h	01h	Set Features: Enable use of Serial ATA feature

Table 10 ATA Command Description (continued)

Op-Code			Support	Command Description	Op-Code			Support	Command Description
51h	—	—		Configure Stream	EFh	10h	02h	Y	Set Features: Enable DMA Setup FIS Auto-Activate optimization
57h	—	Y		Write Log DMA EXT	EFh	10h	03h	Y	Set Features: Enable Device-initiated interface power state (DIPM) transitions.
60h	—	Y		Read FPDMA Queued	EFh	10h	04h	—	Set Features: Enable use of Serial ATA feature
61h	—	Y		Write FPDMA Queued	EFh	10h	05h	—	Set Features: Enable use of Serial ATA feature
70h	—	Y		Seek	EFh	10h	06h	O	Set Features: Enable Software Settings Preservation (SSP)
71-76h	—	—		Seek	EFh	10h	07h	Y	Set Features: Enable Device Automatic Partial to Slumber transitions
77h	—	Y		Set Date And Time Ext	EFh	10h	09h	O	Set Features: Enable Device Sleep
78h	—	Y		Accessible Max Address Configuration	EFh	42h	—	—	Set Features: Enable Automatic Acoustic Management feature set.
79-7Fh	—	—		Seek	EFh	43h	-	—	Set Features: Set Maximum Host Interface Sector Times.
87h	—	—		CFA Translate Sector	EFh	44h	—	—	Set Features: Vendor Specific ECC byte
90h	—	Y		Execute Device Diagnostic	EFh	55h	—	Y	Set Features: Disable read look-ahead feature
91h	—	Y		Initialize Device Parameters	EFh	5Dh	—	—	Set Features: Enable release interrupt
92h	—	Y		Download Microcode	EFh	5Eh	—	—	Set Features: Enable service interrupt
93h	—	Y		Download Microcode DMA	EFh	5Fh	—	—	Set Features: Enable NDRQ Feature
94h	—	—		Standby Immediate	EFh	66h	—	Y	Set Features: Disable reverting to power-on defaults
95h	—	—		Idle Immediate	EFh	81h	—	—	Set Features: Disable 8-bit PIO transfer mode (CFA feature set only)
96h	—	—		Standby	EFh	82h	—	Y	Set Features: Disable write cache
97h	—	—		Idle	EFh	85h		Y	Set Features: Disable advanced power management
98h	—	—		Check Power Mode	EFh	86h		—	Set Features: Disable Power-Up In Standby feature set
99h	—	—		Sleep	EFh	8Ah		—	Set Features: Disable CFA power mode
A0h	—	—		Packet	EFh	8Bh		—	Set Features: Disable Write-Read-Verify feature set
A1h				Identify Packet Device	Efh	90h	01h		Set Features: Disable use of Serial ATA feature.
A2h	—	—		Service	Efh	90h	02h	Y	Set Features: Disable DMA Setup FIS Auto-Activate optimization.
B0h	D0h	Y		SMART: Read Data	EFh	90h	03h	Y	Set Features: Disable Device-initiated interface power state (DIPM) transitions.
B0h	D1h	Y		SMART: Read Attribute Thresholds	EFh	90h	04h	—	Set Features: Disable use of Serial ATA feature.
B0h	D2h	Y		SMART: Enable/disable Autosave	EFh	90h	05h	-	Set Features: Disable use of Serial ATA feature



Table 10 ATA Command Description (continued)

Op-Code		Support	Command Description	Op-Code		Support	Command Description
B0h	D3h	Y	SMART: Save Attribute Values	EFh	90h 06h	Y	Set Features: Disable Software Settings Preservation (SSP)
B0h	D4h	Y	SMART: Execute Off-line Immediate	EFh	90h 07h	Y	Set Features: Disable Device Automatic Partial to Slumber transitions
B0h	D5h	Y	SMART: Read Log	EFh	90h 09h	O	Set Features: Disable Device Sleep
B0h	D6h	Y	SMART: Write Log	EFh	AAh	Y	Set Features: Enable read look-ahead feature
B0h	D8h	Y	SMART: Enable Operations	EFh	BBh	-	Set Features: Default ECC byte
B0h	D9h	Y	SMART: Disable Operations	EFh	C2h	-	Set Features: Disable Automatic Acoustic Management feature set
B0h	DAh	Y	SMART: Return Status	EFh	C3h	-	Set Features: Enable/Disable the Sense Data Reporting feature set
B0h	DBh	Y	SMART: Enable/disable Automatic Off-line	EFh	CCh	Y	Set Features: Enable reverting to power-on defaults
B0h	E0h	-	SMART: Vendor specific	EFh	DDh	-	Set Features: Disable release interrupt
B1h	C0h	Y	DEVICE CONFIGURATION: Restore	EFh	DEh	-	Set Features: Disable SERVICE interrupt
B1h	C1h	Y	DEVICE CONFIGURATION: Freeze Lock	EFh	DFh	-	Set Features: Disable NDRQ Feature
B1h	C2h	Y	DEVICE CONFIGURATION: Identify	F1h		Y	Security Set Password
B1h	C3h	Y	DEVICE CONFIGURATION: Set	F2h		Y	Security Unlock
B1h	C4h	Y	DEVICE CONFIGURATION: Identify DMA	F3h		Y	Security Erase Prepare
B1h	C5h	Y	DEVICE CONFIGURATION: Set DMA	F4h		Y	Security Erase Unit
B4h	0000h	O	SANITIZE DEVICE: Sanitize Status Ext	F5h		Y	Security Freeze Lock
B4h	0011h	O	SANITIZE DEVICE: Crypto Scramble Ext	F6h		Y	Security Disable Password
B4h	0012h	O	SANITIZE DEVICE: Block Erase Ext	F8h		Y	Read Native Max Address
B4h	0014h	O	SANITIZE DEVICE: Overwrite Ext	F9h	00h	Y	SET MAX: Set Max Address
B4h	0020h	O	SANITIZE DEVICE: SANITIZE FREEZE LOCK EXT	F9h	01h	Y	SET MAX: SET MAX PASSWORD
B4h	0040h	O	SANITIZE DEVICE: SANITIZE ANTIFREEZE LOCK EXT	F9h	02h	Y	SET MAX: SET MAX LOCK
B6h	00h	-	NV Cache: SET NV CACHE POWER MODE EXT	F9h	03h	Y	SET MAX: SET MAX UNLOCK
B6h	01h	-	NV Cache: RETURN FROM NV CACHE POWER MODE EXT	F9h	04h	Y	SET MAX: SET MAX FREEZE LOCK
B6h	10h	-	NV Cache: ADD LBA(S) TO NV CACHE PINNED SET DMA EXT	F9h	05h	Y	SET MAX: SET MAX SET PASSWORD DMA
B6h	11h	-	NV Cache: REMOVE LBA(S) FROM NV CACHE PINNED SET DMA EXT	F9h	06h	Y	SET MAX: SET MAX UNLOCK DMA

## 6. SMART Support

The BarraCuda 120 SSD supports the SMART command set.

### 6.1 SMART ID

The following table lists SMART IDs and Descriptions.

**Table 11 SMART Attribute IDs and Descriptions**

Description	0	1	2	3	4	5	6	7	8	9	10	11	Threshold
	ID	Flag		Value	Worse	DATA							
Number of Accumulation of Uncorrectable Error	01h	0Bh	00h	64h	64h	UECC error count from Host	0	0	0	0	0	0	32h
Power-On hours Count	09h	12h	00h	64h	64h	Power on hour	0	0	0	0	0	0	00h
Drive Power Cycle Count	0Ch	12h	00h	64h	64h	Power on/off cycles				0	0	0	00h
Spare Blocks Available	10h	12h	00h	64h	64h	Spare Blocks Available by plane	0	0	0	0	0	0	00h
Remaining Spare Blocks	11h	12h	00h	64h	64h	Remaining Spare Blocks by plane	0	0	0	0	0	0	00h
SATA PHY Error Count	A8h	12h	00h	64h	64h	SATA PHY error count				0	0	0	00h
Bad Block Count (Early / Later)	AAh	03h	00h	Note <sup>a</sup>		Early Bad Block count by all plane	0	0	Later Bad Block count by all plane		0	0Ah	
Erase count (average, max, erase count)	ADh	12h	00h	64h	64h	Max Erase Count	Average Erase Count		Least Erase Count		0	00h	
Unexpected Power Loss count	AEh	12h	00h	64h	64h	Number of accidental power loss count				0	0	0	00h
Wear Range delta	B1h	00h	00h	00h	00h	Note <sup>b</sup>	0	0	0	0	0	0	00h
Unexpected Power Loss Count	C0h	12h	00h	64h	64h	number of accidental power loss count				0	0	0	00h
Temperature (only Toshiba or thermo sensor embedded)	C2h	23h	00h	128-Current Temp	128-Highest value	Current Temp	Lowest Temp		Highest Temp		0	39h	

Table 11 SMART Attribute IDs and Descriptions (continued)

Description	0	1	2	3	4	5	6	7	8	9	10	11	Threshold
	ID	Flag		Value	Worse	DATA							
Number of accumulation CRC error (read/write data FIS CRC error)	DAh	0Bh	00h	64h	64h	CRC Error Count				0	0	0	32h
SSD life remaining	E7h	13h	00h	64h	64h	Note <sup>c</sup>	0	0	0	0	Throttling level	0	00h
Read Failure Block Count	E8h	13h	00h	64h	64h	Flash Read Fail Count				Raw Read Error Rate	0	0	00h
Lifetime Writes to Flash (G Unit)	E9h	0Bh	00h	64h	64h	Lifetime Writes to Flash by GByte					0	00h	
Lifetime Writes to Flash (Sector Unit)	EBh	0Bh	00h	64h	64h	Lifetime Writes to Flash by Sector					0	00h	
Host Writes (G Unit)	F1h	12h	00h	64h	64h	Lifetime Writes from Host by Gbyte					0	00h	
Host Reads (G Unit)	F2h	12h	00h	64h	64h	Lifetime Reads from Host by Gbyte					0	00h	

- a. Bad Block Count (Early / Later) ID170. Value = (Remaining Spare Blocks by plane)/(Spare Blocks Available by plane) \*100. This formula calculates percentage of spare block. Value is between 100 and 0.
- b. Wear Range Delta ID 177. Value = (max erase count - least erase count) / (P-E Cycle) \*100 (percentage).
- c. SSD Life Remaining ID 231. Value = 100 - ((average erase count / Rated PE Cycle) \* 100).

## 7. Feature Details

### 7.1 Flash Management

#### 7.1.1 Error Correction Code (ECC)

Flash memory cells deteriorate with use, which might generate random bit errors in the stored data. The BarraCuda 120 SSD applies the 340 bit/2 KB LDPC (Low Density Parity Check) of ECC algorithm, which detects and corrects errors that occur during read process, ensures data is read correctly, and protects data from corruption.

#### 7.1.2 Wear Leveling

NAND flash devices can undergo only a limited number of program/erase cycles. Commonly, areas of the flash media are not used evenly. If some areas are updated more frequently than others, this reduces the lifetime of the device. Wear Leveling extends the life of the NAND Flash by evenly distributing write and erase cycles across the media.

Seagate's advanced Wear Leveling algorithm spreads the flash usage throughout the whole flash media area. Implementing dynamic and static Wear Leveling algorithms improves the life expectancy of the NAND flash.

#### 7.1.3 Bad Block Management

Bad blocks do not function properly and they can contain more invalid bits. This can make stored data unstable and bad block reliability is not guaranteed. Blocks identified and marked as bad by the manufacturer are called "Early Bad Blocks". Bad blocks that develop during the lifespan of the Flash are called "Later Bad Blocks". Seagate's bad block management algorithm detects the factory-produced bad blocks and manages bad blocks that appear with use. This practice prevents data from being stored in bad blocks and improves data reliability

#### 7.1.4 TRIM

The TRIM feature improves the read/write performance and speed of SSDs. SSDs cannot overwrite existing data, so the available space becomes smaller with each data block use. The TRIM command tells the SSD (through the operating system) which data blocks can be removed permanently because they are no longer in use. The SSD erases these unused data blocks.

#### 7.1.5 SMART

SMART, stands for Self-Monitoring, Analysis, and Reporting Technology, is an open standard that allows an SSD to automatically detect its health and report potential failures. When SMART records a failure, users can replace the drive to prevent unexpected outage or data loss. SMART can also inform users of impending failures while there is still time to copy data to another device.

## 7.1.6 Over Provisioning

Over Provisioning (OP) preserves an additional area beyond user capacity in a SSD, which is not visible to users and cannot be used by them. With Over Provisioning, the performance and IOPS (Input/Output Operations per Second) are improved by providing the controller additional space to manage P/E cycles, which enhances the reliability and endurance as well. Moreover, the write amplification of the SSD becomes lower when the controller writes data to the flash.

## 7.1.7 Firmware Upgrade

Firmware is a set of instructions on how the device communicates with the host. Firmware can be upgraded when new features are added, compatibility issues are fixed, or read/write performance gets improved.

## 7.1.8 Thermal Throttling

The purpose of thermal throttling is to prevent any components in a SSD from over-heating during read and write operations. The BarraCuda 120 SSD is designed with an on-board thermal sensor and with its accuracy, firmware can apply different levels of throttling to achieve the purpose of protection efficiently and proactively via SMART 12 reading.

## 7.1.9 Low Power Management

### 7.1.9.1 DIPM/HIPM/DEVSLP Mode

SATA interfaces contain two low power management states for power saving: Partial and Slumber modes. For Partial mode, the device has to resume to full operation within 10 microseconds, whereas the device will spend 10 milliseconds to become fully operational in the Slumber mode. SATA interfaces allow low power modes to be initiated by Host (HIPM, Host Initiated Power Management) or Device (DIPM, Device Initiated Power Management). As for HIPM, Partial or Slumber mode can be invoked directly by the software. For DIPM, the device will send requests to enter Partial or Slumber mode.

## 7.2 Advanced Device Security Features

### 7.2.1 Secure Erase

Secure Erase is a standard ATA command and it writes all of "0xFF" to fully wipe all the data on hard drives and SSDs. When this command is issued, the SSD controller erases its storage blocks and returns to its factory default settings

### 7.2.2 SSD Lifetime Management

Total Bytes Written (TBW)

TBW measures the lifespan of the SSD. This measurement represents the amount of data written to the device. To calculate the TBW of a SSD, use the following equation:

$$TBW = [(NAND\ Endurance) \times (SSD\ Capacity)] / [WAF]$$

NAND Endurance: NAND endurance refers to the P/E (Program/Erase) cycle of a NAND flash.

SSD Capacity: The SSD capacity is the specific capacity in total of a SSD.

WAF: Write Amplification Factor (WAF) is a numerical value representing the ratio between the amount of data that a SSD controller needs to write and the amount of data that the host's flash controller writes. A better WAF, which is near 1, guarantees better endurance and lower frequency of data written to flash memory.

TBW in this document is based on JEDEC 218/219 workload.

### 7.2.3 Media Wear Indicator

Actual life indicator reported by SMART Attribute 231 (E7h) Life Remaining by percentage, recommends User to replace drive before reaching 0%.

### 7.2.4 Read Only Mode (End of Life)

When the SSD is aged by program/erase cycles, media wear-out may cause increasing numbers of bad blocks. When the number of usable good blocks falls outside a defined usable range, the drive notifies the host through AER event and Critical Warning to enter Read Only Mode to prevent further data corruption. When this happens, the user should replace the SSD with another one immediately.

## 7.3 Adaptive Approach to Performance Tuning

### 7.3.1 Throughput

Based on the available space of the disk, the BarraCuda 120 SSD regulates the read/write speed and manages the performance of throughput. When there is a lot of space, the firmware continuously performs read/write actions. There is no need yet to implement garbage collection to allocate and release memory to accelerate the read/write processing and improve performance. When there is less available space, the SSD slows down the read/write processing and implements garbage collection to release memory.

### 7.3.2 Predict and Fetch

When the Host tries to read data from the SSD, the SSD performs only one read action after receiving one command. However, the BarraCuda 120 SSD applies Predict and Fetch to improve the read speed. When the host issues sequential read commands to the SSD, the SSD automatically expects that the following is also read commands. Therefore, before receiving the next command, flash has already prepared the data. This accelerates data processing time, and the host needs to wait less time to receive data.

### 7.3.3 SLC Caching

The BarraCuda 120 SSD firmware design adopts dynamic caching to deliver better performance, endurance and user experience.

## 8. Safety, Standards, and Compliance

Each Hard Drive and Solid State Drive ("device") has a product label that includes certifications that apply to that specific drive. The following information provides an overview of requirements that may apply to the drive.

**NOTE**

***The most up to date information on Safety, Standards, and Compliance for this product is available in the Seagate HDD and SSD Regulatory Compliance and Safety document. You can find this document here:***

<https://www.seagate.com/files/www-content/forms/compliance/regulatory-compliance-and-safety-100838899-A.pdf>

### 8.1 Regulatory Model Numbers

The following regulatory model number represents all features and configurations in the series:

- STA021

### 8.2 Reference Documents

In case of conflict between this document and any reference document, this document takes precedence.

**Table 12 Reference Documents**

Date	Title
Apr. 2007	SATA-IO Commands for ATA-8
Feb. 2011	<i>Solid-State Drive (SSD) Requirements and Endurance Test Method(JESD218A)</i>
Jul. 2011	Serial ATA Revision 3.1
Jul. 2011	IDEMA (LBA1-03_standard.doc)
Jul. 2012	SOLID-STATE DRIVE (SSD) Endurance Workload(JESD219A)
Oct. 2013	ATA/ATAPI Command Set -2 (ACS-3) Revision 5



**Seagate Technology LLC**

*AMERICAS Seagate Technology LLC 10200 South De Anza Boulevard, Cupertino, California 95014, United States, 408-658-1000*

*ASIA/PACIFIC Seagate Singapore International Headquarters Pte. Ltd. 7000 Ang Mo Kio Avenue 5, Singapore 569877, 65-6485-3888*

*EUROPE, MIDDLE EAST AND AFRICA Seagate Technology (Netherlands) B.V. Koolhovenlaan 1, 1119 NB Schiphol-Rijk, Netherlands, 31-20-316-7300*

**Publication Number: 100858062, Rev. A**

**September 2019**