



**SATA Product Manual** 

# **Standard model**

ST8000VX0022

ST6000VX0023

ST4000VX007

ST3000VX010

ST2000VX008

ST1000VX005

100804836, Rev. B October 2016

# **Document Revision History**

Revision	Date	Pages affected and Description of Change	
Rev. A	10/12/2016	Initial release.	
Rev. B	10/17/2016	9: Table 1 Op Shock value 23: Changed Figure 3 to 8TB only 24-26: New mechanical drawings for 6TB, 4TB & 3-2TB 32: Word 98-99 Streaming Performance Granularity = 2710 <sub>H</sub> / 0000 <sub>H</sub>	

#### © 2016, Seagate Technology LLC All rights reserved.

Publication number: 100804836, Rev. B October 2016

Seagate, Seagate Technology and the Spiral logo are registered trademarks of Seagate Technology LLC in the United States and/or other countries. SeaTools is either trademarks or registered trademarks of Seagate Technology LLC or one of its affiliated companies in the United States and/or other countries. All other trademarks or registered trademarks are the property of their respective owners.

No part of this publication may be reproduced in any form without written permission of Seagate Technology LLC. Call 877-PUB-TEK1 (877-782-8351) to request permission.

When referring to drive capacity, one gigabyte, or GB, equals one billion bytes and one terabyte, or TB, equals one trillion bytes. Your computer's operating system may use a different standard of measurement and report a lower capacity. In addition, some of the listed capacity is used for formatting and other functions, and thus will not be available for data storage. Actual quantities will vary based on various factors, including file size, file format, features and application software. Actual data rates may vary depending on operating environment and other factors. The export or re-export of hardware or software containing encryption may be regulated by the U.S. Department of Commerce, Bureau of Industry and Security (for more information, visit <a href="www.bis.doc.gov">www.bis.doc.gov</a>), and controlled for import and use outside of the U.S. Seagate reserves the right to change, without notice, product offerings or specifications.

# Contents

1.0	Intro	duction
	1.1	About the SATA interface
2.0	Drive	Specifications
	2.1	Specification summary tables 8
	2.2	Formatted capacity
		2.2.1 LBA mode11
	2.3	Default logical geometry12
	2.4	Seek time
	2.5	Start/stop times
	2.6	Power specifications
		2.6.1 Power consumption
		2.6.2 Typical current profile
		2.6.3 Conducted noise
		2.6.4 Voltage tolerance
		2.6.5 Power-management modes
	2.7	Environmental specifications16
		2.7.1 Drive case temperature
		2.7.2 Temperature
		2.7.3 Temperature gradient
		2.7.4 Humidity
		2.7.5 Altitude
		2.7.6 Shock
		2.7.7 Vibration
	2.8	Acoustics
		2.8.1 Test for Prominent Discrete Tones (PDTs)
	2.9	Electromagnetic immunity
	2.10	Reliability - Mean Time Between Failure
		2.10.1 Storage
	2.11	Warranty
	2.12	Agency certification
		2.12.1 Safety certification
		2.12.2 Electromagnetic compatibility
		2.12.3 FCC verification
	2.13	Environmental protection
		2.13.1 European Union Restriction of Hazardous Substances (RoHS) Directive20
		2.13.2 China Requirements — China RoHS 2
	2.14	Corrosive environment

# Contents

3.0	Confi	iguring an	d Mounting the Drive	22
	3.1	Handlir	ng and static-discharge precautions	22
	3.2		uring the drive	
	3.3		ables and connectors	
	3.4	Drive m	nounting	23
4.0	SATA	Interface		28
	4.1	Hot-Plu	ıg compatibility	28
	4.2		evice plug connector pin definitions	
	4.3	Suppor	ted ATA commands	29
		4.3.1	Identify Device command	31
		4.3.2	Set Features command	
		4.3.3	S.M.A.R.T. commands	36

# **Figures**

Figure 2 Attaching SATA cabling	
rigure 2 Attaching SATA cabing	
Figure 3 Mounting dimensions (8TB)	23
Figure 4 Mounting dimensions (6TB)	24
Figure 5 Mounting dimensions (4TB)	25
Figure 6 Mounting dimensions (3TB - 2TB)	26
Figure 7 Mounting dimensions (1TB)	27

# Seagate® Technology Support Services

For information regarding online support and services, visit: <a href="http://www.seagate.com/contacts/">http://www.seagate.com/contacts/</a>

For information regarding Warranty Support, visit: <a href="http://www.seagate.com/support/warranty-and-replacements/">http://www.seagate.com/support/warranty-and-replacements/</a>

For information regarding data recovery services, visit: <a href="http://www.seagate.com/services-software/data-recovery-services/">http://www.seagate.com/services-software/data-recovery-services/</a>

For Seagate OEM, Distribution partner and reseller portals, visit: <a href="http://www.seagate.com/partners/">http://www.seagate.com/partners/</a>

# 1.0 Introduction

This manual describes the functional, mechanical and interface specifications for the following: Seagate® SkyHawk<sup>TM</sup> model drives:

ST8000VX0022 ST6000VX0023 ST4000VX007 ST3000VX010 ST2000VX008 ST1000VX005

These drives provide the following key features:

- 24x7 capability
- Balance technology to support multiple drives in a system
- Compliant with RoHS requirements in China and Europe
- Full-track multiple-sector transfer capability without local processor intervention
- · Low activity and idle power
- · Low-RPM spindle speed
- · Native Command Queuing with command ordering to increase performance in demanding applications
- · Off-the-shelf compatibility
- Performance-tuned for RAID applications
- · Rated for 1M hours MTBF
- SeaTools diagnostic software performs a drive self-test that eliminates unnecessary drive returns.
- · State-of-the-art cache and on-the-fly error-correction algorithms
- · Streaming video optimization consistent command completion times & ERC support
- · Support for S.M.A.R.T. drive monitoring and reporting
- · Supports ATA8 streaming commands
- · Supports latching SATA cables and connectors
- TGMR recording technology provides the drives with increased areal density.
- Worldwide Name (WWN) capability uniquely identifies the drive

www.seagate.com Introduction

#### 1.1 About the SATA interface

The Serial ATA (SATA) interface provides several advantages over the traditional (parallel) ATA interface. The primary advantages include:

- Easy installation and configuration with true plug-and-play connectivity. It is not necessary to set any jumpers or other configuration options.
- Thinner and more flexible cabling for improved enclosure airflow and ease of installation.
- Scalability to higher performance levels.

In addition, SATA makes the transition from parallel ATA easy by providing legacy software support. SATA was designed to allow users to install a SATA host adapter and SATA disk drive in the current system and expect all of the existing applications to work as normal.

The SATA interface connects each disk drive in a point-to-point configuration with the SATA host adapter. There is no master/slave relationship with SATA devices like there is with parallel ATA. If two drives are attached on one SATA host adapter, the host operating system views the two devices as if they were both "masters" on two separate ports. This essentially means both drives behave as if they are Device 0 (master) devices.

The SATA host adapter and drive share the function of emulating parallel ATA device behavior to provide backward compatibility with existing host systems and software. The Command and Control Block registers, PIO and DMA data transfers, resets, and interrupts are all emulated.

The SATA host adapter contains a set of registers that shadow the contents of the traditional device registers, referred to as the Shadow Register Block. All SATA devices behave like Device 0 devices. For additional information about how SATA emulates parallel ATA, refer to the "Serial ATA International Organization: Serial ATA Revision 3.2". The specification can be downloaded from <a href="https://www.sata-io.org">www.sata-io.org</a>.

Note

The host adapter may, optionally, emulate a master/slave environment to host software where two devices on separate SATA ports are represented to host software as a Device 0 (master) and Device 1 (slave) accessed at the same set of host bus addresses. A host adapter that emulates a master/slave environment manages two sets of shadow registers. This is not a typical SATA environment.

# 2.0 Drive Specifications

Unless otherwise noted, all specifications are measured under ambient conditions, at 25°C, and nominal power. For convenience, the phrases *the drive* and *this drive* are used throughout this manual to indicate the following drive models:

ST8000VX0022

ST6000VX0023

ST4000VX007

ST3000VX010

ST2000VX008

ST1000VX005

## 2.1 Specification summary tables

The specifications listed in **Table 1** are for quick reference. For details on specification measurement or definition, refer to the appropriate section of this manual.

 Table 1
 Drive specifications summary for 8TB and 6TB models

Drive Specification*	ST8000VX0022	ST6000VX0023	
Formatted capacity (512 bytes/sector)**	8000GB (8TB)	6000GB (6TB)	
Guaranteed sectors	15,628,053,168	11,721,045,168	
Heads	12	10	
Disks	6 5		
Bytes per sector (4K physical emulated at 512-byte sectors)	te sectors) 4096		
Default sectors per track	6	3	
Default read/write heads	1	6	
Default cylinders	16,3	383	
Recording density (max)	2177KBPI	1984KBPI	
Track density (avg)	370	KTPI	
Areal density (avg)	802Gb/in <sup>2</sup>	732Gb/in <sup>2</sup>	
Internal data transfer rate (max)	1981	Mb/s	
Maximum sustained data rate, OD read (MB/s)	210/	MB/s	
ATA data-transfer modes supported	PIO modes: 0 to 4 Multiword DMA modes: 0 to 2 Ultra DMA modes 0 to 6		
I/O data-transfer rate (max)	600MB/s		
Cache buffer	256MB		
Height (max)	26.1mm / 1.028 in		
Width (max)	101.6mm	/ 4.010 in	
Length (max)	146.99mm	n / 5.787 in	
Weight (max)	780g / 1.72 lb	705g / 1.55 lb	
Average latency	4.0	ms	
Average seek, read (typical) Average seek, write (typical)		5ms 5ms	
Startup current (typical) 12V	1.8	BA	
Voltage tolerance (including noise)	5V: <u>-</u> 12V: -	±5% ±10%	
Non-Operating (Ambient °C)	-40 t	o 70	
Operating ambient temperature (min °C)	5		
Operating temperature (drive case max °C)	70 <sup>†</sup>		
Temperature gradient	20°C per hour max (operating) 30°C per hour max (nonoperating)		
Relative humidity	5% to 90% (operating) 5% to 95% (nonoperating)		
Relative humidity gradient (max)	30% pe	er hour	

Table 1 Drive specifications summary for 8TB and 6TB models (continued)

Drive Specification*	ST8000VX0022	ST6000VX0023		
Wet bulb temperature (max)	26°C max (operating) 29°C max (nonoperating)			
Altitude, operating	−304m to 3048m (−1000 ft to 10,000 ft)			
Altitude, non-operating (below mean sea level, max)		12,192m 40,000+ ft)		
Operational Shock (max)	70 Gs	at 2ms		
Non-Operational Shock (max)	250 Gs	at 2ms		
Vibration, operating	22Hz to 350	Limited displacement OHz: 0.50 Gs OHz: 0.25 Gs		
Vibration, non-operating	22Hz to 35	Hz: 3.0 Gs 0Hz: 3.0 Gs 00Hz: 3.0 Gs		
Drive acoustics, sound power				
ldle***	2.7 bels (typical) 2.8 bels (max)			
Seek	2.8 bels (typical) 2.9 bels (max)			
Non-recoverable read errors	1 per 10 <sup>15</sup> bits read			
Mean time between failures (MTBF), hours	1M			
Rated Workload	Average annualized workload rating: <180 TB/year. The AFR specification for the product assumes the I/O workload does not ex the average annualized workload rate limit of 180 TB/year. Workloads exceed the annualized rate may degrade the product AFR and impact reliabilities experienced by the particular application. The average annualized workload limit is in units of TB per calendar year.			
Warranty	To determine the warranty for a specific drive, use a web browser to accessful following web page: <a href="http://www.seagate.com/support/warranty-and-replacements/">http://www.seagate.com/support/warranty-and-replacements/</a> From this page, click on "Is my Drive under Warranty". Users will be ask provide the drive serial number, model number (or part number) and coun purchase. The system will display the warranty information for the drive.			
Load/Unload cycles (25°C, 50% rel. humidity)	300	,000		
Supports Hotplug operation per the Serial ATA Revision 3.2 specification	Yes			

#### The following table footnotes apply to **Table 1** and **Table 2**:

- \* All specifications above are based on native configurations.
- \*\* One GB equals one billion bytes and 1TB equals one trillion bytes when referring to hard drive capacity. Accessible capacity may vary depending on operating environment and formatting.
- \*\*\* During periods of drive idle, some offline activity may occur according to the S.M.A.R.T. specification, which may increase acoustic and power to operational levels.
- Seagate does not recommend operating at sustained case temperatures above 60°C. Operating at higher temperatures will reduce useful life of the product.

 Table 2
 Drive specifications summary for 4TB - 1TB models

Drive Specification*	ST4000VX007	ST1000VX005			
Formatted capacity (512 bytes/sector)**	4000GB (4TB)	3000GB (3TB)	2000GB (2TB)	1000GB (1TB)	
Guaranteed sectors	7,814,037,168	7,814,037,168 5,860,533,168 3,907,029,168			
Heads	6	6/5	4	2	
Disks	3 3 2			1	
Bytes per sector (4K physical emulated at 512-byte sectors)		40	996		
Default sectors per track		6	53		
Default read/write heads	16				
Default cylinders		16,	383		
Recording density (max)	2089kBPI	1740	OkBPI	1807kFCI	
Track density (avg)	388ktracks/in	346ktr	acks/in	352ktracks/in	
Areal density (avg)	810Gb/in <sup>2</sup>	6130	ib/in <sup>2</sup>	625Gfc/in <sup>2</sup>	
Internal data transfer rate (max)	2107Mb/s	1813	BMb/s	2147Mb/s	
Maximum sustained data rate, OD read (MB/s)	190MB/s		180MB/s		
ATA data-transfer modes supported	PIO modes: 0 to 4  Multiword DMA modes: 0 to 2  Ultra DMA modes 0 to 6				
I/O data-transfer rate (max)		600	MB/s		
Cache buffer		64	MB		
Height (max)				20.20mm / 0.795 in	
Width (max)	101.6mm /4.010 in				
Length (max)		146.99mn	n / 5.787 in		
Weight (max)	635g / 1.345 lb	610g /	1.40 lb	415g / 0.915 lb	
Average latency		5.1	ms		
Power-on to ready (max)		<17.0s		<6.0s	
Standby to ready (max)		<17.0s		<6.0s	
Average seek, read (typical) Average seek, write (typical)		<12.0ms <12.0ms		<8.5ms <19.5ms	
Startup current (typical) 12V		1.8A		1.2A	
Voltage tolerance (including noise)			±5% ±10%		
Non-Operating (Ambient °C)		-40	to 70		
Operating ambient temperature (min °C)			5		
Operating temperature (drive case max °C)		7(	0 †		
Temperature gradient	20°C per hour max (operating) 30°C per hour max (nonoperating)				
Relative humidity	5% to 90% (operating) 5% to 95% (nonoperating)				
Relative humidity gradient (max)	30% per hour				
Wet bulb temperature (max)	26°C max (operating) 29°C max (nonoperating)				
Altitude, operating	-304m to 3048m (-1000 ft to 10,000 ft)				
Altitude, non-operating (below mean sea level, max)	-304m to12,192m (-1000ft to 40,000+ ft)				
Operational Shock (max)	80 Gs at 2ms				

Table 2 Drive specifications summary for 4TB - 1TB models (continued)

Drive Specification*	ST4000VX007 ST3000VX010 ST2000VX008 ST1000VX			
Non-Operational Shock (max)	300 Gs at 2ms			
Vibration, operating	2Hz to 22Hz: 0.25 Gs, Limited displacement 22Hz to 350Hz: 0.50 Gs 350Hz to 500Hz: 0.25 Gs			nt
Vibration, non-operating	5Hz to 22Hz: 3.0 Gs 22Hz to 350Hz: 3.0 Gs 350Hz to 500Hz: 3.0 Gs			
Drive acoustics, sound power				
ldle***		(typical) s (max)		(typical) s (max)
Seek		2.5 bels (typical) 2.1 bels ( 2.6 bels (max) 2.2 bels		
Non-recoverable read errors	1 per 10 <sup>14</sup> bits read			
Mean time between failures (MTBF), hours	1M			
Rated Workload	Average annualized workload rating: <180 TB/year.  The AFR specification for the product assumes the I/O workload does not exceed the average annualized workload rate limit of 180 TB/year. Workload exceeding the annualized rate may degrade the product AFR and impact reliability as experienced by the particular application. The average annualized workload rate limit is in units of TB per calendar year.			TB/year. Workloads t AFR and impact
Warranty	To determine the warranty for a specific drive, use a web browser to access th following web page: <a href="http://www.seagate.com/support/warranty-and-replacements/">http://www.seagate.com/support/warranty-and-replacements/</a> From this page, click on "Is my Drive under Warranty". Users will be asked t provide the drive serial number, model number (or part number) and countr of purchase. The system will display the warranty information for the drive.			ents/ ers will be asked to mber) and country
Load/Unload cycles (25°C, 50% rel. humidity)	300,000 —			_
Contact start-stop cycles (25°C, 50% rel. humidity)				50,000
Supports Hotplug operation per the Serial ATA Revision 3.2 specification	Yes			

## 2.2 Formatted capacity

Model	Formatted capacity*	Guaranteed sectors	Bytes per sector
ST8000VX0022	8000GB	15,628,053,168	
ST6000VX0023	6000GB	11,721,045,168	
ST4000VX007	4000GB	7,814,037,168	4096
ST3000VX010	3000GB	5,860,533,168	4090
ST2000VX008	2000GB	3,907,029, 168	
ST1000VX005	1000GB	1,953,525,168	

<sup>\*</sup>One GB equals one billion bytes and 1TB equals one trillion bytes when referring to hard drive capacity. Accessible capacity may vary depending on operating environment and formatting.

## 2.2.1 LBA mode

When addressing these drives in LBA mode, all blocks (sectors) are consecutively numbered from 0 to n–1, where n is the number of guaranteed sectors as defined above.

See Section 4.3.1, "Identify Device command" (words 60-61 and 100-103) for additional information about 48-bit addressing support of drives with capacities over 137GB.

## 2.3 Default logical geometry

Cylinders: 16,383Read/write heads: 16Sectors per track: 63

#### **LBA** mode

When addressing these drives in LBA mode, all blocks (sectors) are consecutively numbered from 0 to n-1, where n is the number of guaranteed sectors as defined above.

#### 2.4 Seek time

Seek measurements are taken with nominal power at 25°C ambient temperature. All times are measured using drive diagnostics. The specifications in the table below are defined as follows:

- Track-to-track seek time is an average of all possible single-track seeks in both directions.
- Average seek time is a true statistical random average of at least 5000 measurements of seeks between random tracks, less overhead.

Typical seek times (ms)	Read	Write	
Track-to-track	1.0	1.2	
Average (1TB - 4TB models)	<12.0	<12.0	
Average (6TB and 8TB models)	8.5	9.5	
Average latency (1TB - 4TB models)	5.1		
Average latency (6TB and 8TB models)	4.0		

Note

These drives are designed to consistently meet the seek times represented in this manual. Physical seeks, regardless of mode (such as track-to-track and average), are expected to meet the noted values. However, due to the manner in which these drives are formatted, benchmark tests that include command overhead or measure logical seeks may produce results that vary from these specifications.

## 2.5 Start/stop times

The start/stop times listed below are for all models.

	8TB models	6TB models	2TB, 3TB and 4TB models	1TB models
Power-on to ready (in seconds)	30 (max)	23 (typical)	15 (typical) / 17 (max)	<6 (max)
Standby to ready (in seconds)	30 (max)	/ 30 (max)	15 (typical) / 17 (max)	<6 (max)
Ready to spindle stop (in seconds)	12 (max)	23 (max)	10 (typical) / 11	(max)

Time-to-ready may be longer than normal if the drive power is removed without going through normal OS powerdown procedures.

## 2.6 Power specifications

The drive receives DC power (+5V or +12V) through a native SATA power connector. Refer to Figure 2 on page 22.

## 2.6.1 Power consumption

Power requirements for the drives are listed in **Table 6**. Typical power measurements are based on an average of drives tested, under nominal conditions, using 5.0V and 12.0V input voltage at 25°C ambient temperature.

- Spinup power
  - Spinup power is measured from the time of power-on to the time that the drive spindle reaches operating speed.
- Read/write power and current
  - Read/write power is measured with the heads on track, based on a 16-sector write followed by a 32-ms delay, then a 16-sector read followed by a 32-ms delay.
- Operating power and current
  - Operating power is measured using 40 percent random seeks, 40 percent read/write mode (1 write for each 10 reads) and 20 percent drive idle mode.
- Idle mode power
  - Idle mode power is measured with the drive up to speed, with servo electronics active and with the heads in a random track location.
- · Standby mode
  - During Standby mode, the drive accepts commands, but the drive is not spinning, and the servo and read/write electronics are in power-down mode.

Table 3 DC power requirements for 1TB models

Power dissipation (1-disk values shown)	Avg (watts 25°C)	Avg 5V typ amps	Avg 12V typ amps
Spinup	_	_	1.2
Idle* †	2.502	0.152	0.145
Operating	3.676	0.385	0.145
Standby	0.58	0.096	0.0084
Sleep	0.58	0.096	0.0084

Table 4 DC power requirements for 2TB models

Power dissipation (2-disk values shown)	Avg (watts 25°C)	Avg 5V typ amps	Avg 12V typ amps
Spinup	_	_	1.8
ldle* †	3.56	0.171	0.225
Operating	4.30	0.308	0.233
Standby	0.50	0.09	0.005
Sleep	0.50	0.09	0.005

Table 5 DC power requirements for 3TB and 4TB models

Power dissipation (4-disk values shown)	Avg (watts 25°C)	Avg 5V typ amps	Avg 12V typ amps
Spinup	_	_	1.8
ldle* †	3.95	0.116	0.28
Operating	4.80	0.288	0.283
Standby	0.50	0.09	0.005
Sleep	0.50	0.09	0.005

Table 6 DC power requirements for 6TB & 8TB models

Power dissipation (6-disk values shown)	Avg (watts 25° C)	Avg 5V typ amps	Avg 12V typ amps
Spinup	_	_	1.8
Idle*†	7.60	0.191	0.553
Operating	8.80	0.23	0.54
Standby	0.60	0.09	0.01
Sleep	0.60	0.09	0.01

<sup>\*</sup> Idle1. During periods of drive idle, some offline activity may occur according to the S.M.A.R.T. specification, which may increase acoustic and power to operational levels.

## 2.6.2 Typical current profile

Figure 1 Typical Current Profile for 2TB to 8TB models (5V & 12V)



<sup>† 5</sup>W IDLE with DIPLM Enabled

#### 2.6.3 Conducted noise

Input noise ripple is measured at the host system power supply across an equivalent 80-ohm resistive load on the +12 volt line or an equivalent 15-ohm resistive load on the +5 volt line.

- Using 12-volt power, the drive is expected to operate with a maximum of 120 mV peak-to-peak square-wave injected noise at up to 10MHz.
- Using 5-volt power, the drive is expected to operate with a maximum of 100 mV peak-to-peak square-wave injected noise at up to 10MHz.

Note

Equivalent resistance is calculated by dividing the nominal voltage by the typical RMS read/write current.

## 2.6.4 Voltage tolerance

Voltage tolerance (including noise):

- 5V ±5%
- 12V ±10%

## 2.6.5 Power-management modes

The drive provides programmable power management to provide greater energy efficiency. In most systems, users can control power management through the system setup program. The drive features the following power-management modes:

Power modes	Heads	Spindle	Buffer
Active	Tracking	Rotating	Enabled
Idle	Tracking	Rotating	Enabled
Standby	Parked	Stopped	Enabled
Sleep	Parked	Stopped	Disabled

Active mode

The drive is in Active mode during the read/write and seek operations.

· Idle mode

The buffer remains enabled, and the drive accepts all commands and returns to Active mode any time disk access is necessary.

· Standby mode

The drive enters Standby mode when the host sends a Standby Immediate command. If the host has set the standby timer, the drive can also enter Standby mode automatically after the drive has been inactive for a specifiable length of time. The standby timer delay is established using a Standby or Idle command. In Standby mode, the drive buffer is enabled, the heads are parked and the spindle is at rest. The drive accepts all commands and returns to Active mode any time disk access is necessary.

Sleep mode

The drive enters Sleep mode after receiving a Sleep command from the host. In Sleep mode, the drive buffer is disabled, the heads are parked and the spindle is at rest. The drive leaves Sleep mode after it receives a Hard Reset or Soft Reset from the host. After receiving a reset, the drive exits Sleep mode and enters Standby mode with all current translation parameters intact.

• Idle and Standby timers

Each time the drive performs an Active function (read, write or seek), the standby timer is reinitialized and begins counting down from its specified delay times to zero. If the standby timer reaches zero before any drive activity is required, the drive makes a transition to Standby mode. In both Idle and Standby mode, the drive accepts all commands and returns to Active mode when disk access is necessary.

## 2.7 Environmental specifications

This section provides the temperature, humidity, shock, and vibration specifications for NAS HDDs. This section provides the temperature, humidity, shock, and vibration specifications.

## 2.7.1 Drive case temperature

Ambient temperature is defined as the temperature of the environment immediately surrounding the drive. Above 1000ft. (305 meters), the maximum temperature is derated linearly by 1°C every 1000 ft. Drive case temperature should be measured at the location indicated in **Figure 6**.

## 2.7.2 Temperature

Non-operating (Ambient)	-40° to 70°C (-40° to 158°F)
Operating ambient (min °C)	5° (41°F)
Operating (Drive case max °C)	70 <sup>†</sup> (158°F)

<sup>&</sup>lt;sup>†</sup> Seagate does not recommend operating at sustained case temperatures above 60°C. Operating at higher temperatures will reduce useful life of the product.

## 2.7.3 Temperature gradient

Operating	20°C per hour (36°F per hour max), without condensation
Non-operating	30°C per hour (54°F per hour max)

# 2.7.4 Humidity

#### 2.7.4.1 Relative humidity

Operating	5% to 90% non-condensing (30% per hour max)
Nonoperating	5% to 95% non-condensing (30% per hour max)

#### 2.7.4.2 Wet bulb temperature

Operating	26°C / 78.8°F (rated)
Non-operating	29°C / 84.2°F (rated)

## 2.7.5 Altitude

Operating	–304m to 3048m (–1000 ft. to 10,000 ft.)
Non-operating	-304m to 12,192m (-1000 ft. to 40,000+ ft.)

#### 2.7.6 Shock

All shock specifications assume that the drive is mounted securely with the input shock applied at the drive mounting screws. Shock may be applied in the X, Y or Z axis.

#### 2.7.6.1 Operating shock

#### 1TB - 4TB

These drives comply with the performance levels specified in this document when subjected to a maximum operating shock of 80 Gs based on half-sine shock pulses of 2ms during read operations. Shocks should not be repeated more than 2 times per second.

#### 6TB and 8TB

These drives comply with the performance levels specified in this document when subjected to a maximum operating shock of 70 Gs based on half-sine shock pulses of 2ms during read operations. Shocks should not be repeated more than 2 times per second.

#### 2.7.6.2 Non-operating shock

#### **1TB-4TB**

The non-operating shock level that the drive can experience without incurring physical damage or degradation in performance when subsequently put into operation is 300 Gs based on a non-repetitive half-sine shock pulse of 2ms duration.

#### 6TB and 8TB

The non-operating shock level that the drive can experience without incurring physical damage or degradation in performance when subsequently put into operation is 250 Gs based on a non-repetitive half-sine shock pulse of 2ms duration.

#### 2.7.7 Vibration

All vibration specifications assume that the drive is mounted securely with the input vibration applied at the drive mounting screws. Vibration may be applied in the X, Y or Z axis. Throughput may vary if improperly mounted.

#### 2.7.7.1 Operating vibration

The maximum vibration levels that the drive may experience while meeting the performance standards specified in this document are specified below.

2Hz to 22Hz	0.25 Gs (Limited displacement)
22Hz to 350Hz	0.50 Gs
350Hz to 500Hz	0.25 Gs

## 2.7.7.2 Non-operating vibration

The maximum non-operating vibration levels that the drive may experience without incurring physical damage or degradation in performance when subsequently put into operation are specified below.

5Hz to 22Hz	3.0 Gs (Limited displacement)
22Hz to 350Hz	3.0 Gs
350Hz to 500Hz	3.0 Gs

#### 2.8 Acoustics

Drive acoustics are measured as overall A-weighted acoustic sound power levels (no pure tones). All measurements are consistent with ISO document 7779. Sound power measurements are taken under essentially free-field conditions over a reflecting plane. For all tests, the drive is oriented with the cover facing upward.

Note

For seek mode tests, the drive is placed in seek mode only.
The number of seeks per second is defined by the following equation:

(Number of seeks per second = 0.4 / (average latency + average access time)

Table 7 Fluid Dynamic Bearing (FDB) motor acoustics

	Idle*	Seek
1TB & 2TB models	1.9 bels (typ) 2.0 bels (max)	2.1 bels (typ) 2.2 bels (max)
3TB & 4TB models	2.3 bels (typical) 2.4 bels (max)	2.5 bels (typical) 2.6 bels (max)
6TB & 8TB models	2.7 bels (typical) 2.8 bels (max)	2.8 bels (typical) 2.9 bels (max)

<sup>\*</sup>During periods of drive idle, some offline activity may occur according to the S.M.A.R.T. specification, which may increase acoustic and power to operational levels.

## 2.8.1 Test for Prominent Discrete Tones (PDTs)

Seagate follows the ECMA-74 standards for measurement and identification of PDTs. An exception to this process is the use of the absolute threshold of hearing. Seagate uses this threshold curve (originated in ISO 389-7) to discern tone audibility and to compensate for the inaudible components of sound prior to computation of tone ratios according to Annex D of the ECMA-74 standards.

## 2.9 Electromagnetic immunity

When properly installed in a representative host system, the drive operates without errors or degradation in performance when subjected to the radio frequency (RF) environments defined in **Table 8**.

Table 8 Radio frequency environments

Test	Description	Performance level	Reference standard
Electrostatic discharge	Contact, HCP, VCP: ± 4 kV; Air: ± 8 kV	В	EN61000-4-2: 95
Radiated RF immunity	80MHz to 1,000MHz, 3 V/m, 80% AM with 1kHz sine 900MHz, 3 V/m, 50% pulse modulation @ 200Hz	А	EN61000-4-3: 96 ENV50204: 95
Electrical fast transient	± 1 kV on AC mains, ± 0.5 kV on external I/O	В	EN61000-4-4: 95
Surge immunity	± 1 kV differential, ± 2 kV common, AC mains	В	EN61000-4-5: 95
Conducted RF immunity	150kHz to 80MHz, 3 Vrms, 80% AM with 1kHz sine	A	EN61000-4-6: 97
Voltage dips, interrupts	0% open, 5 seconds 0% short, 5 seconds 40%, 0.10 seconds 70%, 0.01 seconds	C C C B	EN61000-4-11: 94

## 2.10 Reliability - Mean Time Between Failure

The product will achieve a Mean Time Between Failure Rate (MTBF) of 1,000,000 hours when operated in an environment of ambient air temperatures of 25°C. Operation at temperatures outside the specifications shown in **Section 2.7** may decrease the product MTBF. MTBF is a population statistic that is not relevant to individual units.

- MTBF specifications are based on the following assumptions for NAS environments:
- 8760 power-on hours per year
- 10,000 average motor start/stop cycles per year
- Operations at nominal voltages
- Temperatures outside the specifications in Section 2.7 may reduce the product reliability.

Operation at excessive I/O duty cycle may degrade product reliability. The NAS environment of power-on hours, temperature, and I/O duty cycle affect the product MTBF. The MTBF will be degraded if used in an enterprise application.

### **2.10.1 Storage**

Maximum storage periods are 180 days within original unopened Seagate shipping package or 60 days unpackaged within the defined non-operating limits (refer to environmental section in this manual). Storage can be extended to 1 year packaged or unpackaged under optimal environmental conditions (25°C, <40% relative humidity non-condensing, and non-corrosive environment). During any storage period the drive non-operational temperature, humidity, wet bulb, atmospheric conditions, shock, vibration, magnetic and electrical field specifications should be followed.

## 2.11 Warranty

To determine the warranty for a specific drive, use a web browser to access the following web page: http://www.seagate.com/support/warranty-and-replacements/

From this page, click on "Is my Drive under Warranty". Users will be asked to provide the drive serial number, model number (or part number) and country of purchase. The system will display the warranty information for the drive.

## 2.12 Agency certification

## 2.12.1 Safety certification

These products are certified to meet the requirements of UL60950-1, CSA60950-1 and EN60950 and so marked as to the certify agency.

## 2.12.2 Electromagnetic compatibility

Hard drives that display the CE mark comply with the European Union (EU) requirements specified in the Electromagnetic Compatibility Directive 2004/108/EC (Until 19th April, 2016) and 2014/30/EU (From 20th April, 2016). Testing is performed to the levels specified by the product standards for Information Technology Equipment (ITE). Emission levels are defined by EN 55022, Class B and the immunity levels are defined by EN 55024.

Drives are tested in representative end-user systems. Although CE-marked Seagate drives comply with the directives when used in the test systems, we cannot guarantee that all systems will comply with the directives. The drive is designed for operation inside a properly designed enclosure, with properly shielded I/O cable (if necessary) and terminators on all unused I/O ports. Computer manufacturers and system integrators should confirm EMC compliance and provide CE marking for their products.

#### Korean RRA

If these drives have the Korean Communications Commission (KCC) logo, they comply with paragraph 1 of Article 11 of the Electromagnetic Compatibility control Regulation and meet the Electromagnetic Compatibility (EMC) Framework requirements of the Radio Research Agency (RRA) Communications Commission, Republic of Korea.

These drives have been tested and comply with the Electromagnetic Interference/Electromagnetic Susceptibility (EMI/EMS) for Class B products. Drives are tested in a representative, end-user system by a Korean-recognized lab.

기 종 별	사 용 자 안 내 문
B 급 기기 (가정용 방송통신기자재)	이 기기는 가정용(B급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

#### **Australian RCM Compliance Mark**

If these models have the RCM marking, they comply with the Australia/New Zealand Standard AS/NZS CISPR22: 2009 and meet the Electromagnetic Compatibility (EMC) Framework requirements of the Australian Communication and Media Authority (ACMA).

#### 2.12.3 FCC verification

These drives are intended to be contained solely within a personal computer or similar enclosure (not attached as an external device). As such, each drive is considered to be a subassembly even when it is individually marketed to the customer. As a subassembly, no Federal Communications Commission verification or certification of the device is required.

Seagate has tested this device in enclosures as described above to ensure that the total assembly (enclosure, disk drive, motherboard, power supply, etc.) does comply with the limits for a Class B computing device, pursuant to Subpart J, Part 15 of the FCC rules. Operation with non-certified assemblies is likely to result in interference to radio and television reception.

**Radio and television interference.** This equipment generates and uses radio frequency energy and if not installed and used in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception.

This equipment is designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television, which can be determined by turning the equipment on and off, users are encouraged to try one or more of the following corrective measures:

- Reorient the receiving antenna.
- Move the device to one side or the other of the radio or TV.
- Move the device farther away from the radio or TV.
- Plug the computer into a different outlet so that the receiver and computer are on different branch outlets.

If necessary, users should consult the dealer or an experienced radio/television technician for additional suggestions. Users may find helpful the following booklet prepared by the Federal Communications Commission: *How to Identify and Resolve Radio-Television Interference Problems*. This booklet is available from the Superintendent of Documents, U.S. Government Printing Office, Washington, DC 20402. Refer to publication number 004-000-00345-4.

### 2.13 Environmental protection

Seagate designs its products to meet environmental protection requirements worldwide, including regulations restricting certain chemical substances.

#### 2.13.1 European Union Restriction of Hazardous Substances (RoHS) Directive

The European Union Restriction of Hazardous Substances (RoHS) Directive, restricts the presence of chemical substances, including Lead, Cadmium, Mercury, Hexavalent Chromium, PBB and PBDE, in electronic products, effective July 2006. This drive is manufactured with components and materials that comply with the RoHS Directive.

## 2.13.2 China Requirements — China RoHS 2

China RoHS 2 refers to the Ministry of Industry and Information Technology Order No. 32, effective July 1, 2016, titled Management Methods for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products. To comply with China RoHS 2, we determined this product's Environmental Protection Use Period (EPUP) to be 20 years in accordance with the Marking for the Restricted Use of Hazardous Substances in Electronic and Electrical Products, SJT 11364-2014.

中国电器电子产品有害物质限制使用管理办法

(Management Methods for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products China RoHS)

产品中有害物质的名称及含量

(Name and Content of the Hazardous Substances in Product)





部件名称	有害物质 Hazardous Substances					
可》什么 你 Part Name	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (CF (VI))	多溴联苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
印刷电路板组装 PCBA	х	O	O	0	0	o
机壳 Chassis	х	0	0	O	0	o

本表格依据 SJ/T 11364 的规定编制。

This table is prepared in accordance with the provisions of SJ/T 11364-2014

- O:表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。
- **O:** Indicates that the hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T26572.
- X:表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。
- **X:** Indicates that the hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T26572.

#### 2.16 Corrosive environment

Seagate electronic drive components pass accelerated corrosion testing equivalent to 10 years exposure to light industrial environments containing sulfurous gases, chlorine and nitric oxide, classes G and H per ASTM B845. However, this accelerated testing cannot duplicate every potential application environment. Users should use caution exposing any electronic components to uncontrolled chemical pollutants and corrosive chemicals as electronic drive component reliability can be affected by the installation environment. The silver, copper, nickel and gold films used in Seagate products are especially sensitive to the presence of sulfide, chloride, and nitrate contaminants. Sulfur is found to be the most damaging. In addition, electronic components should never be exposed to condensing water on the surface of the printed circuit board assembly (PCBA) or exposed to an ambient relative humidity greater than 95%. Materials used in cabinet fabrication, such as vulcanized rubber, that can outgas corrosive compounds should be minimized or eliminated. The useful life of any electronic equipment may be extended by replacing materials near circuitry with sulfide-free alternatives.

# 3.0 Configuring and Mounting the Drive

This section contains the specifications and instructions for configuring and mounting the drive.

## 3.1 Handling and static-discharge precautions

After unpacking, and before installation, the drive may be exposed to potential handling and electrostatic discharge (ESD) hazards. Observe the following standard handling and static-discharge precautions:

#### Caution

- Before handling the drive, put on a grounded wrist strap, or ground oneself frequently by touching the metal chassis of a computer that is plugged into a grounded outlet. Wear a grounded wrist strap throughout the entire installation procedure.
- Handle the drive by its edges or frame only.
- The drive is extremely fragile—handle it with care. Do not press down on the drive top cover.
- Always rest the drive on a padded, antistatic surface until mounting it in the computer.
- Do not touch the connector pins or the printed circuit board.
- Do not remove the factory-installed labels from the drive or cover them with additional labels. Removal voids the warranty. Some factory-installed labels contain information needed to service the drive. Other labels are used to seal out dirt and contamination.

## 3.2 Configuring the drive

Each drive on the SATA interface connects point-to-point with the SATA host adapter. There is no master/slave relationship because each drive is considered a master in a point-to-point relationship. If two drives are attached on one SATA host adapter, the host operating system views the two devices as if they were both "masters" on two separate ports. Both drives behave as if they are Device 0 (master) devices.

SATA drives are designed for easy installation. It is usually not necessary to set any jumpers on the drive for proper operation; however, if users connect the drive and receive a "drive not detected" error, the SATA-equipped motherboard or host adapter may use a chipset that does not support SATA speed autonogotiation.


#### 3.3 SATA cables and connectors

The SATA interface cable consists of four conductors in two differential pairs, plus three ground connections. The cable size may be 30 to 26 AWG with a maximum length of one meter (39.37 inches). See **Table 10** for connector pin definitions. Either end of the SATA signal cable can be attached to the drive or host.

For direct backplane connection, the drive connectors are inserted directly into the host receptacle. The drive and the host receptacle incorporate features that enable the direct connection to be hot pluggable and blind mateable.

For installations which require cables, users can connect the drive as illustrated in Figure 2.

Figure 2 Attaching SATA cabling

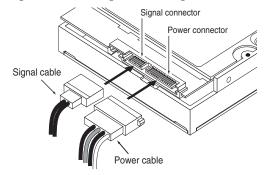

Each cable is keyed to ensure correct orientation. SkyHawk drives support latching SATA connectors.

## 3.4 Drive mounting

Users can mount the drive in any orientation using four screws in the side-mounting holes or four screws in the bottom-mounting holes. Refer to **Figure 6** for drive mounting dimensions. Follow these important mounting precautions when mounting the drive:

- Allow a minimum clearance of 0.030 inches (0.76mm) around the entire perimeter of the drive for cooling.
- Use only 6-32 UNC mounting screws.
- The screws should be inserted no more than 0.120 inch (3.05mm) into the bottom or side mounting holes.
- Do not overtighten the mounting screws (maximum torque: 6 inch-lb).

Figure 3 Mounting dimensions (8TB)

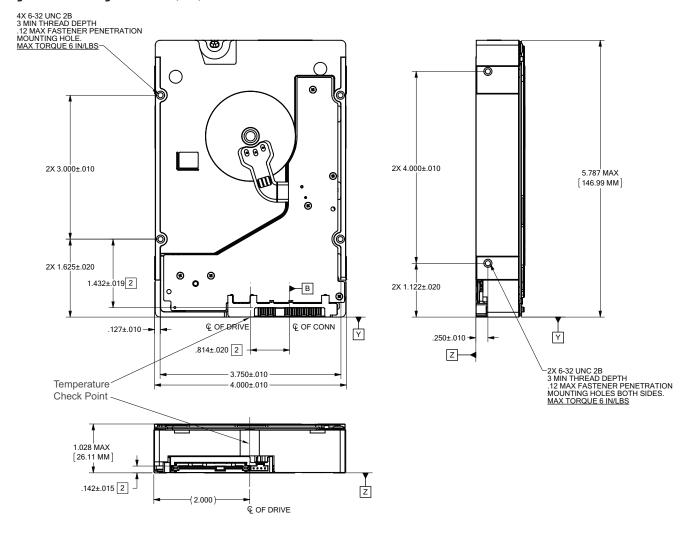


Figure 4 Mounting dimensions (6TB)

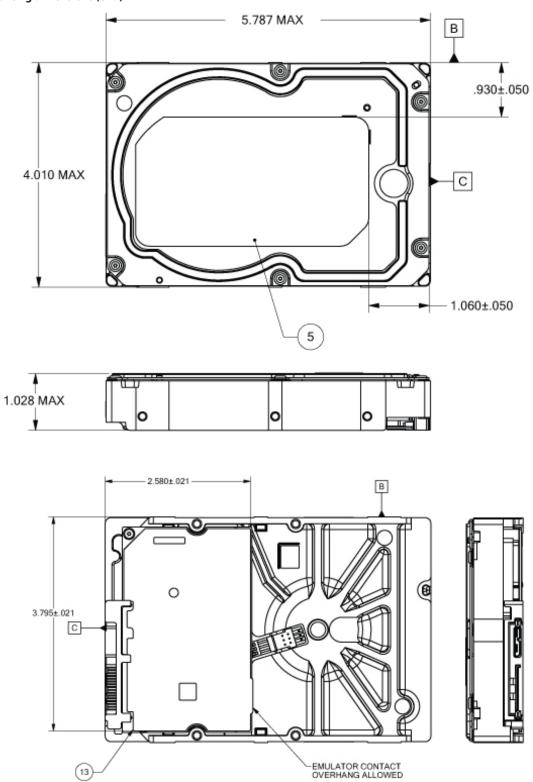


Figure 5 Mounting dimensions (4TB)

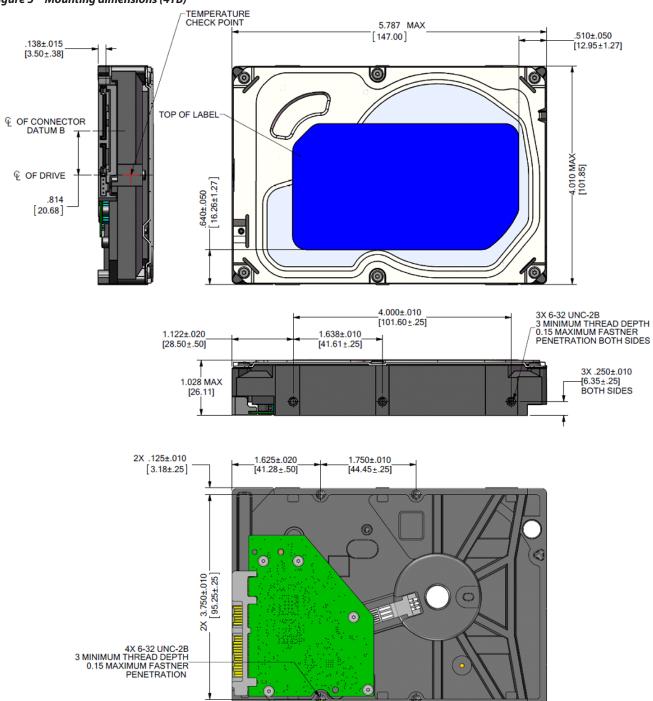


Figure 6 Mounting dimensions (3TB - 2TB)


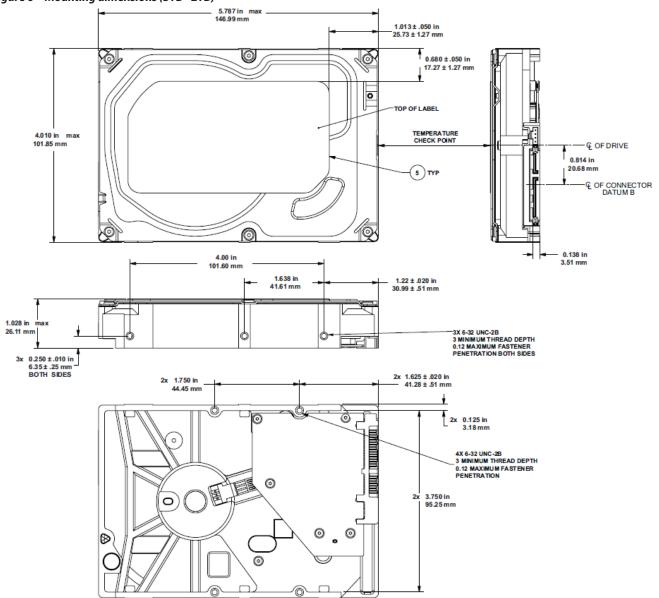


Figure 7 Mounting dimensions (1TB)

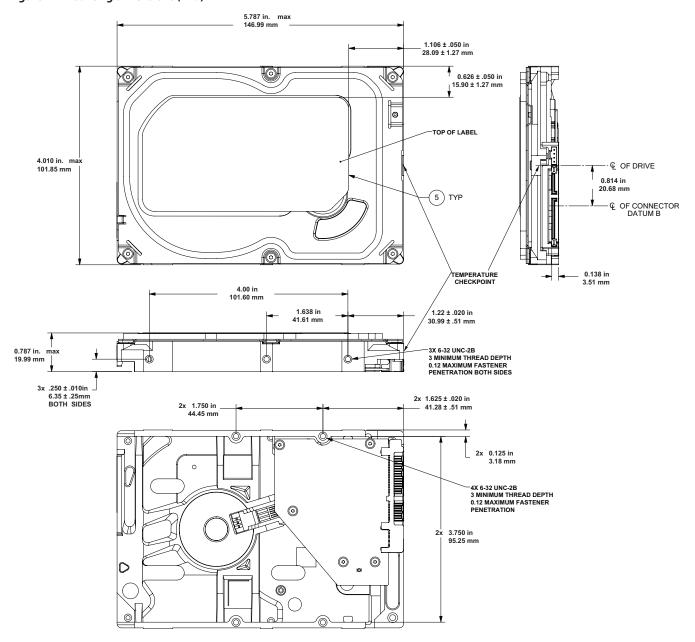

## 4.0 SATA Interface

These drives use the industry-standard Serial ATA (SATA) interface that supports FIS data transfers. It supports ATA programmed input/output (PIO) modes 0 to 4; multiword DMA modes 0 to 2, and Ultra DMA modes 0 to 6.

For detailed information about the SATA interface, refer to the "Serial ATA: High Speed Serialized AT Attachment" specification.

## 4.1 Hot-Plug compatibility

SkyHawk drives incorporate connectors which enable users to hot plug these drives in accordance with the SATA Revision 3.2 specification. This specification can be downloaded from <a href="www.serialata.org">www.serialata.org</a>.

## 4.2 SATA device plug connector pin definitions

**Table 10** summarizes the signals on the SATA interface and power connectors.

Table 10 SATA connector pin definitions

Tuble To SATE	le 10 SATA connector pin definitions				
Segment	Pin	Function	Definition		
Signal	S1	Ground	2nd mate		
	S2	A+	Differential signal pair A from Phy		
	S3	A-			
	S4	Ground	2nd mate		
	S5	B-	Differential signal pair B from Phy		
	S6	B+	Differential signal pair 6 from Phy		
	S7	Ground	2nd mate		
Key and spa	cing sep	arate signal and power seg	gments		
Power	P1	V <sub>33</sub>	3.3V power		
	P2	V <sub>33</sub>	3.3V power		
	P3	V <sub>33</sub>	3.3V power, pre-charge, 2nd mate		
	P4	Ground	1st mate		
	P5	Ground	2nd mate		
	P6	Ground	2nd mate		
	P7	V <sub>5</sub>	5V power, pre-charge, 2nd mate		
	P8	V <sub>5</sub>	5V power		
	P9	V <sub>5</sub>	5V power		
	P10	Ground	2nd mate		
	P11	Ground or LED signal	If grounded, drive does not use deferred spin		
	P12	Ground	1st mate.		
	P13	V <sub>12</sub>	12V power, pre-charge, 2nd mate		
	P14	V <sub>12</sub>	12V power		
	P15	V <sub>12</sub>	12V power		

#### **Notes**

- 1. All pins are in a single row, with a 1.27 mm (0.050 in) pitch.
- 2. The comments on the mating sequence apply to the case of backplane blindmate connector only. In this case, the mating sequences are:
  - the ground pins P4 and P12.
  - the pre-charge power pins and the other ground pins.
  - the signal pins and the rest of the power pins.
- 3. There are three power pins for each voltage. One pin from each voltage is used for pre-charge when installed in a blind-mate backplane configuration.
  - All used voltage pins (V<sub>x</sub>) must be terminated.

# 4.3 Supported ATA commands

The following table lists SATA standard commands that the drive supports. For a detailed description of the ATA commands, refer to the Serial ATA International Organization: Serial ATA Revision 3.2 (<a href="https://www.sata-io.org">https://www.sata-io.org</a>).

See "S.M.A.R.T. commands" on page 36 for details and subcommands used in the S.M.A.R.T. implementation.

Table 11 SATA standard commands

Check Power Mode         E5 <sub>H</sub> Device Configuration Freeze Lock         B1 <sub>H</sub> /C1 <sub>H</sub> Device Configuration Retify         B1 <sub>H</sub> /C0 <sub>H</sub> Device Configuration Retore         B1 <sub>H</sub> /C0 <sub>H</sub> Device Configuration Set         B1 <sub>H</sub> /C0 <sub>H</sub> Device Reset         08 <sub>H</sub> Download Microcode         92 <sub>H</sub> Execute Device Diagnostics         90 <sub>H</sub> Flush Cache         E7 <sub>H</sub> Flush Cache Extended         EA <sub>H</sub> Format Track         50 <sub>H</sub> Idle Individual Extended         E3 <sub>H</sub> Idle Immediate         E1 <sub>H</sub> Initialize Device Parameters         91 <sub>H</sub> Read Buffer         E4 <sub>H</sub> Read DMA         C6 <sub>H</sub> Read DMA         C6 <sub>H</sub> Read DMA Extended         25 <sub>H</sub> Read DMA Without Retries         C9 <sub>H</sub> Read Multiple         C4 <sub>H</sub> Read Multiple         C4 <sub>H</sub> Read Multiple Extended         29 <sub>H</sub> Read Mative Max Address Extended         27 <sub>H</sub> Read Sectors Without Retries         21 <sub>H</sub> Read Verify Sectors Extended         42 <sub>H</sub> Read	Command name	Command code (in hex)
Device Configuration Identify Device Configuration Restore B1H / C0H Device Configuration Set B1H / C3H Device Reset O8H Download Microcode S2H Execute Device Diagnostics 90H Flush Cache Flush Cache Flush Cache Flush Cache EKH Flush Cache	Check Power Mode	E5 <sub>H</sub>
Device Configuration Restore         B1 <sub>H</sub> / C0 <sub>H</sub> Device Reset         06 <sub>H</sub> Download Microcode         92 <sub>H</sub> Execute Device Diagnostics         90 <sub>H</sub> Flush Cache         E7 <sub>H</sub> Flush Cache Extended         EA <sub>H</sub> Format Track         50 <sub>H</sub> Identify Device         EC <sub>H</sub> Idle Immediate         E1 <sub>H</sub> Initialize Device Parameters         91 <sub>H</sub> Read Buffer         E4 <sub>H</sub> Read Buffer         E4 <sub>H</sub> Read DMA         C8 <sub>H</sub> Read DMA Without Retries         C9 <sub>H</sub> Read Log Ext         2F <sub>H</sub> Read Multiple         C4 <sub>H</sub> Read Multiple Extended         29 <sub>H</sub> Read Multiple Extended         29 <sub>H</sub> Read Sectors Extended         27 <sub>H</sub> Read Sectors Extended         24 <sub>H</sub> Read Sectors Without Retries         21 <sub>H</sub> Read Sectors Without Retries         21 <sub>H</sub> Read Verify Sectors Extended         42 <sub>H</sub> Read Verify Sectors Extended         42 <sub>H</sub> Read Verify Sectors Extended         42 <sub>H</sub> Read Verify Sectors Exten	Device Configuration Freeze Lock	B1 <sub>H</sub> /C1 <sub>H</sub>
Device Configuration Set         B1 <sub>H</sub> / C3 <sub>H</sub> Device Reset         08 <sub>H</sub> Download Microcode         92 <sub>H</sub> Execute Device Diagnostics         90 <sub>H</sub> Flush Cache         E7 <sub>H</sub> Flush Cache         E7 <sub>H</sub> Flush Cache Extended         EA <sub>H</sub> Format Track         50 <sub>H</sub> Identify Device         EC <sub>H</sub> Idle Immediate         E1 <sub>H</sub> Initialize Device Parameters         91 <sub>H</sub> Read Buffer         E4 <sub>H</sub> Read Buffer         E4 <sub>H</sub> Read DMA         C8 <sub>H</sub> Read DMA Extended         25 <sub>H</sub> Read Most Nethrout Retries         C9 <sub>H</sub> Read Multiple         C4 <sub>H</sub> Read Multiple Extended         29 <sub>H</sub> Read Multiple Extended         29 <sub>H</sub> Read Native Max Address Extended         27 <sub>H</sub> Read Sectors         20 <sub>H</sub> Read Sectors Extended         24 <sub>H</sub> Read Sectors Without Retries         21 <sub>H</sub> Read Verify Sectors Extended         42 <sub>H</sub> Read Verify Sectors Without Retries         41 <sub>H</sub> Read Verify Sectors Without Retries </td <td>Device Configuration Identify</td> <td>B1<sub>H</sub> / C2<sub>H</sub></td>	Device Configuration Identify	B1 <sub>H</sub> / C2 <sub>H</sub>
Device Reset         08 <sub>H</sub> Download Microcode         92 <sub>H</sub> Execute Device Diagnostics         90 <sub>H</sub> Flush Cache         E7 <sub>H</sub> Flush Cache Extended         EA <sub>H</sub> Format Track         50 <sub>H</sub> Identify Device         EC <sub>H</sub> Idle         E3 <sub>H</sub> Idle Immediate         E1 <sub>H</sub> Initialize Device Parameters         91 <sub>H</sub> Read Buffer         E4 <sub>H</sub> Read Buffer         E4 <sub>H</sub> Read DMA         C8 <sub>H</sub> Read DMA Extended         25 <sub>H</sub> Read DMA Without Retries         C9 <sub>H</sub> Read Log Ext         2F <sub>H</sub> Read Multiple         C4 <sub>H</sub> Read Multiple         C4 <sub>H</sub> Read Native Max Address         F8 <sub>H</sub> Read Native Max Address Extended         27 <sub>H</sub> Read Sectors         20 <sub>H</sub> Read Sectors Without Retries         21 <sub>H</sub> Read Sectors Without Retries         21 <sub>H</sub> Read Verify Sectors Stended         42 <sub>H</sub> Read Verify Sectors Without Retries         41 <sub>H</sub> Read Verify Sectors Without Retries         10 <sub>H</sub> <	Device Configuration Restore	B1 <sub>H</sub> / C0 <sub>H</sub>
Download Microcode 92 <sub>H</sub> Execute Device Diagnostics 90 <sub>H</sub> Flush Cache F7 <sub>H</sub> Flush Cache Extended EA <sub>H</sub> Format Track 50 <sub>H</sub> Identify Device EC <sub>H</sub> Idle E3 <sub>H</sub> Idle Immediate E1 <sub>H</sub> Initialize Device Parameters 91 <sub>H</sub> Read Buffer E4 <sub>H</sub> Read DMA C8 <sub>H</sub> Read DMA S7 <sub>H</sub> Read Multiple C4 <sub>H</sub> Read Multiple C4 <sub>H</sub> Read Multiple Extended 29 <sub>H</sub> Read Native Max Address Extended 27 <sub>H</sub> Read Sectors Without Retries 20 <sub>H</sub> Read Sectors Without Retries 21 <sub>H</sub> Read Sectors Without Retries 21 <sub>H</sub> Read Verify Sectors Stended 42 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Recallbrate 10 <sub>H</sub> Recallbrate 10 <sub>H</sub> Recallbrate 15 <sub>H</sub> Recallbrate 16 <sub>H</sub> Recallbrate 16 <sub>H</sub> Recallbrate 17 <sub>H</sub> Recallbrate 17 <sub>H</sub> Recallbrate 16 <sub>H</sub>	Device Configuration Set	B1 <sub>H</sub> / C3 <sub>H</sub>
Execute Device Diagnostics 90 <sub>H</sub> Flush Cache Extended EA <sub>H</sub> Format Track 50 <sub>H</sub> Identify Device EC <sub>H</sub> Idle Bah Buffer E1 <sub>H</sub> Initialize Device Parameters 91 <sub>H</sub> Read Buffer E4 <sub>H</sub> Read DMA C8 <sub>H</sub> Read DMA Extended 25 <sub>H</sub> Read DMA Without Retries C9 <sub>H</sub> Read Multiple Extended 29 <sub>H</sub> Read Multiple Extended 29 <sub>H</sub> Read Native Max Address Extended 27 <sub>H</sub> Read Sectors Extended 24 <sub>H</sub> Read Sectors Without Retries 20 <sub>H</sub> Read Sectors Without Retries 21 <sub>H</sub> Read Sectors Without Retries 20 <sub>H</sub> Read Sectors Without Retries 21 <sub>H</sub> Read Sectors 20 <sub>H</sub> Read Sectors 20 <sub>H</sub> Read Sectors 20 <sub>H</sub> Read Sectors Without Retries 21 <sub>H</sub> Read Sectors Without Retries 41 <sub>H</sub> Read Verify Sectors Extended 42 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Recalibrate 10 <sub>H</sub> Recalibrate 10 <sub>H</sub> Security Disable Password F6 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Sectors Security Onlock F2 <sub>H</sub>	Device Reset	08 <sub>H</sub>
Flush Cache         E7H           Flush Cache Extended         EAH           Format Track         50H           Identify Device         ECH           Idle         E3H           Idle Immediate         E1H           Initialize Device Parameters         91H           Read Buffer         E4H           Read DMA         C8H           Read DMA Extended         25H           Read DMA Without Retries         C9H           Read Log Ext         2FH           Read Multiple         C4H           Read Multiple Extended         29H           Read Native Max Address         F8H           Read Sectors         20H           Read Sectors Extended         24H           Read Sectors Extended         24H           Read Sectors Without Retries         21H           Read Verify Sectors         40H           Read Verify Sectors Without Retries         41H           Read Verify Sectors Without Retries         41H           Recalibrate         10H           Security Disable Password         F6H           Security Erase Unit         F4H           Security Freeze         F5H           Security Unlock         F2H <td>Download Microcode</td> <td>92<sub>H</sub></td>	Download Microcode	92 <sub>H</sub>
Flush Cache Extended	Execute Device Diagnostics	90 <sub>H</sub>
Format Track 50 <sub>H</sub> Identify Device EC <sub>H</sub> Idle E3 <sub>H</sub> Idle Immediate E1 <sub>H</sub> Initialize Device Parameters 91 <sub>H</sub> Read Buffer E4 <sub>H</sub> Read DMA C8 <sub>H</sub> Read DMA Extended 25 <sub>H</sub> Read DMA Without Retries C9 <sub>H</sub> Read Multiple C4 <sub>H</sub> Read Multiple Extended 29 <sub>H</sub> Read Native Max Address F8 <sub>H</sub> Read Native Max Address Extended 27 <sub>H</sub> Read Sectors Extended 24 <sub>H</sub> Read Sectors Without Retries 21 <sub>H</sub> Read Verify Sectors 40 <sub>H</sub> Read Verify Sectors Without Retries 21 <sub>H</sub> Read Verify Sectors Without Retries 31 <sub>H</sub> Read Sectors Extended 42 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Recallibrate 10 <sub>H</sub> Security Disable Password F6 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Set Password F1 <sub>H</sub> Security Unlock F2 <sub>H</sub>	Flush Cache	E7 <sub>H</sub>
Identify Device   ECH   Idle   E3H   Idle Immediate   E1H   Initialize Device Parameters   91H   Read Buffer   E4H   Read DMA   C8H   Read DMA Extended   25H   Read DMA Without Retries   C9H   Read Multiple Extended   29H   Read Multiple Extended   29H   Read Native Max Address   F8H   Read Native Max Address Extended   27H   Read Sectors Extended   24H   Read Sectors Without Retries   21H   Read Verify Sectors Extended   42H   Read Verify Sectors Extended   42H   Read Verify Sectors Without Retries   41H   Recalibrate   10H   Security Disable Password   F6H   Security Freeze   F5H   Security Set Password   F1H   Security Set Password   F1H   Security Unlock   F2H   Security Unlock   F2H	Flush Cache Extended	EA <sub>H</sub>
IdleE3HIdle ImmediateE1HInitialize Device Parameters91HRead BufferE4HRead DMAC8HRead DMA Extended25HRead DMA Without RetriesC9HRead Log Ext2FHRead MultipleC4HRead Multiple Extended29HRead Native Max AddressF8HRead Native Max Address Extended27HRead Sectors20HRead Sectors Extended24HRead Sectors Without Retries21HRead Verify Sectors40HRead Verify Sectors Extended42HRead Verify Sectors Without Retries41HRead Verify Disable PasswordF6HSecurity Disable PasswordF6HSecurity Erase PrepareF3HSecurity FreezeF5HSecurity FreezeF5HSecurity Set PasswordF1HSecurity UnlockF2H	Format Track	50 <sub>H</sub>
Idle Immediate E1 <sub>H</sub> Initialize Device Parameters 91 <sub>H</sub> Read Buffer E4 <sub>H</sub> Read DMA C8 <sub>H</sub> Read DMA C8 <sub>H</sub> Read DMA Extended 25 <sub>H</sub> Read DMA Without Retries C9 <sub>H</sub> Read Log Ext 2F <sub>H</sub> Read Multiple C4 <sub>H</sub> Read Multiple Extended 29 <sub>H</sub> Read Native Max Address F8 <sub>H</sub> Read Native Max Address Extended 27 <sub>H</sub> Read Sectors 20 <sub>H</sub> Read Sectors Extended 24 <sub>H</sub> Read Sectors Extended 24 <sub>H</sub> Read Verify Sectors Without Retries 21 <sub>H</sub> Read Verify Sectors Without Retries 40 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Recalibrate 10 <sub>H</sub> Security Disable Password F6 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Set Password F1 <sub>H</sub> Security Unlock F2 <sub>H</sub>	Identify Device	EC <sub>H</sub>
Read Buffer E4 <sub>H</sub> Read DMA C8 <sub>H</sub> Read DMA Extended 25 <sub>H</sub> Read DMA Without Retries C9 <sub>H</sub> Read Multiple C4 <sub>H</sub> Read Multiple Extended 27 <sub>H</sub> Read Native Max Address F8 <sub>H</sub> Read Sectors Extended 24 <sub>H</sub> Read Sectors Without Retries 21 <sub>H</sub> Read Verify Sectors Extended 42 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Recalibrate 10 <sub>H</sub> Security Disable Password F6 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Unlock F72 <sub>H</sub>	Idle	E3 <sub>H</sub>
Read Buffer	Idle Immediate	E1 <sub>H</sub>
Read DMA  C8H  Read DMA Extended  25H  Read DMA Without Retries  C9H  Read Log Ext  Read Multiple  C4H  Read Multiple Extended  29H  Read Native Max Address  F8H  Read Native Max Address Extended  27H  Read Sectors  20H  Read Sectors Extended  24H  Read Sectors Without Retries  21H  Read Verify Sectors  40H  Read Verify Sectors Extended  42H  Read Verify Sectors Without Retries  41H  Recalibrate  10H  Security Disable Password  F6H  Security Erase Prepare  F3H  Security Freeze  F5H  Security Freeze  F5H  Security Set Password  F1H  Security Unlock  F2H	Initialize Device Parameters	91 <sub>H</sub>
Read DMA Extended     25 <sub>H</sub> Read DMA Without Retries     C9 <sub>H</sub> Read Log Ext     2F <sub>H</sub> Read Multiple     C4 <sub>H</sub> Read Multiple Extended     29 <sub>H</sub> Read Native Max Address     F8 <sub>H</sub> Read Native Max Address Extended     27 <sub>H</sub> Read Sectors     20 <sub>H</sub> Read Sectors Extended     24 <sub>H</sub> Read Sectors Without Retries     21 <sub>H</sub> Read Verify Sectors     40 <sub>H</sub> Read Verify Sectors Extended     42 <sub>H</sub> Read Verify Sectors Without Retries     41 <sub>H</sub> Recalibrate     10 <sub>H</sub> Security Disable Password     F6 <sub>H</sub> Security Erase Prepare     F3 <sub>H</sub> Security Erase Unit     F4 <sub>H</sub> Security Freeze     F5 <sub>H</sub> Security Set Password     F1 <sub>H</sub> Security Unlock     F2 <sub>H</sub>	Read Buffer	E4 <sub>H</sub>
Read DMA Without Retries  C9H  Read Log Ext  Read Multiple  Read Multiple Extended  Read Native Max Address  Read Native Max Address Extended  Read Sectors  20H  Read Sectors Extended  24H  Read Sectors Without Retries  21H  Read Verify Sectors Extended  42H  Read Verify Sectors Without Retries  41H  Read Verify Sectors Without Retries  41H  Recalibrate  5ecurity Disable Password  F6H  Security Erase Prepare  F3H  Security Freeze  F5H  Security Set Password  F1H  Security Unlock  F2H	Read DMA	C8 <sub>H</sub>
Read Log Ext  Read Multiple  C4H  Read Multiple Extended  Read Native Max Address  Read Native Max Address Extended  Read Sectors  20H  Read Sectors Extended  24H  Read Sectors Without Retries  21H  Read Verify Sectors Extended  42H  Read Verify Sectors Without Retries  41H  Recalibrate  10H  Security Disable Password  F6H  Security Erase Prepare  F3H  Security Freeze  F5H  Security Freeze  F5H  Security Unlock  F2H	Read DMA Extended	25 <sub>H</sub>
Read Multiple C4 <sub>H</sub> Read Multiple Extended 29 <sub>H</sub> Read Native Max Address F8 <sub>H</sub> Read Native Max Address Extended 27 <sub>H</sub> Read Sectors 20 <sub>H</sub> Read Sectors Extended 24 <sub>H</sub> Read Sectors Without Retries 21 <sub>H</sub> Read Verify Sectors 40 <sub>H</sub> Read Verify Sectors Extended 42 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Recalibrate 10 <sub>H</sub> Security Disable Password F6 <sub>H</sub> Security Erase Prepare F3 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Sectors F1 <sub>H</sub> Security Sectors F1 <sub>H</sub> Security Sectors F5 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Sectors F1 <sub>H</sub> Security Sectors F1 <sub>H</sub> Security Sectors F1 <sub>H</sub> Security Sectors F5 <sub>H</sub> Security Unlock F2 <sub>H</sub>	Read DMA Without Retries	C9 <sub>H</sub>
Read Multiple Extended 29 <sub>H</sub> Read Native Max Address F8 <sub>H</sub> Read Native Max Address Extended 27 <sub>H</sub> Read Sectors 20 <sub>H</sub> Read Sectors Extended 24 <sub>H</sub> Read Sectors Without Retries 21 <sub>H</sub> Read Verify Sectors 40 <sub>H</sub> Read Verify Sectors Extended 42 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Recalibrate 10 <sub>H</sub> Security Disable Password F6 <sub>H</sub> Security Erase Prepare F3 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Sectors Word F1 <sub>H</sub> Security Security Sectors F1 <sub>H</sub> Security Security Security Security Security Security Security Security Freeze F5 <sub>H</sub> Security Unlock F2 <sub>H</sub>	Read Log Ext	2F <sub>H</sub>
Read Native Max Address F8H Read Native Max Address Extended 27H Read Sectors 20H Read Sectors Extended 24H Read Sectors Without Retries 21H Read Verify Sectors 40H Read Verify Sectors Extended 42H Read Verify Sectors Without Retries 41H Recalibrate 10H Security Disable Password F6H Security Erase Prepare F3H Security Erase Unit F4H Security Freeze F5H Security Sectors Word F1H Security Security Sectors Word F1H Security Sectors Word F1H Security Unlock F2H	Read Multiple	C4 <sub>H</sub>
Read Native Max Address Extended 27 <sub>H</sub> Read Sectors 20 <sub>H</sub> Read Sectors Extended 24 <sub>H</sub> Read Sectors Without Retries 21 <sub>H</sub> Read Verify Sectors 40 <sub>H</sub> Read Verify Sectors Extended 42 <sub>H</sub> Read Verify Sectors Extended 42 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Recalibrate 10 <sub>H</sub> Security Disable Password F6 <sub>H</sub> Security Erase Prepare F3 <sub>H</sub> Security Erase Unit F4 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Set Password F1 <sub>H</sub> Security Set Password F1 <sub>H</sub> Security Set Password F1 <sub>H</sub>	Read Multiple Extended	29 <sub>H</sub>
Read Sectors20HRead Sectors Extended24HRead Sectors Without Retries21HRead Verify Sectors40HRead Verify Sectors Extended42HRead Verify Sectors Without Retries41HRecalibrate10HSecurity Disable PasswordF6HSecurity Erase PrepareF3HSecurity Erase UnitF4HSecurity FreezeF5HSecurity Set PasswordF1HSecurity UnlockF2H	Read Native Max Address	F8 <sub>H</sub>
Read Sectors Extended  Read Sectors Without Retries  Read Verify Sectors  40 <sub>H</sub> Read Verify Sectors Extended  42 <sub>H</sub> Read Verify Sectors Extended  44 <sub>H</sub> Read Verify Sectors Without Retries  41 <sub>H</sub> Recalibrate  10 <sub>H</sub> Security Disable Password  F6 <sub>H</sub> Security Erase Prepare  F3 <sub>H</sub> Security Erase Unit  F4 <sub>H</sub> Security Freeze  F5 <sub>H</sub> Security Set Password  F1 <sub>H</sub> Security Unlock  F2 <sub>H</sub>	Read Native Max Address Extended	27 <sub>H</sub>
Read Sectors Without Retries 21 <sub>H</sub> Read Verify Sectors 40 <sub>H</sub> Read Verify Sectors Extended 42 <sub>H</sub> Read Verify Sectors Without Retries 41 <sub>H</sub> Recalibrate 10 <sub>H</sub> Security Disable Password F6 <sub>H</sub> Security Erase Prepare F3 <sub>H</sub> Security Erase Unit F4 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Set Password F1 <sub>H</sub> Security Set Password F1 <sub>H</sub> Security Set Password F1 <sub>H</sub>	Read Sectors	20 <sub>H</sub>
Read Verify Sectors40 <sub>H</sub> Read Verify Sectors Extended42 <sub>H</sub> Read Verify Sectors Without Retries41 <sub>H</sub> Recalibrate10 <sub>H</sub> Security Disable PasswordF6 <sub>H</sub> Security Erase PrepareF3 <sub>H</sub> Security Erase UnitF4 <sub>H</sub> Security FreezeF5 <sub>H</sub> Security Set PasswordF1 <sub>H</sub> Security UnlockF2 <sub>H</sub>	Read Sectors Extended	24 <sub>H</sub>
Read Verify Sectors Extended  Read Verify Sectors Without Retries  41 <sub>H</sub> Recalibrate  10 <sub>H</sub> Security Disable Password  F6 <sub>H</sub> Security Erase Prepare  F3 <sub>H</sub> Security Erase Unit  F4 <sub>H</sub> Security Freeze  F5 <sub>H</sub> Security Set Password  F1 <sub>H</sub> Security Unlock  F2 <sub>H</sub>	Read Sectors Without Retries	21 <sub>H</sub>
Read Verify Sectors Without Retries 41 <sub>H</sub> Recalibrate 10 <sub>H</sub> Security Disable Password F6 <sub>H</sub> Security Erase Prepare F3 <sub>H</sub> Security Erase Unit F4 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Set Password F1 <sub>H</sub> Security Unlock F2 <sub>H</sub>	Read Verify Sectors	40 <sub>H</sub>
Recalibrate 10 <sub>H</sub> Security Disable Password F6 <sub>H</sub> Security Erase Prepare F3 <sub>H</sub> Security Erase Unit F4 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Set Password F1 <sub>H</sub> Security Unlock F2 <sub>H</sub>	Read Verify Sectors Extended	42 <sub>H</sub>
Security Disable Password  F6H  Security Erase Prepare  F3H  Security Erase Unit  F4H  Security Freeze  F5H  Security Set Password  F1H  Security Unlock  F2H	Read Verify Sectors Without Retries	41 <sub>H</sub>
Security Erase Prepare F3 <sub>H</sub> Security Erase Unit F4 <sub>H</sub> Security Freeze F5 <sub>H</sub> Security Set Password F1 <sub>H</sub> Security Unlock F2 <sub>H</sub>	Recalibrate	10 <sub>H</sub>
Security Erase Unit  F4 <sub>H</sub> Security Freeze  F5 <sub>H</sub> Security Set Password  F1 <sub>H</sub> Security Unlock  F2 <sub>H</sub>	Security Disable Password	F6 <sub>H</sub>
Security Freeze F5 <sub>H</sub> Security Set Password F1 <sub>H</sub> Security Unlock F2 <sub>H</sub>	Security Erase Prepare	F3 <sub>H</sub>
Security Set Password F1 <sub>H</sub> Security Unlock F2 <sub>H</sub>	Security Erase Unit	F4 <sub>H</sub>
Security Unlock F2 <sub>H</sub>	Security Freeze	F5 <sub>H</sub>
, "	Security Set Password	F1 <sub>H</sub>
Seek 70 <sub>H</sub>	Security Unlock	F2 <sub>H</sub>
	Seek	70 <sub>H</sub>

 Table 11
 SATA standard commands (continued)

Command name	Command code (in hex)	
Set Features	EF <sub>H</sub>	
Set Max Address	F9 <sub>H</sub>	
<b>Note:</b> Individual Set Max Address commands are identified by the value placed in the Set Max Features register as defined to the right.	Address: Password: Lock: Unlock: Freeze Lock:	00 <sub>H</sub> 01 <sub>H</sub> 02 <sub>H</sub> 03 <sub>H</sub> 04 <sub>H</sub>
Set Max Address Extended	37 <sub>H</sub>	
Set Multiple Mode	C6 <sub>H</sub>	
Sleep	E6 <sub>H</sub>	
S.M.A.R.T. Disable Operations	BO <sub>H</sub> / D9 <sub>H</sub>	
S.M.A.R.T. Enable/Disable Autosave	BO <sub>H</sub> / D2 <sub>H</sub>	
S.M.A.R.T. Enable Operations	BO <sub>H</sub> / D8 <sub>H</sub>	
S.M.A.R.T. Execute Offline	BO <sub>H</sub> / D4 <sub>H</sub>	
S.M.A.R.T. Read Attribute Thresholds	BO <sub>H</sub> /D1 <sub>H</sub>	
S.M.A.R.T. Read Data	BO <sub>H</sub> / DO <sub>H</sub>	
S.M.A.R.T. Read Log Sector	BO <sub>H</sub> / D5 <sub>H</sub>	
S.M.A.R.T. Return Status	BO <sub>H</sub> / DA <sub>H</sub>	
S.M.A.R.T. Save Attribute Values	BO <sub>H</sub> / D3 <sub>H</sub>	
S.M.A.R.T. Write Log Sector	BO <sub>H</sub> / D6 <sub>H</sub>	
Standby	E2 <sub>H</sub>	
Standby Immediate	E0 <sub>H</sub>	
Write Buffer	E8 <sub>H</sub>	
Write DMA	CA <sub>H</sub>	
Write DMA Extended	35 <sub>H</sub>	
Write DMA FUA Extended	3D <sub>H</sub>	
Write DMA Without Retries	CB <sub>H</sub>	
Write Log Extended	3F <sub>H</sub>	
Write Multiple	C5 <sub>H</sub>	
Write Multiple Extended	39 <sub>H</sub>	
Write Multiple FUA Extended	CE <sub>H</sub>	
Write Sectors	30 <sub>H</sub>	
Write Sectors Without Retries	31 <sub>H</sub>	
Write Sectors Extended	34 <sub>H</sub>	
Write Uncorrectable	45 <sub>H</sub>	

# 4.3.1 Identify Device command

The Identify Device command (command code  $EC_H$ ) transfers information about the drive to the host following power up. The data is organized as a single 512-byte block of data, whose contents are shown in on page 29. All reserved bits or words should be set to zero. Parameters listed with an "x" are drive-specific or vary with the state of the drive.

The following commands contain drive-specific features that may not be included in the SATA specification.

**Table 12 Identify Device commands** 

Description	Value
Configuration information:  • Bit 15: 0 = ATA; 1 = ATAPI  • Bit 7: removable media  • Bit 6: removable controller  • Bit 0: reserved	0C5A <sub>H</sub>
Number of logical cylinders	16,383
ATA-reserved	0000 <sub>H</sub>
Number of logical heads	16
Retired	0000 <sub>H</sub>
Retired	0000 <sub>H</sub>
Number of logical sectors per logical track: 63	003F <sub>H</sub>
Retired	0000 <sub>H</sub>
Serial number: (20 ASCII characters, 0000 <sub>H</sub> = none)	ASCII
Retired	0000 <sub>H</sub>
Retired	0400 <sub>H</sub>
Obsolete	0000 <sub>H</sub>
Firmware revision (8 ASCII character string, padded with blanks to end of string)	x.xx
Drive model number: (40 ASCII characters, padded with blanks to end of string)	
(Bits 7–0) Maximum sectors per interrupt on Read multiple and Write multiple (16)	8010 <sub>H</sub>
Reserved	0000 <sub>H</sub>
Standard Standby timer, IORDY supported and may be disabled	2F00 <sub>H</sub>
ATA-reserved	0000 <sub>H</sub>
PIO data-transfer cycle timing mode	0200 <sub>H</sub>
Retired	0200 <sub>H</sub>
Words 54–58, 64–70 and 88 are valid	0007 <sub>H</sub>
Number of current logical cylinders	xxxx <sub>H</sub>
Number of current logical heads	xxxx <sub>H</sub>
Number of current logical sectors per logical track	xxxx <sub>H</sub>
Current capacity in sectors	xxxx <sub>H</sub>
Number of sectors transferred during a Read Multiple or Write Multiple command	xxxx <sub>H</sub>
	Configuration information: Bit 15: 0 = ATA; 1 = ATAPI Bit 7: removable media Bit 6: removable controller Bit 0: reserved  Number of logical cylinders  ATA-reserved  Number of logical heads Retired  Retired  Number of logical sectors per logical track: 63  Retired  Serial number: (20 ASCII characters, 0000 <sub>H</sub> = none)  Retired  Retired  Obsolete  Firmware revision (8 ASCII character string, padded with blanks to end of string)  Drive model number: (40 ASCII characters, padded with blanks to end of string)  (Bits 7–0) Maximum sectors per interrupt on Read multiple and Write multiple (16)  Reserved  Standard Standby timer, IORDY supported and may be disabled  ATA-reserved  PIO data-transfer cycle timing mode  Retired  Words 54–58, 64–70 and 88 are valid  Number of current logical cylinders  Number of current logical sectors per logical track  Current capacity in sectors

 Table 12
 Identify Device commands (continued)

Word	Description	Value
60-61	Total number of user-addressable LBA sectors available (see Section 2.2 for related information)  *Note: The maximum value allowed in this field is: 0FFFFFFF (268,435,455 sectors, 137GB). Drives with capacities over 137GB will have 0FFFFFFF in this field and the actual number of user-addressable LBAs specified in words 100-103. This is required for drives that support the 48-bit addressing feature.	0FFFFFFh*
62	Retired	0000 <sub>H</sub>
63	Multiword DMA active and modes supported (see note following this table)	<i>xx</i> 07 <sub>H</sub>
64	Advanced PIO modes supported (modes 3 and 4 supported)	0003 <sub>H</sub>
65	Minimum multiword DMA transfer cycle time per word (120 nsec)	0078 <sub>H</sub>
66	Recommended multiword DMA transfer cycle time per word (120 nsec)	0078 <sub>H</sub>
67	Minimum PIO cycle time without IORDY flow control (240 nsec)	0078 <sub>H</sub>
68	Minimum PIO cycle time with IORDY flow control (120 nsec)	0078 <sub>H</sub>
69–74	ATA-reserved	0000 <sub>H</sub>
75	Queue depth	001F <sub>H</sub>
76	SATA capabilities	xxxx <sub>H</sub>
77	Reserved for future SATA definition	xxxx <sub>H</sub>
78	SATA features supported	xxxx <sub>H</sub>
79	SATA features enabled	xxxx <sub>H</sub>
80	Major version number	01F0 <sub>H</sub>
81	Minor version number	0028 <sub>H</sub>
82	Command sets supported	364B <sub>H</sub>
83	Command sets supported	7F09 <sub>H</sub>
84	Command sets support extension (see note following this table)	4163 <sub>H</sub>
85	Command sets enabled	30 <i>xx</i> <sub>H</sub>
86	Command sets enabled	BE09 <sub>H</sub>
87	Command sets enable extension	4163 <sub>H</sub>
88	Ultra DMA support and current mode (see note following this table)	xx7F <sub>H</sub>
89	Security erase time	0039 <sub>H</sub>
90	Enhanced security erase time	0039 <sub>H</sub>
92	Master password revision code	FFFE <sub>H</sub>
93	Hardware reset value	xxxx <sub>H</sub>
94	Automatic acoustic management	8080 <sub>H</sub>
95	Stream Min. Request Size	0000 <sub>H</sub>
96	Streaming Transfer Time - DMA	0000 <sub>H</sub>
97	Streaming Access Latency - DMA and PIO	0000 <sub>H</sub>
98-99	Streaming Performance Granularity	2710 <sub>H</sub> /0000 <sub>H</sub>

 Table 12
 Identify Device commands (continued)

Word	Description	Value
100–103	Total number of user-addressable LBA sectors available (see Section 2.2 for related information). These words are required for drives that support the 48-bit addressing feature. Maximum value: 0000FFFFFFFFFFFF.	ST1000VX005 = 1,953,525,168 ST2000VX008 = 3,907,029,168 ST3000VX010 = 5,860,533,168 ST4000VX007 = 7,814,037,168 ST6000VX0023 = 11,721,045,168 ST8000VX0022 = 15,628,053,168
104	Streaming Transfer Time - PIO	0000 <sub>H</sub>
105–107	ATA-reserved	0000 <sub>H</sub>
108–111	The mandatory value of the world wide name (WWN) for the drive.  NOTE: This field is valid if word 84, bit 8 is set to 1 indicating 64-bit WWN support.	Each drive will have a unique value.
112–127	ATA-reserved	0000 <sub>H</sub>
128	Security status	0001 <sub>H</sub>
129–159	Seagate-reserved	xxxx <sub>H</sub>
160-254	ATA-reserved	0000 <sub>H</sub>
255	Integrity word	xxA5 <sub>H</sub>

Note	Advanced Power Management (APM) and Automatic Acoustic Management (AAM) features are not supported	
Note	See the bit descriptions below for words 63, 84, and 88 of the Identify Drive data.	

Descri	otion (if bit is set to 1)
Bit	Word 63
0	Multiword DMA mode 0 is supported.
1	Multiword DMA mode 1 is supported.
2	Multiword DMA mode 2 is supported.
8	Multiword DMA mode 0 is currently active.
9	Multiword DMA mode 1 is currently active.
10	Multiword DMA mode 2 is currently active.
Bit	Word 84
0	SMART error login is supported.
1	SMART self-test is supported.
2	Media serial number is supported.
3	Media Card Pass Through Command feature set is supported.
4	Streaming feature set is supported.
5	GPL feature set is supported.
6	WRITE DMA FUA EXT and WRITE MULTIPLE FUA EXT commands are supported.
7	WRITE DMA QUEUED FUA EXT command is supported.
8	64-bit World Wide Name is supported.
9-10	Obsolete.
11-12	Reserved for TLC.
13	IDLE IMMEDIATE command with IUNLOAD feature is supported.
14	Shall be set to 1.
15	Shall be cleared to 0.
Bit	Word 88
0	Ultra DMA mode 0 is supported.
1	Ultra DMA mode 1 is supported.
2	Ultra DMA mode 2 is supported.
3	Ultra DMA mode 3 is supported.
4	Ultra DMA mode 4 is supported.
5	Ultra DMA mode 5 is supported.
6	Ultra DMA mode 6 is supported.
8	Ultra DMA mode 0 is currently active.
9	Ultra DMA mode 1 is currently active.
10	Ultra DMA mode 2 is currently active.
11	Ultra DMA mode 3 is currently active.
12	Ultra DMA mode 4 is currently active.
13	Ultra DMA mode 5 is currently active.
14	Ultra DMA mode 6 is currently active.

#### 4.3.2 Set Features command

This command controls the implementation of various features that the drive supports. When the drive receives this command, it sets BSY, checks the contents of the Features register, clears BSY and generates an interrupt. If the value in the register does not represent a feature that the drive supports, the command is aborted. Power-on default has the read lookahead and write caching features enabled. The acceptable values for the Features register are defined as follows:

**Table 13 Set Features commands** 

Tuble 13	Set readures Communius
02 <sub>H</sub>	Enable write cache (default).
03 <sub>H</sub>	Set transfer mode (based on value in Sector Count register). Sector Count register values:
	00 <sub>H</sub> Set PIO mode to default (PIO mode 2).
	01 <sub>H</sub> Set PIO mode to default and disable IORDY (PIO mode 2).
	08 <sub>H</sub> PIO mode 0
	09 <sub>H</sub> PIO mode 1
	0A <sub>H</sub> PIO mode 2
	0B <sub>H</sub> PIO mode 3
	0C <sub>H</sub> PIO mode 4 (default)
	20 <sub>H</sub> Multiword DMA mode 0
	21 <sub>H</sub> Multiword DMA mode 1
	22 <sub>H</sub> Multiword DMA mode 2
	40 <sub>H</sub> Ultra DMA mode 0
	41 <sub>H</sub> Ultra DMA mode 1
	42 <sub>H</sub> Ultra DMA mode 2
	43 <sub>H</sub> Ultra DMA mode 3
	44 <sub>H</sub> Ultra DMA mode 4
	45 <sub>H</sub> Ultra DMA mode 5
	46 <sub>H</sub> Ultra DMA mode 6
06 <sub>H</sub>	Enable the PUIS feature set
07 <sub>H</sub>	PUIS feature set device spin-up
10 <sub>H</sub>	Enable use of SATA features
55 <sub>H</sub>	Disable read look-ahead (read cache) feature
82 <sub>H</sub>	Disable write cache
86 <sub>H</sub>	Disable the PUIS feature set
90 <sub>H</sub>	Disable use of SATA features
AA <sub>H</sub>	Enable read look-ahead (read cache) feature (default).
F1 <sub>H</sub>	Report full capacity available

**Note** At power-on, or after a hardware or software reset, the default values of the features are as indicated above.

### 4.3.3 S.M.A.R.T. commands

S.M.A.R.T. provides near-term failure prediction for disk drives. When S.M.A.R.T. is enabled, the drive monitors predetermined drive attributes that are susceptible to degradation over time. If self-monitoring determines that a failure is likely, S.M.A.R.T. makes a status report available to the host. Not all failures are predictable. S.M.A.R.T. predictability is limited to the attributes the drive can monitor. For more information on S.M.A.R.T. commands and implementation, see the *Draft ATA-5 Standard*.

SeaTools diagnostic software activates a built-in drive self-test (DST S.M.A.R.T. command for D4<sub>H</sub>) that eliminates unnecessary drive returns. The diagnostic software ships with all new drives and is also available at: <a href="http://seatools.seagate.com">http://seatools.seagate.com</a>.

This drive is shipped with S.M.A.R.T. features enabled. **Table 14** below shows the S.M.A.R.T. command codes that the drive uses.

Table 14 S.M.A.R.T. commands

Code in features register	S.M.A.R.T. command
D0 <sub>H</sub>	S.M.A.R.T. Read Data
D2 <sub>H</sub>	S.M.A.R.T. Enable/Disable Attribute Autosave
D3 <sub>H</sub>	S.M.A.R.T. Save Attribute Values
D4 <sub>H</sub>	S.M.A.R.T. Execute Off-line Immediate (runs DST)
D5 <sub>H</sub>	S.M.A.R.T. Read Log Sector
D6 <sub>H</sub>	S.M.A.R.T. Write Log Sector
D8 <sub>H</sub>	S.M.A.R.T. Enable Operations
D9 <sub>H</sub>	S.M.A.R.T. Disable Operations
DA <sub>H</sub>	S.M.A.R.T. Return Status

Note	If an appropriate code is not written to the Features Register, the
	command is aborted and $0x04$ (abort) is written to the Error register.



## **Seagate Technology LLC**

AMERICAS Seagate Technology LLC 10200 South De Anza Boulevard, Cupertino, California 95014, United States, 408-658-1000
ASIA/PACIFIC Seagate Singapore International Headquarters Pte. Ltd. 7000 Ang Mo Kio Avenue 5, Singapore 569877, 65-6485-3888
EUROPE, MIDDLE EAST AND AFRICA Seagate Technology SAS 16-18 rue du Dôme, 92100 Boulogne-Billancourt, France, 33 1-4186 10 00

Publication Number: 100804836, Rev. B

October 2016