



# **SATA Product Manual**

# **Standard models**

ST8000DM004

ST6000DM003

ST4000DM004

ST3000DM007

ST2000DM005

100805918, Rev. R March 2023

# © 2023 Seagate Technology LLC. All rights reserved. Publication number: 100805918, Rev. R March 2023 Seagate Technology and the Spiral logo are registered trademarks of Seagate Technology LLC in the United States and/or other countries. BarraCuda and SeaTools are either trademarks or registered trademarks of Seagate Technology LLC or one of its affiliated companies in the United States and/or other countries. All other trademarks or registered trademarks or registe

standard of measurement and report a lower capacity. In addition, some of the listed capacity is used for formatting and other functions, and thus will not be available for data storage. Actual quantities will vary based on various factors, including file size, file format, features and application software. Actual data rates may vary depending on operating environment and other factors. The export or re-export of hardware or software containing encryption may be regulated by the U.S. Department of Commerce, Bureau of Industry and Security (for more information, visit <a href="https://www.bis.doc.gov">www.bis.doc.gov</a>), and controlled for import and use outside of the U.S. Seagate reserves the right to change, without notice, product offerings or specifications.

# Contents

| 1.0 | Intro | duction  |
|-----|-------|--|
|     | 1.1   | About the SATA interface   |
| 2.0 | Drive | Specifications   |
|     | 2.1   | Specification summary tables                                       |
|     | 2.2   | Formatted capacity   |
|     |       | 2.2.1 LBA mode   |
|     | 2.3   | Default logical geometry11   |
|     | 2.4   | Recording and interface technology11                               |
|     | 2.5   | Physical characteristics   |
|     | 2.6   | Start/stop times   |
|     | 2.7   | Power specifications   |
|     |       | 2.7.1 Power consumption  |
|     |       | 2.7.2 Conducted noise  |
|     |       | 2.7.3 Voltage tolerance  |
|     |       | 2.7.4 Power-management modes                                       |
|     | 2.8   | Environmental specifications                                       |
|     |       | 2.8.1 Ambient Temperature  |
|     |       | 2.8.2 Temperature gradient   |
|     |       | 2.8.3 Humidity   |
|     |       | 2.8.4 Altitude   |
|     |       | 2.8.5 Shock  |
|     |       | 2.8.6 Non-operating vibration                                      |
|     | 2.9   | Acoustics  |
|     |       | 2.9.1 Test for Prominent Discrete Tones (PDTs)                     |
|     | 2.10  | Electromagnetic immunity   |
|     | 2.11  | Warranty 18  |
|     |       | 2.11.1 Data loss under power interruption with write cache enabled |
|     |       | 2.11.2 Storage   |
|     | 2.12  | HDD and SSD Regulatory Compliance and Safety                       |
|     |       | 2.12.1 Regulatory models   |
|     | 2.13  | Corrosive environment  |

# Contents

| 3.0 | Configuring and Mounting the Drive |           |                                      | 19 |
|-----|------------------------------------|-----------|--------------------------------------|----|
|     | 3.1                                | Handlir   | ng and static-discharge precautions  | 19 |
|     | 3.2                                |           | uring the drive                      |    |
|     | 3.3                                |           | ables and connectors                 |    |
|     | 3.4                                | Drive m   | nounting                             | 20 |
| 4.0 | 4.1                                |           | ıg compatibility                     |    |
| 4.0 | SATA                               | Interface |                                      | 22 |
|     | 4.2                                |           | evice plug connector pin definitions |    |
|     | 4.3                                |           | ted ATA commands                     |    |
|     |                                    | 4.3.1     | Identify Device command              | 25 |
|     |                                    | 4.3.2     | Set Features command                 |    |
|     |                                    | 4.3.3     | S.M.A.R.T. commands                  |    |

# **Figures**

| Figure 1 | Attaching SATA cabling                    | 19 |
|----------|---|----|
| Figure 2 | Mounting dimensions (1 and 2-disk models) | 20 |
| Figure 3 | Mounting dimensions (3 and 4-disk models) | 21 |

# Seagate® Technology Support Services

For Seagate Product Support, visit: www.seagate.com/support

For Seagate Compliance, Safety, and Disposal, visit: www.seagate.com/support

For Firmware Download and Tools Download for Secure Erase, visit: www.seagate.com/support/downloads/

For information regarding online support and services, visit: www.seagate.com/contacts/

For information regarding Warranty Support, visit: www.seagate.com/support/warranty-and-replacements/

For information regarding data recovery services, visit: www.seagate.com/services-software/recover/resources/

For Seagate OEM and Distribution partner and Seagate reseller portal, visit: www.seagate.com/partners

# 1.0 Introduction

This manual describes the functional, mechanical and interface specifications for the following Seagate® BarraCuda® model drives:

ST8000DM004 ST6000DM003 ST4000DM004 ST3000DM007 ST2000DM005

These drives provide the following key features:

- Compliant with RoHS requirements in China and Europe.
- High instantaneous (burst) data-transfer rates (up to 600MB per second).
- Native Command Queuing with command ordering to increase performance in demanding applications.
- Quiet operation.
- SeaTools diagnostic software performs a drive self-test that eliminates unnecessary drive returns.
- State-of-the-art cache and on-the-fly error-correction algorithms.
- · Support for S.M.A.R.T. drive monitoring and reporting.
- Supports latching SATA cables and connectors.
- Worldwide Name (WWN) capability uniquely identifies the drive.

#### 1.1 About the SATA interface

The Serial ATA (SATA) interface provides several advantages over the traditional (parallel) ATA interface. The primary advantages include:

- Easy installation and configuration with true plug-and-play connectivity. It is not necessary to set any jumpers or other configuration options.
- · Thinner and more flexible cabling for improved enclosure airflow and ease of installation.
- · Scalability to higher performance levels.

In addition, SATA makes the transition from parallel ATA easy by providing legacy software support. SATA was designed to allow users to install a SATA host adapter and SATA disk drive in the current system and expect all of the existing applications to work as normal.

The SATA interface connects each disk drive in a point-to-point configuration with the SATA host adapter. There is no master/slave relationship with SATA devices like there is with parallel ATA. If two drives are attached on one SATA host adapter, the host operating system views the two devices as if they were both "masters" on two separate ports. This essentially means both drives behave as if they are Device 0 (master) devices.

The SATA host adapter and drive share the function of emulating parallel ATA device behavior to provide backward compatibility with existing host systems and software. The Command and Control Block registers, PIO and DMA data transfers, resets, and interrupts are all emulated.

The SATA host adapter contains a set of registers that shadow the contents of the traditional device registers, referred to as the Shadow Register Block. All SATA devices behave like Device 0 devices. For additional information about how SATA emulates parallel ATA, refer to the "Serial ATA International Organization: Serial ATA Revision 3.0". The specification can be downloaded from <a href="https://www.sata-io.org">www.sata-io.org</a>.

Note

The host adapter may, optionally, emulate a master/slave environment to host software where two devices on separate SATA ports are represented to host software as a Device 0 (master) and Device 1 (slave) accessed at the same set of host bus addresses. A host adapter that emulates a master/slave environment manages two sets of shadow registers. This is not a typical SATA environment.

# 2.0 Drive Specifications

Unless otherwise noted, all specifications are measured under ambient conditions, at 25°C, and nominal power. For convenience, the phrases the drive and this drive are used throughout this manual to indicate the following drive models:

ST8000DM004

ST6000DM003

ST4000DM004

ST3000DM007

ST2000DM005

## 2.1 Specification summary tables

The specifications listed in **Table 1** are for quick reference. For details on specification measurement or definition, refer to the appropriate section of this manual.

Table 1 Drive specifications summary for 8TB & 6TB model

| Drive Specification*   | ST8000DM004  | ST6000DM003           |  |
|--|--|-----------------------|--|
| Formatted capacity (512 bytes/sector)**                        | 8000GB (8TB)   | 6000GB (6TB)          |  |
| Guaranteed sectors   | 15,628,053,168 11,721,045,168  |                       |  |
| Heads  | 8  | 6                     |  |
| Disks  | 4  | 3                     |  |
| Bytes per sector<br>(4K physical emulated at 512-byte sectors) | 4096   |                       |  |
| Default sectors per track                                      | 6  | 53                    |  |
| Default read/write heads                                       | 1  | 16                    |  |
| Default cylinders  | 16,  | .383                  |  |
| Recording density (max)  | 2294   | kB/in                 |  |
| Track density (avg)  | 540 kt   | racks/in              |  |
| Areal density (avg)  | 1203   | Gb/in <sup>2</sup>    |  |
| SATA interface transfer rate                                   | 600  | MB/s                  |  |
| Maximum data transfer rate                                     | 190 MB/s   | 185 MB/s              |  |
| ATA data-transfer modes supported                              | PIO modes: 0 to 4 ransfer modes supported Multiword DMA modes: 0 to 2 Ultra DMA modes 0 to 6 |                       |  |
| Cache buffer   | 256MB  |                       |  |
| Height (max)   | 26.1mm / 1.028 in  |                       |  |
| Width (max)  | 101.6mm (± 0.25  | 5) / 4.0 in (± 0.010) |  |
| Length (max)   | 146.99mn   | n / 5.787 in          |  |
| Weight (typical)   | 630g / 1.389 lb  | 610g / 1.345 lb       |  |
| Average latency  | 6.0  | ) ms                  |  |
| Power-on to ready (typ)  | 15.0s  |                       |  |
| Standby to ready (typ)   | 15.0s  |                       |  |
| Startup current (typical) 12V                                  | 2.   | 0A                    |  |
| Voltage tolerance (including noise)                            |  | ±5%<br>±10%           |  |
| Non-Operating (Ambient °C)                                     | -40° to 70°  |                       |  |
| Operating ambient temperature (min °C)                         | 0°   |                       |  |
| Operating temperature (drive case max °C)                      | sse max °C) 60° <sup>†</sup>   |                       |  |
| Temperature gradient   | 20°C per hour max (operating)<br>30°C per hour max (non-operating)                           |                       |  |
| Relative humidity  | 5% to 90% (operating)<br>5% to 95% (non-operating)   |                       |  |
| Relative humidity gradient (max)                               | 30% p  | er hour               |  |

Table 1 Drive specifications summary for 8TB & 6TB model (continued)

| Drive Specification*  | ST8000DM004  | ST6000DM003   |  |
|---|--|---|--|
| Wet bulb temperature (max)  | 30°C max (operating)<br>40°C max (non-operating)   |   |  |
| Altitude, operating   | −304m to 3048m<br>(−1000 ft to 10,000 ft)  |   |  |
| Altitude, non-operating (below mean sea level, max)                         |  | o12,192m<br>o 40,000+ ft)   |  |
| Operational shock (max)   | 80 Gs (read) / 70  | Gs (write) at 2ms   |  |
| Non-operational shock (max)   | 300 Gs   | at 2ms  |  |
| Vibration, operating  | 22Hz to 35   | , Limited displacement<br>0Hz: 0.50 Gs<br>00Hz: 0.25 Gs   |  |
| Vibration, non-operating  | 5Hz to 22Hz: 3.0 Gs<br>22Hz to 350Hz: 3.0 Gs<br>350Hz to 500Hz: 3.0 Gs   |   |  |
| Drive acoustics, sound power  |  |   |  |
| Idle***   | 2.3 bels (typical)<br>2.5 bels (max)   |   |  |
| Seek  | 2.5 bels (typical)<br>2.6 bels (max)   |   |  |
| Non-recoverable read errors   | 1 per 10 <sup>1</sup>  | <sup>4</sup> bits read  |  |
| Rated workload  | Average annualized workload rating: <55 TB/y<br>The specifications for the product assumes the<br>annualized workload rate limit of 55 TB/year. W<br>degrade and impact reliability as experienced<br>annualized workload rate limit is in units of TB   | e I/O workload does not exceed the average<br>Vorkloads exceeding the annualized rate may<br>by the particular application. The average |  |
| Warranty  | To determine the warranty for a specific drive, use a web browser to access the following we page: www.seagate.com/support/warranty-and-replacements/ From this page, click on "Is my Drive under Warranty". Users will be asked to provide the driv serial number, model number (or part number) and country of purchase. The system will display the warranty information for the drive. |   |  |
| Load/unload cycles  | 600,000 at 25°C, 50% rel. humidity   |   |  |
| Supports hotplug operation per the<br>Serial ATA Revision 3.2 specification | Yes  |   |  |

<sup>\*</sup> All specifications above are based on native configurations.

Note

If the drive is powered-off before issuing flush cache command, in some instances, the end user data in the DRAM cache might not be committed to the disk.

<sup>\*\*</sup> One GB equals one billion bytes and 1TB equals one trillion bytes when referring to hard drive capacity. Accessible capacity may vary depending on operating environment and formatting.

<sup>\*\*\*</sup> During periods of drive idle, some offline activity may occur according to the S.M.A.R.T. specification, which may increase acoustic and power to operational levels.

<sup>†</sup> Seagate does not recommend operating at sustained case temperatures above 60°C. Operating at higher temperatures will reduce useful life of the product.

Table 2 Drive specifications summary for 4TB, 3TB & 2TB model

| able 2 Drive specifications summary for 4TB                    | 3, 3TB & 2TB model                               |  |               |
|--|--|--|---------------|
| Drive Specification*   | ST4000DM004                                      | ST3000DM007  | ST2000DM005   |
| Formatted capacity (512 bytes/sector)**                        | 4000GB (4TB)                                     | 3000GB (3TB)   | 2000GB (2TB)  |
| Guaranteed sectors   | 7,814,037,168                                    | 5,860,533,168  | 3,907,029,168 |
| Heads  | 4  | 4/3  | 3/2           |
| Disks  |  | 2  | 2/1           |
| Bytes per sector<br>(4K physical emulated at 512-byte sectors) |  | 4096   |               |
| Default sectors per track                                      |  | 63   |               |
| Default read/write heads                                       |  | 16   |               |
| Default cylinders  |  | 16,383   |               |
| Recording density (max)  |  | 2294 kB/in   |               |
| Track density (avg)  |  | 540 ktracks/in   |               |
| Areal density (avg)  |  | 1203 Gb/in <sup>2</sup>  |               |
| SATA interface transfer rate                                   |  | 600 MB/s   |               |
| Maximum data transfer rate                                     | 190 MB/s   | 185 MB/s   | 190 MB/s      |
| ATA data-transfer modes supported                              |  | PIO modes: 0 to 4<br>Multiword DMA modes: 0 to 2<br>Ultra DMA modes 0 to 6                 |               |
| Cache buffer   |  | 256MB  |               |
| Height (max)   |  | 20.20mm / 0.795 in   |               |
| Width (max)  |  | 101.6mm (± 0.25) / 4.0 in (± 0.010)  |               |
| Length (max)   |  | 146.99mm / 5.787 in  |               |
| Weight (typical)   | 490g / 1.08 lb                                   |  |               |
| Average latency  | 6.0 ms   |  |               |
| Power-on to ready (typ)  | 10.0s  |  |               |
| Standby to ready (typ)   |  | 10.0s  |               |
| Startup current (typical) 12V                                  |  | 2.0A   |               |
| Voltage tolerance (including noise)                            | 5V ±5%<br>12V ±10%                               |  |               |
| Non-Operating (Ambient °C)                                     |  | -40° to 70°  |               |
| Operating ambient temperature (min °C)                         |  | 0°   |               |
| Operating temperature (drive case max °C)                      |  | 60° <sup>†</sup>   |               |
| Temperature gradient   | :  | 20°C per hour max (operating)<br>30°C per hour max (non-operating)                         |               |
| Relative humidity  |  | 5% to 90% (operating)<br>5% to 95% (non-operating)   |               |
| Relative humidity gradient (max)                               | 30% per hour                                     |  |               |
| Wet bulb temperature (max)                                     | 30°C max (operating)<br>40°C max (non-operating) |  |               |
| Altitude, operating  | −304m to 3048m<br>(−1000 ft to 10,000 ft)        |  |               |
| Altitude, non-operating<br>(below mean sea level, max)         | −304m to12,192m<br>(−1000 ft to 40,000+ ft)      |  |               |
| Operational shock (max)  |  | 80 Gs (read) / 70 Gs (write) at 2ms  |               |
| Non-operational shock (max)                                    | 300 Gs at 2ms 350 Gs at 2                        |  | 350 Gs at 2ms |
| Vibration, operating   | 10Hz   | t to 22Hz: 0.25 Gs, Limited displacen<br>22Hz to 350Hz: 0.50 Gs<br>350Hz to 500Hz: 0.25 Gs | nent          |

Table 2 Drive specifications summary for 4TB, 3TB & 2TB model (continued)

| Drive Specification*  | ST4000DM004   | ST3000DM007   | ST2000DM005 |  |
|---|---|---|-------------|--|
| Vibration, non-operating  |   | 5Hz to 22Hz: 3.0 Gs<br>22Hz to 350Hz: 3.0 Gs<br>350Hz to 500Hz: 3.0 Gs  |             |  |
| Drive acoustics, sound power  |   |   |             |  |
| Idle***   |   | 2.6 bels (typical)<br>2.7 bels (max)  |             |  |
| Seek  |   | 2.7 bels (typical)<br>2.8 bels (max)  |             |  |
| Non-recoverable read errors   |   | 1 per 10 <sup>14</sup> bits read  |             |  |
| Rated workload  | The specifications for the pro-<br>annualized workload rate limi<br>degrade and impact reliability  | Average annualized workload rating: <55 TB/year. The specifications for the product assumes the I/O workload does not exceed the average annualized workload rate limit of 55 TB/year. Workloads exceeding the annualized rate may degrade and impact reliability as experienced by the particular application. The average annualized workload rate limit is in units of TB per calendar year. |             |  |
| Warranty  | To determine the warranty for a specific drive, use a web browser to access the following web page: <a href="https://www.seagate.com/support/warranty-and-replacements/">www.seagate.com/support/warranty-and-replacements/</a> From this page, click on "Is my Drive under Warranty". Users will be asked to provide the drive serial number, model number (or part number) and country of purchase. The system will display the warranty information for the drive. |   |             |  |
| Load/unload cycles  | 600,000 at 25°C, 50% rel. humidity  |   |             |  |
| Supports hotplug operation per the<br>Serial ATA Revision 3.2 specification | Yes   |   |             |  |

<sup>\*</sup> All specifications above are based on native configurations.

Note

If the drive is powered-off before issuing flush cache command, in some instances, the end user data in the DRAM cache might not be committed to the disk.

<sup>\*\*</sup> One GB equals one billion bytes and 1TB equals one trillion bytes when referring to hard drive capacity. Accessible capacity may vary depending on operating environment and formatting.

<sup>\*\*\*</sup> During periods of drive idle, some offline activity may occur according to the S.M.A.R.T. specification, which may increase acoustic and power to operational levels.

<sup>†</sup> Seagate does not recommend operating at sustained case temperatures above 60°C. Operating at higher temperatures will reduce useful life of the product.

# 2.2 Formatted capacity

| Model | Formatted capacity* | Guaranteed sectors | Bytes per sector |
|-------|---------------------|--------------------|------------------|
| 8TB   | 8000GB              | 15,628,053,168     |                  |
| 6ТВ   | 6000GB              | 11,721,045,168     |                  |
| 4TB   | 4000GB              | 7,814,037,168      | 4096             |
| 3ТВ   | 3000GB              | 5,860,533,168      |                  |
| 2TB   | 2000GB              | 3,907,029,168      |                  |

<sup>\*</sup>One GB equals one billion bytes and 1TB equals one trillion bytes when referring to hard drive capacity. Accessible capacity may vary depending on operating environment and formatting.

#### 2.2.1 LBA mode

When addressing these drives in LBA mode, all blocks (sectors) are consecutively numbered from 0 to n-1, where n is the number of quaranteed sectors as defined above.

See **Section 4.3.1, "Identify Device command"** (words 60-61 and 100-103) for additional information about 48-bit addressing support of drives with capacities over 137GB.

# 2.3 Default logical geometry

• **Cylinders**: 16,383

Read/write heads: 16

• Sectors per track: 63

#### **LBA** mode

When addressing these drives in LBA mode, all blocks (sectors) are consecutively numbered from 0 to n-1, where n is the number of guaranteed sectors as defined above.

#### 2.4 Recording and interface technology

| Interface                           | SATA      |
|-------------------------------------|-----------|
| Recording technology                | SMR       |
| Recording density (kBPI)            | 2294      |
| Track density (ktracks/inch avg)    | 540       |
| Areal density (Gb/in <sup>2</sup> ) | 1203      |
| Interface transfer rate (MB/s)      | 600       |
| Data transfer rate (MB/s)           | up to 190 |

# 2.5 Physical characteristics

| Maximum height |                               |
|----------------|-------------------------------|
| 8TB & 6TB      | 26.1mm / 1.028 in             |
| 4TB, 3TB & 2TB | 20.20mm / 0.795 in            |
| Maximum width  | 101.6mm / 4.0 in (± 0.010 in) |
| Maximum length | 146.99mm / 5.787 in           |
| Typical weight |                               |
| 8TB            | 630g / 1.389 lb               |
| 6ТВ            | 610g / 1.345 lb               |
| 4TB, 3TB& 2TB  | 490g / 1.08 lb                |
| Cache buffer   | 256MB                         |

# 2.6 Start/stop times

The start/stop times are listed below.

| Standard models                       | ST8000DM004, ST6000DM003<br>(4 and 3-Disk) | ST4000DM004, ST3000DM007<br>(3 and 2-Disk) | ST2000DM005<br>(2 and 1-Disk) |
|---------------------------------------|--|--|-------------------------------|
| Power-on to ready<br>(in seconds)     | 15 (typical)                               | 10 (typical)                               | 10 (typical)                  |
| Standby to ready<br>(in seconds)      | 15 (typical)                               | 10 (typical)                               | 10 (typical)                  |
| Ready to spindle stop<br>(in seconds) | 18 (typical)                               | 12 (typical)                               | 10 (typical)                  |

Time-to-ready may be longer than normal if the drive power is removed without going through normal OS powerdown procedures.

#### 2.7 Power specifications

The drive receives DC power (+5V or +12V) through a native SATA power connector. Refer to Figure 1 on page 19.

#### 2.7.1 Power consumption

Power requirements for the drives are listed in Table 3 and Table 4. Typical power measurements are based on an average of drives tested, under nominal conditions, using 5.0V and 12.0V input voltage at 25°C ambient temperature. These power measurements are done with DIPM enabled.

- Spinup current is measured from the time of power-on to the time that the drive spindle reaches operating speed.
- Read/Write current is measured with the heads on track, based on three 64 sector read or write operations every 100
- The drive supports three idle modes: Performance Idle mode, Active Idle mode and Low Power Idle mode. Refer to **Section 2.7.4** for power-management modes.

Table 3 DC power requirements for 8TB and 6TB models

| Power dissipation | Avg (watts 25° C) | Avg 5V typ amps | Avg 12V typ amps |
|-------------------|-------------------|-----------------|------------------|
| Spinup            | _                 | _               | 2.0              |
| Idle, Low Power   | 3.4               | 0.10            | 0.242            |
| Read/Write        | 5.3               | 0.28            | 0.325            |
| Standby           | 0.25              | 0.04            | 0.004            |
| Sleep             | 0.25              | 0.04            | 0.004            |

Table 4 DC power requirements for 4TB, 3TB and 2TB models

| Power dissipation | Avg (watts 25° C) | Avg 5V typ amps | Avg 12V typ amps |
|-------------------|-------------------|-----------------|------------------|
| Spinup            | _                 | _               | 2.0              |
| Idle, Low Power   | 2.5               | 0.12            | 0.15             |
| Read/Write        | 3.7               | 0.28            | 0.191            |
| Standby           | 0.25              | 0.04            | 0.004            |
| Sleep             | 0.25              | 0.04            | 0.004            |

#### 2.7.2 Conducted noise

Input noise ripple is measured at the host system power supply across an equivalent 80-ohm resistive load on the +12 volt line or an equivalent 15-ohm resistive load on the +5 volt line.

- Using 12-volt power, the drive is expected to operate with a maximum of 120 mV peak-to-peak sine-wave injected noise at up to 10MHz.
- Using 5-volt power, the drive is expected to operate with a maximum of 100 mV peak-to-peak sine-wave injected noise at up to 10MHz.

**Note** Equivalent resistance is calculated by dividing the nominal voltage by the typical RMS read/write current.

## 2.7.3 Voltage tolerance

Voltage tolerance (including noise):

5VDC ±5%12VDC ±10%

## 2.7.4 Power-management modes

The drive provides programmable power management to provide greater energy efficiency. In most systems, users can control power management through the system setup program. The drive features the following power-management modes:

| Power modes       | Heads    | Spindle  | Electronics   |
|-------------------|----------|----------|---------------|
| Active            | Tracking | Rotating | Full Power    |
| Idle, Performance | Tracking | Rotating | Full Power    |
| Idle, Active      | Floating | Rotating | Partial Power |
| Idle, Low Power   | Parked   | Rotating | Partial Power |
| Standby           | Parked   | Stopped  | Low Power     |
| Sleep             | Parked   | Stopped  | Low Power     |

#### Active mode

The drive is in Active mode during the read/write and seek operations.

#### Idle mode

The electronics remain powered, and the drive accepts all commands and returns to Active mode when disk access is necessary.

#### · Standby mode

The drive enters Standby mode immediately when the host sends a Standby Immediate command. If the host has set the standby timer, the drive enters Standby mode automatically after the drive has been inactive for a specifiable length of time. The standby timer delay is established using a Standby or Idle command. In Standby mode, the electronics are in low power mode, the heads are parked and the spindle is at rest. The drive accepts all commands and returns to Active mode when disk access is necessary.

#### Sleep mode

The drive enters Sleep mode after receiving a Sleep command from the host. In Sleep mode, the electronics are in low power mode, the heads are parked and the spindle is at rest. The drive leaves Sleep mode after it receives a Hard Reset or Soft Reset from the host. After receiving a reset, the drive exits Sleep mode and enters Standby mode.

#### • Idle and Standby timers

Each time the drive performs an Active function (read, write or seek), the standby timer is reinitialized and begins counting down from its specified delay times to zero. If the standby timer reaches zero before any drive activity is required, the drive makes a transition to Standby mode. In both Idle and Standby mode, the drive accepts all commands and returns to Active mode when disk access is necessary.

# 2.8 Environmental specifications

This section provides the temperature, humidity, shock, and vibration specifications for BarraCuda drives. Ambient temperature is defined as the temperature of the environment immediately surrounding the drive. Above 1000ft. (305 meters), the maximum temperature is derated linearly by 1°C every 1000 ft. Refer to Section 3.4 on page 20 for base plate measurement location.

# 2.8.1 Ambient Temperature

| Non-operating (Ambient)       | -40° to 70°C (-40° to 158°F) |  |
|-------------------------------|------------------------------|--|
| Operating ambient (min °C)    | 0° (32°F)                    |  |
| Operating (Drive case max °C) | 60° (140°F) <sup>†</sup>     |  |

Seagate does not recommend operating at sustained case temperatures above 60°C.
 Operating at higher temperatures will reduce useful life of the product.

# 2.8.2 Temperature gradient

| Operating     | 20°C per hour (68°F per hour max), without condensation |
|---------------|---|
| Non-operating | 30°C per hour (54°F per hour max)                       |

# 2.8.3 Humidity

#### 2.8.3.1 Relative humidity

| Operating     | 5% to 90% non-condensing (30% per hour max) |  |
|---------------|---|--|
| non-operating | 5% to 95% non-condensing (30% per hour max) |  |

#### 2.8.3.2 Wet bulb temperature

| Operating     | 30°C / 86°F (rated)  |
|---------------|----------------------|
| Non-operating | 40°C / 104°F (rated) |

#### 2.8.4 Altitude

| Operating     | -304m to 3048m (-1000 ft. to 10,000 ft.)    |
|---------------|---|
| Non-operating | -304m to 12,192m (-1000 ft. to 40,000+ ft.) |

#### 2.8.5 Shock

All shock specifications assume that the drive is mounted securely with the input shock applied at the drive mounting screws. Shock may be applied in the X, Y or Z axis.

# 2.8.5.1 Operating shock

These drives comply with the performance levels specified in this document when subjected to a maximum operating shock of 80 Gs (read) / 70 Gs (write) based on half-sine shock pulses of 2ms during read operations. Shocks should not be repeated more than two times per second.

#### 2.8.5.2 Non-operating shock

#### 8TB, 6TB, 4TB & 3TB

The non-operating shock level that the drive can experience without incurring physical damage or degradation in performance when subsequently put into operation is 300 Gs based on a non-repetitive half-sine shock pulse of 2ms duration.

#### **2TB**

The non-operating shock level that the drive can experience without incurring physical damage or degradation in performance when subsequently put into operation is 350 Gs based on a non-repetitive half-sine shock pulse of 2ms duration.

#### 2.8.5.3 Operating vibration

The maximum vibration levels that the drive may experience while meeting the performance standards specified in this document are specified below.

| 10Hz to 22Hz   | 0.25 Gs (Limited displacement) |
|----------------|--------------------------------|
| 22Hz to 350Hz  | 0.50 Gs                        |
| 350Hz to 500Hz | 0.25 Gs                        |

All vibration specifications assume that the drive is mounted securely with the input vibration applied at the drive mounting screws. Vibration may be applied in the X, Y or Z axis. Throughput may vary if improperly mounted.

#### 2.8.6 Non-operating vibration

The maximum non-operating vibration levels that the drive may experience without incurring physical damage or degradation in performance when subsequently put into operation are specified below.

| 5Hz to 22Hz    | 3.0 Gs (Limited displacement) |
|----------------|-------------------------------|
| 22Hz to 350Hz  | 3.0 Gs                        |
| 350Hz to 500Hz | 3.0 Gs                        |

#### 2.9 Acoustics

Drive acoustics are measured as overall A-weighted acoustic sound power levels (no pure tones). All measurements are consistent with ISO document 7779. Sound power measurements are taken under essentially free-field conditions over a reflecting plane. For all tests, the drive is oriented with the cover facing upward.

| Note | For seek mode tests, the drive is placed in seek mode only.<br>The number of seeks per second is defined by the following equation: |
|------|---|
|      | (Number of seeks per second = $0.4$ / (average latency + average access time  |

Table 5 Fluid Dynamic Bearing (FDB) motor acoustics

|                       | Idle*                                | Seek                                 |
|-----------------------|--------------------------------------|--------------------------------------|
| 8TB & 6TB models      | 2.3 bels (typical)<br>2.5 bels (max) | 2.5 bels (typical)<br>2.6 bels (max) |
| 4TB, 3TB & 2TB models | 2.6 bels (typical)<br>2.7 bels (max) | 2.7 bels (typical)<br>2.8 bels (max) |

<sup>\*</sup>During periods of drive idle, some offline activity may occur according to the S.M.A.R.T. specification, which may increase acoustic and power to operational levels.

#### 2.9.1 Test for Prominent Discrete Tones (PDTs)

Seagate follows the ECMA-74 standards for measurement and identification of PDTs. An exception to this process is the use of the absolute threshold of hearing. Seagate uses this threshold curve (originated in ISO 389-7) to discern tone audibility and to compensate for the inaudible components of sound prior to computation of tone ratios according to Annex D of the ECMA-74 standards.

## 2.10 Electromagnetic immunity

When properly installed in a representative host system, the drive operates without errors or degradation in performance when subjected to the radio frequency (RF) environments defined in Table 6.

Table 6 Radio frequency environments

| Test                      | Description   | Performance<br>level | Reference<br>standard |
|---------------------------|---|----------------------|-----------------------|
| Electrostatic discharge   | Contact, HCP, VCP: ± 4 kV; Air: ± 8 kV  | В                    | EN61000-4-2: 95       |
| Radiated RF immunity      | 80MHz to 1,000MHz, 3 V/m,<br>80% AM with 1kHz sine                                  | A                    | EN61000-4-3: 96       |
| Electrical fast transient | ± 1 kV on AC mains, ± 0.5 kV on external I/O  | В                    | EN61000-4-4: 95       |
| Surge immunity            | ± 1 kV differential, ± 2 kV common,<br>AC mains                                     | В                    | EN61000-4-5: 95       |
| Conducted RF immunity     | 150kHz to 80MHz, 3 Vrms, 80% AM with 1kHz sine                                      | Α                    | EN61000-4-6: 97       |
| Voltage dips, interrupts  | 0% open, 5 seconds<br>0% short, 5 seconds<br>40%, 0.10 seconds<br>70%, 0.01 seconds | C<br>C<br>C<br>B     | EN61000-4-11: 94      |

#### 2.11 Warranty

To determine the warranty for a specific drive, use a web browser to access the following web page: <a href="https://www.seagate.com/support/warranty-and-replacements/">www.seagate.com/support/warranty-and-replacements/</a>

From this page, click on "Is my Drive under Warranty". Users will be asked to provide the drive serial number, model number (or part number) and country of purchase. The system will display the warranty information for the drive.

#### 2.11.1 Data loss under power interruption with write cache enabled

Drive preserves its data during all operations except in cases where power to the drive is interrupted during write operations. This could result in either an uncorrected data error being reported, or the entire sector/track becoming unreadable. This can be permanently recovered by rewriting to the same location on the drive. Additionally any data present in the DRAM buffer will not be written to the disk media, additionally, the drive will not be able to return the original data.

In order to prevent this data loss, the host should issue a standby immediate or flush cache command before a controlled power off operation to the drive.

#### **2.11.2 Storage**

Maximum storage periods are 180 days within original unopened Seagate shipping package or 60 days unpackaged within the defined non-operating limits (refer to environmental section in this manual). Storage can be extended to 1 year packaged or unpackaged under optimal environmental conditions (25°C, <40% relative humidity non-condensing, and non-corrosive environment). During any storage period the drive non-operational temperature, humidity, wet bulb, atmospheric conditions, shock, vibration, magnetic and electrical field specifications should be followed.

## 2.12 HDD and SSD Regulatory Compliance and Safety

For the latest regulatory and compliance information see: <a href="www.seagate.com/support/">www.seagate.com/support/</a> scroll down the page and click the Compliance, Safety and Disposal Guide link.

## 2.12.1 Regulatory models

The following regulatory model number represent all features and configurations within the series: Regulatory Model Numbers: SKR004 = 8TB & 6TBSKR002 = 4TB, 3TB & 2TB

#### 2.13 Corrosive environment

Seagate electronic drive components pass accelerated corrosion testing equivalent to 10 years exposure to light industrial environments containing sulfurous gases, chlorine and nitric oxide, classes G and H per ASTM B845. However, this accelerated testing cannot duplicate every potential application environment. Users should use caution exposing any electronic components to uncontrolled chemical pollutants and corrosive chemicals as electronic drive component reliability can be affected by the installation environment. The silver, copper, nickel and gold films used in Seagate products are especially sensitive to the presence of sulfide, chloride, and nitrate contaminants. Sulfur is found to be the most damaging. In addition, electronic components should never be exposed to condensing water on the surface of the printed circuit board assembly (PCBA) or exposed to an ambient relative humidity greater than 95%. Materials used in cabinet fabrication, such as vulcanized rubber, that can outgas corrosive compounds should be minimized or eliminated. The useful life of any electronic equipment may be extended by replacing materials near circuitry with sulfide-free alternatives.

# 3.0 Configuring and Mounting the Drive

This section contains the specifications and instructions for configuring and mounting the drive.

#### 3.1 Handling and static-discharge precautions

After unpacking, and before installation, the drive may be exposed to potential handling and electrostatic discharge (ESD) hazards. Observe the following standard handling and static-discharge precautions:

Caution

- Before handling the drive, put on a grounded wrist strap, or ground oneself frequently by touching the metal chassis of a computer that is plugged into a grounded outlet. Wear a grounded wrist strap throughout the entire installation procedure.
- · Handle the drive by its edges or frame only.
- The drive is extremely fragile—handle it with care. Do not press down on the drive top cover.
- Always rest the drive on a padded, antistatic surface until mounting it in the computer.
- Do not touch the connector pins or the printed circuit board.
- Do not remove the factory-installed labels from the drive or cover them with additional labels. Removal voids the warranty. Some factory-installed labels contain information needed to service the drive. Other labels are used to seal out dirt and contamination.

# 3.2 Configuring the drive

Each drive on the SATA interface connects point-to-point with the SATA host adapter. There is no master/slave relationship because each drive is considered a master in a point-to-point relationship. If two drives are attached on one SATA host adapter, the host operating system views the two devices as if they were both "masters" on two separate ports. Both drives behave as if they are Device 0 (master) devices.

SATA drives are designed for easy installation. It is usually not necessary to set any jumpers on the drive for proper operation; however, if users connect the drive and receive a "drive not detected" error, the SATA-equipped motherboard or host adapter may use a chipset that does not support SATA speed autonegotiation.


#### 3.3 SATA cables and connectors

The SATA interface cable consists of four conductors in two differential pairs, plus three ground connections. The cable size may be 30 to 26 AWG with a maximum length of one meter (39.37 inches). See **Table 7** for connector pin definitions. Either end of the SATA signal cable can be attached to the drive or host.

For direct backplane connection, the drive connectors are inserted directly into the host receptacle. The drive and the host receptacle incorporate features that enable the direct connection to be hot pluggable and blind mateable.

For installations which require cables, users can connect the drive as illustrated in Figure 1.

Figure 1 Attaching SATA cabling

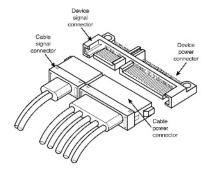

Each cable is keyed to ensure correct orientation. BarraCuda drives support latching SATA connectors.

#### 3.4 Drive mounting

Users can mount the drive in any orientation using four screws in the side-mounting holes or four screws in the bottom-mounting holes. Refer to Figure 2 for drive mounting dimensions. Follow these important mounting precautions when mounting the drive:

- Allow a minimum clearance of 0.030 inches (0.76mm) around the entire perimeter of the drive for cooling.
- Use only 6-32 UNC mounting screws.
- The screws should be inserted no more than 0.140 inch (3.56 mm) into the bottom or side mounting holes.
- Do not overtighten the mounting screws (maximum torque: 8 inch-lbs max).

Figure 2 Mounting dimensions (1 and 2-disk models)


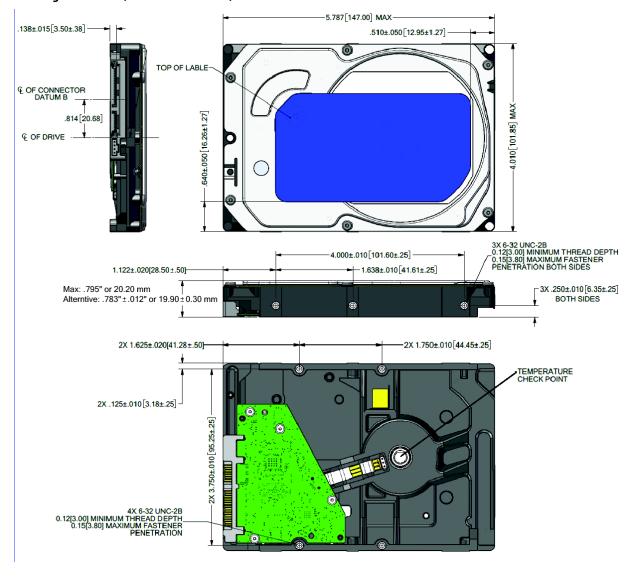


Figure 3 Mounting dimensions (3 and 4-disk models)

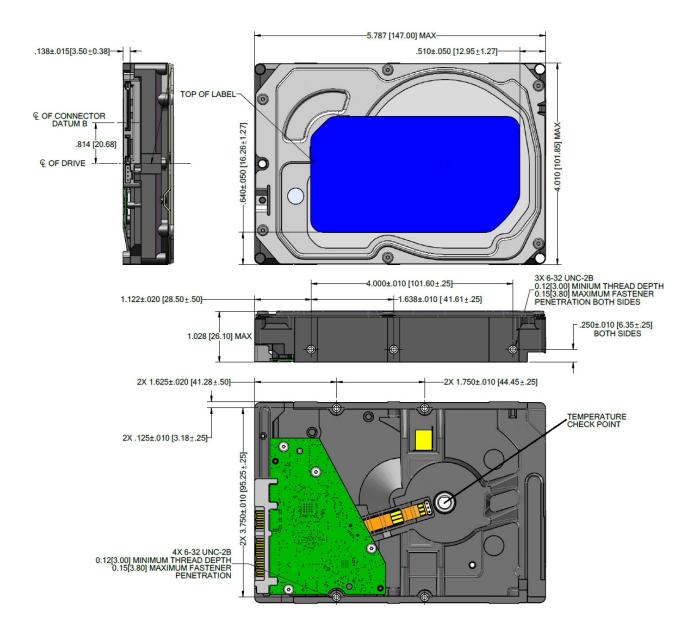

# 4.0 SATA Interface

These drives use the industry-standard Serial ATA (SATA) interface that supports FIS data transfers. It supports ATA programmed input/output (PIO) modes 0 to 4; multiword DMA modes 0 to 2, and Ultra DMA modes 0 to 6.

For detailed information about the SATA interface, refer to the "Serial ATA: High Speed Serialized AT Attachment" specification.

#### 4.1 Hot-Plug compatibility

BarraCuda drives incorporate connectors which enable users to hot plug these drives in accordance with the SATA Revision 3.2 specification. This specification can be downloaded from <a href="https://www.serialata.org">www.serialata.org</a>.

#### 4.2 SATA device plug connector pin definitions

**Table 7** summarizes the signals on the SATA interface and power connectors.

Table 7 SATA connector pin definitions

| Segment    | Pin       | Function                  | Definition                                    |
|------------|-----------|---------------------------|---|
| Signal     | S1        | Ground                    | 2nd mate                                      |
|            | S2        | A+                        | Differential since I as in A france Div.      |
|            | S3        | A-                        | Differential signal pair A from Phy           |
|            | S4        | Ground                    | 2nd mate                                      |
|            | S5        | B-                        | Differential signal pair B from Phy           |
|            | S6        | B+                        | — Differential signal pair 6 from Phy         |
|            | S7        | Ground                    | 2nd mate                                      |
| Key and sp | acing sep | arate signal and power se | gments  |
| Power      | P1        | V33                       | 3.3V power                                    |
|            | P2        | V33                       | 3.3V power                                    |
|            | P3        | V33                       | 3.3V power, pre-charge, 2nd mate              |
|            | P4        | Ground                    | 1st mate                                      |
|            | P5        | Ground                    | 2nd mate                                      |
|            | P6        | Ground                    | 2nd mate                                      |
|            | P7        | V5                        | 5V power, pre-charge, 2nd mate                |
|            | P8        | <b>V</b> 5                | 5V power                                      |
|            | P9        | <b>V</b> 5                | 5V power                                      |
|            | P10       | Ground                    | 2nd mate                                      |
|            | P11       | Ground or LED signal      | If grounded, drive does not use deferred spin |
|            | P12       | Ground                    | 1st mate.                                     |
|            | P13       | V12                       | 12V power, pre-charge, 2nd mate               |
|            | P14       | V12                       | 12V power                                     |
|            | P15       | V12                       | 12V power                                     |

#### **Notes**

- 1. All pins are in a single row, with a 1.27 mm (0.050 in) pitch.
- 2. The comments on the mating sequence apply to the case of backplane blindmate connector only. In this case, the mating sequences are:
  - the ground pins P4 and P12.
  - the pre-charge power pins and the other ground pins.
  - the signal pins and the rest of the power pins.
- 3. There are three power pins for each voltage. One pin from each voltage is used for pre-charge when installed in a blind-mate backplane configuration.
  - All used voltage pins (V<sub>x</sub>) must be terminated.

# 4.3 Supported ATA commands

The following table lists SATA standard commands that the drive supports. For a detailed description of the ATA commands, refer to the Serial ATA International Organization: Serial ATA Revision 3.0 (<a href="https://www.sata-io.org">www.sata-io.org</a>).

See "S.M.A.R.T. commands" on page 31 for details and subcommands used in the S.M.A.R.T. implementation.

Table 8 SATA standard commands

| Command name                     | Command code (in hex)             |
|----------------------------------|-----------------------------------|
| Check Power Mode                 | E5 <sub>H</sub>                   |
| Device Configuration Freeze Lock | B1 <sub>H</sub> /C1 <sub>H</sub>  |
| Device Configuration Identify    | B1 <sub>H</sub> / C2 <sub>H</sub> |
| Device Configuration Restore     | B1 <sub>H</sub> / C0 <sub>H</sub> |
| Device Configuration Set         | B1 <sub>H</sub> / C3 <sub>H</sub> |
| Download Microcode               | 92 <sub>H</sub>                   |
| Execute Device Diagnostics       | 90 <sub>H</sub>                   |
| Flush Cache                      | E7 <sub>H</sub>                   |
| Flush Cache Extended             | EA <sub>H</sub>                   |
| Identify Device                  | EC <sub>H</sub>                   |
| ldle                             | E3 <sub>H</sub>                   |
| Idle Immediate                   | E1 <sub>H</sub>                   |
| Initialize Device Parameters     | 91 <sub>H</sub>                   |
| Read Buffer                      | E4 <sub>H</sub>                   |
| Read DMA                         | C8 <sub>H</sub>                   |
| Read DMA Extended                | 25 <sub>H</sub>                   |
| Read Log Ext                     | 2F <sub>H</sub>                   |
| Read Multiple                    | C4 <sub>H</sub>                   |
| Read Multiple Extended           | 29 <sub>H</sub>                   |
| Read Native Max Address          | F8 <sub>H</sub>                   |
| Read Native Max Address Extended | 27 <sub>H</sub>                   |
| Read Sectors                     | 20 <sub>H</sub>                   |
| Read Sectors Extended            | 24 <sub>H</sub>                   |
| Read Verify Sectors              | 40 <sub>H</sub>                   |
| Read Verify Sectors Extended     | 42 <sub>H</sub>                   |
| Recalibrate                      | 10 <sub>H</sub>                   |
| Security Disable Password        | F6 <sub>H</sub>                   |
| Security Erase Prepare           | F3 <sub>H</sub>                   |
| Security Erase Unit              | F4 <sub>H</sub>                   |
| Security Freeze                  | F5 <sub>H</sub>                   |
| Security Set Password            | F1 <sub>H</sub>                   |
| Security Unlock                  | F2 <sub>H</sub>                   |
| Seek                             | 70 <sub>H</sub>                   |
| Set Features                     | EF <sub>H</sub>                   |
| Set Max Address                  | F9 <sub>H</sub>                   |

 Table 8
 SATA standard commands (continued)

| Command name   | Command code (in hex)   |
|--|---|
| Note: Individual Set Max Address commands are identified by the value placed in the Set Max Features register as defined to the right. | Address: 00H Password: 01H Lock: 02H Unlock: 03H Freeze Lock: 04H |
| Set Max Address Extended   | 37 <sub>H</sub>   |
| Set Multiple Mode  | C6 <sub>H</sub>   |
| Sleep  | E6 <sub>H</sub>   |
| S.M.A.R.T. Disable Operations  | BO <sub>H</sub> / D9 <sub>H</sub>                                 |
| S.M.A.R.T. Enable/Disable Autosave   | $BO_{H}/D2_{H}$   |
| S.M.A.R.T. Enable Operations   | BO <sub>H</sub> / D8 <sub>H</sub>                                 |
| S.M.A.R.T. Execute Offline   | BO <sub>H</sub> / D4 <sub>H</sub>                                 |
| S.M.A.R.T. Read Attribute Thresholds   | $B0_{H}/D1_{H}$   |
| S.M.A.R.T. Read Data   | $B0_{H}/D0_{H}$   |
| S.M.A.R.T. Read Log Sector   | BO <sub>H</sub> / D5 <sub>H</sub>                                 |
| S.M.A.R.T. Return Status   | BO <sub>H</sub> / DA <sub>H</sub>                                 |
| S.M.A.R.T. Save Attribute Values   | BO <sub>H</sub> / D3 <sub>H</sub>                                 |
| S.M.A.R.T. Write Log Sector  | BO <sub>H</sub> / D6 <sub>H</sub>                                 |
| Standby  | E2 <sub>H</sub>   |
| Standby Immediate  | EO <sub>H</sub>   |
| Write Buffer   | E8 <sub>H</sub>   |
| Write DMA  | CA <sub>H</sub>   |
| Write DMA Extended   | 35 <sub>H</sub>   |
| Write DMA FUA Extended   | 3D <sub>H</sub>   |
| Write Log Extended   | 3F <sub>H</sub>   |
| Write Multiple   | C5 <sub>H</sub>   |
| Write Multiple Extended  | 39 <sub>H</sub>   |
| Write Multiple FUA Extended  | CE <sub>H</sub>   |
| Write Sectors  | 30 <sub>H</sub>   |
| Write Sectors Extended   | 34 <sub>H</sub>   |
| Write Uncorrectable  | 45 <sub>H</sub>   |

# 4.3.1 Identify Device command

The Identify Device command (command code EC<sub>H</sub>) transfers information about the drive to the host following power up. The data is organized as a single 512-byte block of data, whose contents are shown in **"Supported ATA commands" on page 23**. All reserved bits or words should be set to zero. Parameters listed with an "x" are drive-specific or vary with the state of the drive.

The following commands contain drive-specific features that may not be included in the SATA specification.

**Table 9** Identify Device commands

| Word  | Description   | Value             |
|-------|---|-------------------|
| 0     | Configuration information:  • Bit 15: 0 = ATA; 1 = ATAPI  • Bit 7: removable media  • Bit 6: removable controller  • Bit 0: reserved  | 0C5A <sub>H</sub> |
| 1     | Number of logical cylinders   | 16,383            |
| 2     | Specific configuration:  37C8h Device requires SET FEATURES subcommand to spin-up after power-up and IDENTIFY DEVICE data is incomplete.  738Ch Device requires SET FEATURES subcommand to spin-up after power-up and IDENTIFY DEVICE data is complete.  8C73h Device does not require SET FEATURES subcommand to spin-up after power-up and IDENTIFY DEVICE data is incomplete.  C837h Device does not require SET FEATURES subcommand to spin-up after power-up and IDENTIFY DEVICE data is complete. | C837 <sub>H</sub> |
| 3     | Number of logical heads   | 16                |
| 4     | Retired   | 0000 <sub>H</sub> |
| 5     | Retired   | 0000 <sub>H</sub> |
| 6     | Number of logical sectors per logical track: 63   | 003F <sub>H</sub> |
| 7–9   | Retired   | 0000 <sub>H</sub> |
| 10–19 | Serial number: (20 ASCII characters, 0000 <sub>H</sub> = none)  | ASCII             |
| 20    | Retired   | 0000 <sub>H</sub> |
| 21    | Retired   | 0000 <sub>H</sub> |
| 22    | Obsolete  | 0000 <sub>H</sub> |
| 23–26 | Firmware revision<br>(8 ASCII character string, padded with blanks to end of string)  | x.xx              |
| 27–46 | Drive model number:<br>(40 ASCII characters, padded with blanks to end of string)   |                   |
| 47    | (Bits 7–0) Maximum sectors per interrupt on Read multiple and Write multiple (16)   | 8010 <sub>H</sub> |
| 48    | Trusted Computing feature set options:  15 Shall be cleared to zero 14 Shall be set to one 13:1 Reserved for the Trusted Computing Group 0 Trusted Computing feature set is supported   | 4000 <sub>H</sub> |
| 49    | Standard Standby timer, IORDY supported and may be disabled   | 2F00 <sub>H</sub> |

 Table 9
 Identify Device commands (continued)

| Capabilities: (see 7.17.7.17)  15 Shall be cleared to zero 14 Shall be set to one 132 Reserved 1 Obsolete 0 Shall be set to one to indicate a vendor specific Standby timer value minimum  51 PIO data-transfer cycle timing mode 0 200 <sub>H</sub> 52 Retired (Obsolete) 0 2000 <sub>H</sub> 15.8 Free-fall Control Sensitivity 7:3 Reserved 2 the fields reported in word 88 are valid 1 the fields reported in word 870:64) are valid 0 Obsolete  54 Number of current logical cylinders (Obsolete) 55 Number of current logical exclors per logical track (Obsolete) 56 Number of current logical sectors per logical track (Obsolete) 57-58 Current capacity in sectors (Obsolete) 58 Xxxxy <sub>H</sub> 59 15 The BLOCK ERASE EXT command is supported 14 The OVERWRITE EXT command is supported 14 The OVERWRITE EXT command is supported 11:19 Reserved 8 Multiple logical sector setting is valid 7:0 Current setting for number of logical sectors that shall be transferred per DRQ data block on READ/WRITE Multiple commands  Fool and number of user-addressable LBA sectors available (see Section 2.2 for related information) *Note: The maximum value allowed in this field is: OFFFFFFFFh (268,435,455 section 2.2 for related information) *Note: The maximum value allowed in this field is: OFFFFFFFFh (268,435,455 sections, 137(SB). Drives with capacities over 137(SB will have OFFFFFFFh in this field and the actual number of user-addressable LBA sectors available (see Sections, 137(SB). Drives with capacities over 137(SB will have OFFFFFFFh in this field and the actual number of user-addressable LBAs specified in words 100-103. This is required for drives that support the 48-bit addressing feature.  62 Obsolete  63 Multiword DMA active and modes supported (see note following this table)  64 Advanced PIO modes supported (modes 3 and 4 supported)  65 Advanced PIO modes supported (modes 3 and 4 supported)  | Word  | Description  | Value                     |
|---|-------|--|---------------------------|
| Section   Sect  | 50    | 15 Shall be cleared to zero 14 Shall be set to one 13:2 Reserved 1 Obsolete  | 4000 <sub>H</sub>         |
| 15:8 Free-fall Control Sensitivity 7:3 Reserved 2 the fields reported in word 88 are valid 1 the fields reported in words (70:64) are valid 0 Obsolete  54 Number of current logical cylinders (Obsolete)  55 Number of current logical heads (Obsolete)  56 Number of current logical sectors per logical track (Obsolete)  57-58 Current capacity in sectors (Obsolete)  58 Number of current logical sectors per logical track (Obsolete)  59 15 The BLOCK ERASE EXT command is supported 14 The OVERWRITE EXT command is supported 12 The Sanitize feature set is supported 11:9 Reserved 11:9 Reserved 11:9 Reserved 11:9 Reserved 11:0 Current setting for number of logical sectors that shall be transferred per DRQ data block on READ/WRITE Multiple commands  Total number of user-addressable LBA sectors available (see Section 2.2 for related information)  Note: The maximum value allowed in this field is: 0FFFFFFFh (268,435,455) sectors, 137GB, Drives with capacities over 137GB will have 0FFFFFFh (268,435,455) sectors, 137GB, Drives with capacities over 137GB will have 0FFFFFFh (268,435,455) sectors, 137GB, Drives with capacities over 137GB will have 0FFFFFFFh (268,435,455) sectors, 137GB, Drives with capacities over 137GB will have 0FFFFFFFh (268,435,455) sectors, 137GB, Drives with capacities over 137GB will have 0FFFFFFFh (268,435,455) sectors, 137GB, Drives with capacities over 137GB will have 0FFFFFFFh (268,435,455) sectors, 137GB, Drives with capacities over 137GB will have 0FFFFFFFh (268,435,455) sectors, 137GB, Drives with capacities over 137GB will have 0FFFFFFFh (268,435,455) sectors, 137GB, Drives with capacities over 137GB will have 0FFFFFFFh (268,435,455) sectors, 137GB, Drives with capacities over 137GB will have 0FFFFFFFh (268,435,455) sectors, 137GB, Drives with capacities over 137GB will have 0FFFFFFFh (268,435,455) sectors, 137GB, Drives with capacities over 137GB will have 0FFFFFFFh (268,435,455) sectors, 137GB, Drives with capacities over 137GB will have 0FFFFFFFh (268,435,455) sectors, 137GB, Drives with capacities | 51    | PIO data-transfer cycle timing mode  | 0200 <sub>H</sub>         |
| 7:3 Reserved 2 the fields reported in word 88 are valid 1 the fields reported in words (70:64) are valid 0 Obsolete  Number of current logical cylinders (Obsolete)  Number of current logical heads (Obsolete)  Number of current logical sectors per logical track (Obsolete)  XXXXH  XXXXH  S7-58 Current capacity in sectors (Obsolete)  XXXXH  15 The BLOCK ERASE EXT command is supported 14 The OVERWRITE EXT command is supported 13 The CRYPTO SCRAMBLE EXT command is supported 11:9 Reserved 8 Multiple logical sector setting is valid 7:0 Current setting for number of logical sectors that shall be transferred per DRQ data block on READ/WRITE Multiple commands  Total number of user-addressable LBA sectors available (see Section 2.2 for related information)  Note: The maximum value allowed in this field is: 0FFFFFFFF (268,435,455) sectors; 137GB). Drives with capacities over 137GB will have 0FFFFFFF in this field and the actual number of user-addressable LBAs specified in words 100-103. This is required for drives that support the 48-bit addressing feature.  Obsolete  Multiword DMA active and modes supported (see note following this table)  Advanced PIO modes supported (modes 3 and 4 supported)  00003 <sub>H</sub>   | 52    | Retired (Obsolete)   | 0200 <sub>H</sub>         |
| Number of current logical heads (Obsolete)  Number of current logical heads (Obsolete)  XXXXH   S7–58  Current capacity in sectors (Obsolete)  XXXXH   S7–58  Current capacity in sectors (Obsolete)  XXXXH  XXXXXH  XXXXXH  XXXXXX      | 53    | 7:3 Reserved 2 the fields reported in word 88 are valid 1 the fields reported in words (70:64) are valid   | 0007 <sub>H</sub>         |
| Number of current logical sectors per logical track (Obsolete)  57–58  Current capacity in sectors (Obsolete)  15 The BLOCK ERASE EXT command is supported 14 The OVERWRITE EXT command is supported 13 The CRYPTO SCRAMBLE EXT command is supported 13 The CRYPTO SCRAMBLE EXT command is supported 11:9 Reserved 8 Multiple logical sector setting is valid 7:0 Current setting for number of logical sectors that shall be transferred per DRQ data block on READ/WRITE Multiple commands  Total number of user-addressable LBA sectors available (see Section 2.2 for related information) *Note: The maximum value allowed in this field is: 0FFFFFFFh (268,435,455 sectors, 137GB). Drives with capacities over 137GB will have 0FFFFFFh in this field and the actual number of user-addressable LBAs specified in words 100-103. This is required for drives that support the 48-bit addressing feature.  62  Obsolete  0000 <sub>H</sub> Multiword DMA active and modes supported (see note following this table)  64  Advanced PIO modes supported (modes 3 and 4 supported)  0003 <sub>H</sub>  | 54    | Number of current logical cylinders (Obsolete)   | xxxx <sub>H</sub>         |
| 57–58 Current capacity in sectors (Obsolete)  15 The BLOCK ERASE EXT command is supported 14 The OVERWRITE EXT command is supported 13 The CRYPTO SCRAMBLE EXT command is supported 11:9 Reserved 8 Multiple logical sector setting is valid 7:0 Current setting for number of logical sectors that shall be transferred per DRQ data block on READ/WRITE Multiple commands  Total number of user-addressable LBA sectors available (see Section 2.2 for related information) *Note: The maximum value allowed in this field is: 0FFFFFFFh in this field and the actual number of user-addressable LBAs specified in words 100-103. This is required for drives that support the 48-bit addressing feature.  62 Obsolete  63 Multiword DMA active and modes supported (see note following this table)  64 Advanced PIO modes supported (modes 3 and 4 supported)  00003 <sub>H</sub>  | 55    | Number of current logical heads (Obsolete)   | xxxx <sub>H</sub>         |
| 15 The BLOCK ERASE EXT command is supported 14 The OVERWRITE EXT command is supported 13 The CRYPTO SCRAMBLE EXT command is supported 12 The Sanitize feature set is supported 11:9 Reserved 8 Multiple logical sector setting is valid 7:0 Current setting for number of logical sectors that shall be transferred per DRQ data block on READ/WRITE Multiple commands  Total number of user-addressable LBA sectors available (see Section 2.2 for related information) *Note: The maximum value allowed in this field is: 0FFFFFFFH (268,435,455 sectors, 137GB). Drives with capacities over 137GB will have 0FFFFFFFh in this field and the actual number of user-addressable LBAs specified in words 100-103. This is required for drives that support the 48-bit addressing feature.  62 Obsolete  Multiword DMA active and modes supported (see note following this table)  Multiword DMA active and modes supported (see note following this table)  0000 <sub>H</sub> Advanced PIO modes supported (modes 3 and 4 supported)  0000 <sub>H</sub>  | 56    | Number of current logical sectors per logical track (Obsolete)   | xxxx <sub>H</sub>         |
| 14 The OVERWRITE EXT command is supported 13 The CRYPTO SCRAMBLE EXT command is supported 12 The Sanitize feature set is supported 11:9 Reserved 8 Multiple logical sector setting is valid 7:0 Current setting for number of logical sectors that shall be transferred per DRQ data block on READ/WRITE Multiple commands  Total number of user-addressable LBA sectors available (see Section 2.2 for related information) *Note: The maximum value allowed in this field is: 0FFFFFFFH (268,435,455 sectors, 137GB). Drives with capacities over 137GB will have 0FFFFFFFH in this field and the actual number of user-addressable LBAs specified in words 100-103. This is required for drives that support the 48-bit addressing feature.  62 Obsolete  63 Multiword DMA active and modes supported (see note following this table)  64 Advanced PIO modes supported (modes 3 and 4 supported)  69 0003 <sub>H</sub>   | 57–58 | Current capacity in sectors (Obsolete)   | xxxx <sub>H</sub>         |
| (see Section 2.2 for related information)  *Note: The maximum value allowed in this field is: 0FFFFFFF (268,435,455 sectors, 137GB). Drives with capacities over 137GB will have 0FFFFFFFh in this field and the actual number of user-addressable LBAs specified in words 100-103. This is required for drives that support the 48-bit addressing feature.  Obsolete  Multiword DMA active and modes supported (see note following this table)  Advanced PIO modes supported (modes 3 and 4 supported)  0003 <sub>H</sub>  | 59    | 14 The OVERWRITE EXT command is supported 13 The CRYPTO SCRAMBLE EXT command is supported 12 The Sanitize feature set is supported 11:9 Reserved 8 Multiple logical sector setting is valid 7:0 Current setting for number of logical sectors that shall be transferred per DRQ          | 5D10 <sub>H</sub>         |
| Multiword DMA active and modes supported (see note following this table)  Advanced PIO modes supported (modes 3 and 4 supported)  Multiword DMA active and modes supported (xx07 <sub>H</sub> 0003 <sub>H</sub>   | 60-61 | (see Section 2.2 for related information)  *Note: The maximum value allowed in this field is: 0FFFFFFF (268,435,455 sectors, 137GB). Drives with capacities over 137GB will have 0FFFFFFFh in this field and the actual number of user-addressable LBAs specified in words 100-103. This | 0FFFFFFh*                 |
| (see note following this table)  Advanced PIO modes supported (modes 3 and 4 supported)  0003 <sub>H</sub>  | 62    | Obsolete   | 0000 <sub>H</sub>         |
|   | 63    | Multiword DMA active and modes supported (see note following this table)   | <i>xx</i> 07 <sub>H</sub> |
|   | 64    | Advanced PIO modes supported (modes 3 and 4 supported)   | 0003 <sub>H</sub>         |
| Minimum multiword DMA transfer cycle time per word (120 nsec)  0078 <sub>H</sub>  | 65    | Minimum multiword DMA transfer cycle time per word (120 nsec)  | 0078 <sub>H</sub>         |
| 66 Recommended multiword DMA transfer cycle time per word (120 nsec) 0078 <sub>H</sub>  | 66    | Recommended multiword DMA transfer cycle time per word (120 nsec)  | 0078 <sub>H</sub>         |
| 67 Minimum PIO cycle time without IORDY flow control (240 nsec) 0078 <sub>H</sub>   | 67    | Minimum PIO cycle time without IORDY flow control (240 nsec)   | 0078 <sub>H</sub>         |
| 68 Minimum PIO cycle time with IORDY flow control (120 nsec) 0078 <sub>H</sub>  | 68    | Minimum PIO cycle time with IORDY flow control (120 nsec)  | 0078 <sub>H</sub>         |

 Table 9
 Identify Device commands (continued)

|         | dentify Device commands (continued)  |   |  |
|---------|--|---|--|
| Word    | Description  | Value   |  |
| 69      | Additional Supported 15 CFast Specification Support 14 Deterministic data in trimmed LBA range(s) is supported 13 Long Physical Sector Alignment Error Reporting Control is supported 12 Obsolete 11 READ BUFFER DMA is supported 10 WRITE BUFFER DMA is supported 9 Obsolete 8 DOWNLOAD MICROCODE DMA is supported 7 Reserved for IEEE 1667 6 0 = Optional ATA device 28-bit commands supported 5 Trimmed LBA range(s) returning zeroed data is supported 4 Device Encrypts All User Data 3 Extended Number of User Addressable Sectors is supported 2 All write cache is non-volatile 1:0 Reserved | 0000 <sub>H</sub>   |  |
| 70–74   | ATA-reserved   | 0000 <sub>H</sub>   |  |
| 75      | Queue depth  | 001F <sub>H</sub>   |  |
| 76      | SATA capabilities  | xxxx <sub>H</sub>   |  |
| 77      | Reserved for future SATA definition  | xxxx <sub>H</sub>   |  |
| 78      | SATA features supported  | xxxx <sub>H</sub>   |  |
| 79      | SATA features enabled  | xxxx <sub>H</sub>   |  |
| 80      | Major version number   | 07E0 <sub>H</sub>   |  |
| 81      | Minor version number   | 006D <sub>H</sub>   |  |
| 82      | Command sets supported   | 346B <sub>H</sub>   |  |
| 83      | Command sets supported   | 7D61 <sub>H</sub>   |  |
| 84      | Command sets support extension (see note following this table)   | 4163 <sub>H</sub>   |  |
| 85      | Command sets enabled   | 34 <i>xx</i> <sub>H</sub>   |  |
| 86      | Command sets enabled   | BC41 <sub>H</sub>   |  |
| 87      | Command sets enable extension  | 4163 <sub>H</sub>   |  |
| 88      | Ultra DMA support and current mode (see note following this table)   | xx7F <sub>H</sub>   |  |
| 89      | Security erase time  | xxxx <sub>H</sub>   |  |
| 90      | Enhanced security erase time   | xxxx <sub>H</sub>   |  |
| 92      | Master password revision code  | FFFE <sub>H</sub>   |  |
| 93      | Hardware reset value   | xxxx <sub>H</sub>   |  |
| 94      | Automatic acoustic management  | D0D0 <sub>H</sub>   |  |
| 95–99   | ATA-reserved   | 0000 <sub>H</sub>   |  |
| 100–103 | Total number of user-addressable LBA sectors available (see <b>Section 2.2</b> for related information). These words are required for drives that support the 48-bit addressing feature. Maximum value: 0000FFFFFFFFFF.  | ST8000DM004 = 15,628,053,168<br>ST6000DM003 = 11,721,045,168<br>ST4000DM004 = 7,814,037,168<br>ST3000DM007 = 5,860,533,168<br>ST2000DM005 = 3,907,029,168 |  |
| 104-105 | ATA-reserved   | 0000 <sub>H</sub>   |  |

 Table 9
 Identify Device commands (continued)

| Word    | Description   | Value   |
|---------|---|---|
| 106     | Physical sector size / logical sector size  | 6003 <sub>H</sub>   |
| 107     | ATA-reserved  | 0000 <sub>H</sub>   |
| 108-111 | The mandatory value of the world wide name (WWN) for the drive.  NOTE: This field is valid if word 84, bit 8 is set to 1 indicating 64-bit WWN support. | Each drive will have a unique value.  |
| 112-118 | ATA-reserved  | 0000 <sub>H</sub>   |
| 119     | Commands and feature sets supported   | 40DC <sub>H</sub>   |
| 120     | Commands and feature sets supported or enabled  | 40DC <sub>H</sub>   |
| 121-127 | ATA-reserved  | 0000 <sub>H</sub>   |
| 128     | Security status   | 0021 <sub>H</sub>   |
| 129–159 | Seagate-reserved  | xxxx <sub>H</sub>   |
| 160–167 | ATA-reserved  | 0000 <sub>H</sub>   |
| 168     | Device Nominal Form Factor  | 0002 <sub>H</sub>   |
| 169-205 | ATA-reserved  | 0000 <sub>H</sub>   |
| 206     | SCT Command Transport   | 30A5 <sub>H</sub>   |
| 207-208 | ATA-reserved  | 0000 <sub>H</sub>   |
| 209     | Alignment of logical blocks within a physical block   | 4000 <sub>H</sub>   |
| 210-216 | ATA-reserved  | 0000 <sub>H</sub>   |
| 217     | Nominal media rotation rate   | 1518 <sub>H</sub>   |
| 218-221 | ATA-reserved  | 0000 <sub>H</sub>   |
| 222     | Transport major version number  | 107F <sub>H</sub>   |
| 223-229 | ATA-reserved  | 0000 <sub>H</sub>   |
| 230-233 | Extended Number of User Addressable Sectors   | ST8000DM004 = 15,628,053,168<br>ST6000DM003 = 11,721,045,168<br>ST4000DM004 = 7,814,037,168<br>ST3000DM007 = 5,860,533,168<br>ST2000DM005 = 3,907,029,168 |
| 234–254 | ATA-reserved  | 0000 <sub>H</sub>   |
| 255     | Integrity word  | xxA5 <sub>H</sub>   |

| Note | Advanced Power Management (APM) and Automatic Acoustic Management (AAM) features are not supported. |
|------|---|

| Note | See the bit descriptions below for words 63, 84, and 88 of the Identify Drive data. |
|------|---|

| Bit   | Word 63  |
|-------|--|
| 0     | Multiword DMA mode 0 is supported.                                   |
| 1     | Multiword DMA mode 1 is supported.                                   |
| 2     | Multiword DMA mode 2 is supported.                                   |
| 8     | Multiword DMA mode 0 is currently active.                            |
| 9     | Multiword DMA mode 1 is currently active.                            |
| 10    | Multiword DMA mode 2 is currently active.                            |
| Bit   | Word 84  |
| 0     | SMART error login is supported.                                      |
| 1     | SMART self-test is supported.  |
| 2     | Media serial number is supported.                                    |
| 3     | Media Card Pass Through Command feature set is supported.            |
| 4     | Streaming feature set is supported.                                  |
| 5     | GPL feature set is supported.  |
| 6     | WRITE DMA FUA EXT and WRITE MULTIPLE FUA EXT commands are supported. |
| 7     | WRITE DMA QUEUED FUA EXT command is supported.                       |
| 8     | 64-bit World Wide Name is supported.                                 |
| 9-10  | Obsolete.  |
| 11-12 | Reserved for TLC.  |
| 13    | IDLE IMMEDIATE command with IUNLOAD feature is supported.            |
| 14    | Shall be set to 1.   |
| 15    | Shall be cleared to 0.   |
| Bit   | Word 88  |
| 0     | Ultra DMA mode 0 is supported.                                       |
| 1     | Ultra DMA mode 1 is supported.                                       |
| 2     | Ultra DMA mode 2 is supported.                                       |
| 3     | Ultra DMA mode 3 is supported.                                       |
| 4     | Ultra DMA mode 4 is supported.                                       |
| 5     | Ultra DMA mode 5 is supported.                                       |
| 6     | Ultra DMA mode 6 is supported.                                       |
| 8     | Ultra DMA mode 0 is currently active.                                |
| 9     | Ultra DMA mode 1 is currently active.                                |
| 10    | Ultra DMA mode 2 is currently active.                                |
| 11    | Ultra DMA mode 3 is currently active.                                |
| 12    | Ultra DMA mode 4 is currently active.                                |
| 13    | Ultra DMA mode 5 is currently active.                                |
| 14    | Ultra DMA mode 6 is currently active.                                |

# 4.3.2 Set Features command

This command controls the implementation of various features that the drive supports. When the drive receives this command, it sets BSY, checks the contents of the Features register, clears BSY and generates an interrupt. If the value in the register does not represent a feature that the drive supports, the command is aborted. Power-on default has the read look-ahead and write caching features enabled. The acceptable values for the Features register are defined as follows:

Table 10 Set Features command

| 02 <sub>H</sub> | Enable write cache (default)  |
|-----------------|---|
| 03 <sub>H</sub> | Set transfer mode (based on value in Sector Count register) Sector Count register values: |
|                 | 00 <sub>H</sub> Set PIO mode to default (PIO mode 2)                                      |
|                 | 01 <sub>H</sub> Set PIO mode to default and disable IORDY (PIO mode 2)                    |
|                 | 08 <sub>H</sub> PIO mode 0  |
|                 | 09 <sub>H</sub> PIO mode 1  |
|                 | 0A <sub>H</sub> PIO mode 2  |
|                 | 0B <sub>H</sub> PIO mode 3  |
|                 | 0C <sub>H</sub> PIO mode 4 (default)  |
|                 | 20 <sub>H</sub> Multiword DMA mode 0  |
|                 | 21 <sub>H</sub> Multiword DMA mode 1  |
|                 | 22 <sub>H</sub> Multiword DMA mode 2  |
|                 | 40 <sub>H</sub> Ultra DMA mode 0  |
|                 | 41 <sub>H</sub> Ultra DMA mode 1  |
|                 | 42 <sub>H</sub> Ultra DMA mode 2  |
|                 | 43 <sub>H</sub> Ultra DMA mode 3  |
|                 | 44 <sub>H</sub> Ultra DMA mode 4  |
|                 | 45 <sub>H</sub> Ultra DMA mode 5  |
|                 | 46 <sub>H</sub> Ultra DMA mode 6  |
| 06 <sub>H</sub> | Enable the PUIS feature set   |
| 07 <sub>H</sub> | PUIS feature set device spin-up   |
| 10 <sub>H</sub> | Enable use of SATA features   |
| 55 <sub>H</sub> | Disable read look-ahead (read cache) feature  |
| 82 <sub>H</sub> | Disable write cache   |
| 86 <sub>H</sub> | Disable the PUIS feature set  |
| 90 <sub>H</sub> | Disable use of SATA features  |
| AA <sub>H</sub> | Enable read look-ahead (read cache) feature (default)                                     |
| F1 <sub>H</sub> | Report full capacity available  |

| Note | At power-on, or after a hardware or software reset, the default values of the features are as indicated above. |
|------|--|
|      | deladit values of the leatures are as maleuted above.  |

#### 4.3.3 S.M.A.R.T. commands

S.M.A.R.T. provides near-term failure prediction for disk drives. When S.M.A.R.T. is enabled, the drive monitors predetermined drive attributes that are susceptible to degradation over time. If self-monitoring determines that a failure is likely, S.M.A.R.T. makes a status report available to the host. Not all failures are predictable. S.M.A.R.T. predictability is limited to the attributes the drive can monitor. For more information on S.M.A.R.T. commands and implementation, see the *Draft ATA-5 Standard*.

SeaTools diagnostic software activates a built-in drive self-test (DST S.M.A.R.T. command for D4<sub>H</sub>) that eliminates unnecessary drive returns. The diagnostic software ships with all new drives and is also available at: <a href="mailto:seagate.com">seatools.seagate.com</a>.

This drive is shipped with S.M.A.R.T. features disabled. Users must have a recent BIOS or software package that supports S.M.A.R.T. to enable this feature. The table below shows the S.M.A.R.T. command codes that the drive uses.

Table 11 S.M.A.R.T. commands

| Code in features register | S.M.A.R.T. command                               |
|---------------------------|--|
| D0 <sub>H</sub>           | S.M.A.R.T. Read Data                             |
| D2 <sub>H</sub>           | S.M.A.R.T. Enable/Disable Attribute Autosave     |
| D3 <sub>H</sub>           | S.M.A.R.T. Save Attribute Values                 |
| D4 <sub>H</sub>           | S.M.A.R.T. Execute Off-line Immediate (runs DST) |
| D5 <sub>H</sub>           | S.M.A.R.T. Read Log Sector                       |
| D6 <sub>H</sub>           | S.M.A.R.T. Write Log Sector                      |
| D8 <sub>H</sub>           | S.M.A.R.T. Enable Operations                     |
| D9 <sub>H</sub>           | S.M.A.R.T. Disable Operations                    |
| DA <sub>H</sub>           | S.M.A.R.T. Return Status                         |

| Note | If an appropriate code is not written to the Features Register, the command is aborted and 0x04 (abort) is written to the Error register. |
|------|---|



# **Seagate Technology LLC**

AMERICAS Seagate Technology LLC 47488 Kato Road, Fremont, California 94538, United States, 510-661-1000

Publication Number: 100805918, Rev. R

March 2023